
FUJITSU

24-wire dot matrix printers


FUJITSU

USER'S MANUAL

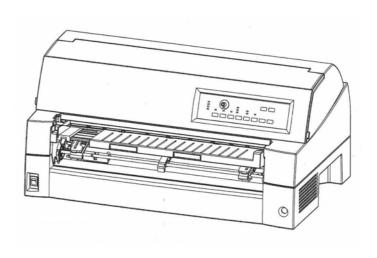



FUJITSU DL7400 DOT MATRIX PRINTER USER'S MANUAL

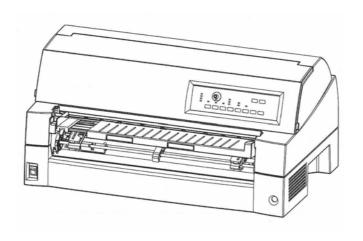

IMPORTANT NOTE TO USERS

READ THE ENTIRE MANUAL CAREFULLY BEFORE USING THIS PRODUCT. INCORRECT USE OF THE PRODUCT MAY RESULT IN INJURY OR DAMAGE TO USERS, BYSTANDERS OR PROPERTY.

While FUJITSU ISOTEC has sought to ensure the accuracy of all information in this manual, FUJITSU ISOTEC assumes no liability to any party for any damage caused by any error or omission contained in this manual, its updates or supplements, whether such errors or omissions result from negligence, accident, or any other cause. In addition, FUJITSU ISOTEC assumes no liability with respect to the application or use of any product or system in accordance with descriptions or instructions contained herein; including any liability for incidental or consequential damages arising therefrom. FUJITSU ISOTEC DISCLAIMS ALL WARRANTIES REGARDING THE INFORMATION CONTAINED HEREIN, WHETHER EXPRESSED, IMPLIED, OR STATUTORY.

FUJITSU ISOTEC reserves the right to make changes to any products described herein without further notice and without obligation.

Using This Product in High-risk Situations

This product is designed and manufactured for use in standard applications such as office work, personal devices, household appliances, and general industrial use. This product is not intended for special uses (nuclear-reactor control in atomic energy facilities, aeronautic and space systems, air traffic control, operation control in mass transit systems, medical devices for life support, or missile firing controls in weapons facilities) where particularly high reliability requirements exist, where the pertinent levels of safety are not guaranteed, or where a failure or operational error could threaten a life or cause a physical injury (hereafter referred to as "high-risk" use).

Customers considering the use of this product for high-risk applications must have safety-assurance measures in place beforehand. Moreover, they are requested to consult our sales representative before embarking on such specialized use.

Federal Communications Commission Radio Frequency Interference Statement for United States Users

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15B of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measure:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTES

- Testing of this equipment was performed on model number M33324A.
- 2. The use of a nonshielded interface cable with the referenced device is prohibited. The length of the parallel interface cable must be 3 meters (10 feet) or less. The length of the optional serial interface cable must be 15 meters (50 feet) or less.
- 3. The length of the power cord must be 3 meters (9.8 feet) or less.

User's Manual

Notice for Canadian Users

This class B digital apparatus (M33324A) meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil (M33324A) numérique de la Classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Notice for German Users

Bescheinigung des Herstellers/Importeurs

Hiermit wird bescheinigt, daß der/die/das

M33324B

in Übereinstimmung mit den Bestimmungen der 89/336/EEC und 73/23/EEC ist.

Der Deutschen Bundesport wurde das inverkehrbringen dieses Gerätes angezeigt und die Berechtigung zur Überprüfung der Serie auf Einhaltung der Bestimmungen eingeräumt.

Maschinenlärminformations-Verordnung 3. GSGV, der höchste Schalldruckpegel beträgt 70 dB (A) oder weniger gemäß EN ISO 7779

Importer / Distributor in EU: Fujitsu Europe Ltd., Hayes Park Central, Hayes End Road, Hayes, Middlesex UB4 8FE, U.K.

ii User's Manual



Energy Saving

As an ENERGY STAR® Partner, FUJITSU ISOTEC LIMITED has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

The International ENERGY STAR® Office Equipment Program is an international program that promotes energy saving through the use of computers and other office equipments. The program backs the development and dissemination of products with functions that effectively reduce energy consumption. It is an open system in which business proprietors can participate voluntarily. The targeted products are office equipment such as computers, displays, printers, facsimiles, and copiers. Their standards and logos are uniform among participating nations.

CE Declaration

This product sold in Europe conforms to the standard in accordance with EC Directives.

User's Manual iii

The contents of this manual may be revised without prior notice and without obligation to incorporate changes and improvements into units already shipped.

Every effort has been made to ensure that the information included here is complete and accurate at the time of publication; however, Fujitsu Isotec Limited cannot be held responsible for errors and omissions.

Printer model specifications differ with the power supply input voltage (M33324A; 100-120 or M33324B; 220-240 VAC).

C147-E051-01EN December 2006

Copyright © 2006 FUJITSU ISOTEC LIMITED

Printed in Japan. All rights reserved. No part of this manual may be reproduced or translated, stored in a database or retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Fujitsu Isotec Limited.

TRADEMARK ACKNOWLEDGEMENT

FUJITSU is a registered trademark and Fujitsu Creative Faces is a trademark of Fujitsu Limited. Centronics is a trademark of Centronics Data Computer Coporation. IBM PC and IBM Proprinter XL24E are trademarks of International Business Machines Corporation. ESC/P2 is a trademark of Seiko Epson Corporation. Microsoft is a registered trademark and MS-DOS and Windows are trademarks of Microsoft Corporation. Nimbus Sans is a registered trademark of URW Unternehmensberatung Karow Rubow Weber GmbH, Hamburg.

Other product names mentioned in this manual may also be trademarks of their respective companies.

iv User's Manual

ABOUT THIS MANUAL

Thank you for buying the Fujitsu DL7400 dot matrix printer. You can expect years of reliable service with very little maintenance. This manual explains how to use your printer to full advantage. It is written for both new and experienced printer users.

This manual describes how to install, set up, and use your printer and printer options. It also explains how to keep the printer in good working condition and what to do should something go wrong. Detailed procedures are provided for first-time users. Experienced users can skip some of the details, using the table of contents and chapter introductions to locate information.

This manual has several appendixes, a glossary, and an index. Appendix A lists supplies and additional documentation and information available from your dealer or authorized Fujitsu representative. Fujitsu offices are listed at the end of the manual.

PRINTER MODELS AND OPTIONS

This manual covers model DL7400, a 136-column printer. Each model has a 100-120 (M33324A) VAC or 220-240 (M33324B) VAC power supply. A LAN card, a user add-on option, can be installed only on printer models with the Centronics parallel+USB interfaces. You must specify these when purchasing the printer.

Other options include a cut sheet feeder can be added by yourself after purchasing the printer.

```
DL7400
    Basic specifications
        Print line at 10 cpi: 136 columns (DL7400)
   -Interface: Centronics parallel + RS-232C
              Centronics parallel + USB + LAN (LAN:user option)
   -Alternative specification
        Power supply:
                         100-120 VAC (M33324A)
                         220-240 VAC (M33324B)
    User add-on option
        LAN card
        Cut sheet feeder
        Tractor unit
        Large Paper Table
        Large Stacker
    cpi: characters per inch
```

User's Manual v

ORGANIZATION

This manual is organized as follows:

Quick Reference summarizes everyday printer operations. After you become familiar with the printer, use this section as a memory aid.

Chapter 1, Introduction, introduces the printer and identifies key features and options that enhance the printer's capabilities.

Chapter 2, Setting Up, gives step-by-step procedures for setting up the printer for immediate use and identifies the main parts of the printer. If this is your first printer, you should read the entire chapter before attempting to use the printer.

Chapter 3, Paper Handling, explains how to load and use paper with your printer.

Chapter 4, Printing, covers basic printing operations. This chapter describes everyday operations from the printer's control panel, such as loading paper and selecting print features, in detail. After you become more familiar with the printer, use **Quick Reference** at the beginning of the manual to refresh your memory as needed.

Chapter 5, Using Setup Mode, describes how to change the printer's optional settings, such as print features, hardware options, and top-ofform. Most settings only affect print features such as the typestyle and page format. Note that certain settings directly affect hardware and software compatibility. Refer to this chapter as indicated in Chapter 2 or as required.

Chapter 6, Maintenance, explains basic maintenance procedures for this printer.

Chapter 7, Trouble-Shooting, describes problem-solving techniques. Before you contact your dealer for help, check the list of problems and solutions provided in this chapter.

Chapter 8, Installing Options, describes the options available for the printer and explains how to install them.

At the end of this manual, you will find several appendixes, a glossary, and an index. Appendix A gives order numbers for printer supplies, options, and publications. Other appendixes provide additional technical information about the printer.

vi User's Manual

CONVENTIONS

Special information, such as warnings, cautions, and notes, are indicated as follows:

WARNING

A WARNING indicates that personal injury may result if you do not follow a procedure correctly.

CAUTION

A CAUTION indicates that damage to the printer may result if you do not follow a procedure correctly.

NOTE

A NOTE provides "how-to" tips or suggestions to help you perform a procedure correctly. NOTEs are particularly useful for first-time users.

For Experienced Users:

If you are familiar with this printer or with dot matrix printers in general, this information will help you use the manual effectively.

User's Manual vii

Warning symbols

Various graphic symbols are used in this manual. They serve as signs to help users of this product use the product safely and correctly as well as prevent damage and personal injury to the users or bystanders. The following tables show and explain each symbol. Be sure that you understand the meaning of each symbol before reading the manual.

⚠ WARNING	⚠ CAUTION	
A WARNING indicates that death or serious personal injury may result if you do not follow a procedure correctly.	A CAUTION indicates that personal injury or property damage may result if you do not follow a procedure correctly.	

Examples and explanations of graphic symbols			
A	\triangle indicates a warning or caution item. By itself, the image in this symbol suggests the meaning of the warning or caution (the example on the left is a caution of possible electric shock).		
	○ indicates a prohibited action. The image in or beside this symbol expresses the prohibited action (the example on the left indicates that disassembly is prohibited).		
	• indicates a direction that must be observed. The image in this symbol shows the direction (the example on the left shows the direction in which a power plug is disconnected from an outlet).		
Caution: Hot	This symbol and accompanying statement indicate a risk of injury from a hot object.		
Caution: Flammable	This symbol and accompanying statement indicate a risk of fire.		
Do not touch	This symbol and accompanying statement indicate a risk of injury from touching part of the equipment.		
Do not disassemble	This symbol and accompanying statement indicate a risk of injury, such as from electric shock, caused by disassembling the equipment.		
General prohibited action	This symbol and accompanying statement indicate a general prohibited action.		
General caution	This symbol and accompanying statement indicate a general caution.		

viii User's Manual

Notes on Safety

■ WARNING





Do not place a container containing water, such as a vase, potted plant, and drinking glass, or a metal object on or near the printer.

Otherwise, electric shock or fire may result.

Do not place the printer in a humid or dusty area, in an area with explosive fumes, an area with poor ventilation or close to a fire.

Otherwise, electric shock or fire may result.

Use only one of the power cords included with this product, for this product. Do not use any other power cord for this product.

Otherwise, electric shock or fire may result.



Do not use this product in an area exposed to a high level of moisture, such as a bathroom and shower room.

Otherwise, electric shock or fire may result.

User's Manual ix

⚠ WARNING



When mounting or removing an optional device or component, turn off the power to the printer and personal computer and disconnect their power plugs from the outlets before performing the work.

Otherwise, electric shock may result.

Connect only Fujitsu-recommended optional devices and components.

Otherwise, electric shock, fire, or failure may result.





Do not block openings in the printer (e.g., ventilation openings).

If ventilation openings are blocked, heat accumulates inside the printer, possibly resulting in a fire.

Do not place a heavy object on the printer. Also, do not subject the printer to shocks.

Otherwise, the printer may become unbalanced, causing it to fall, and possibly resulting in personal injury.

Do not place the printer in an area exposed to strong vibration or an unstable area such as on a slope.

Otherwise, the printer may fall or topple, possibly resulting in personal injury.

Do not leave the printer in an area exposed to direct sunlight for a long time, such as inside a car under the sun or any other area subjected to high temperatures.

Otherwise, the printer surface heats up, possibly melting covers or resulting in other deformities, or the inside of the printer may become extremely hot, possibly resulting in fire.



Before moving the printer, be sure to disconnect the power plug from the outlet and disconnect all connected cables from the printer.

Otherwise, the power cord may be damaged, possibly resulting in electric shock or fire, or the printer may fall or topple, possibly resulting in personal injury.

Before connecting or disconnecting a printer cable, be sure to turn off the power to the printer and personal computer.

Performing that and related work without the power turned off may result in a personal computer or printer failure.

x User's Manual

Notes about the printer in operation





If the printer is making a strange noise, which indicates a problem, discontinue printer operation. Request your printer dealer to fix the problem.

Continued operation of the printer without repairs may result in electric shock or fire.

Do not use a power source whose voltage is other than that indicated. Also, an excessive number of plugged-in power cords must not be connected to a single outlet.

Otherwise, electric shock or fire may result.

Do not spill any liquid, such as water, on the printer.

Otherwise, electric shock or fire may result.

Do not damage or modify the power cord.

The power cord may be damaged by placing a heavy object on it, stretching it excessively, forcibly bending it, twisting it, or heating it, and this may result in electric shock or fire.

Do not use the power cord if it or the power plug is damaged or the plug does not fit securely in the outlet receptacle.

Using the power cord in that condition may result in electric shock or fire.

Do not insert the power cord into an outlet or turn on the power to the printer when any of its covers has been removed.

Otherwise, electric shock or fire may result.

Prevent foreign objects, such as metal shards and inflammable materials, from being inserted or dropped into any openings in the printer (e.g., ventilation openings).

Otherwise, electric shock or fire may result.

Do not disconnect the power plug from the outlet while the power to the printer is turned on

Otherwise, the plug becomes deformed, possibly resulting in fire.



Do not remove the main printer cover or the cover for the cable connectors except as necessary. To check and repair internal components, request your printer dealer to do so.

Some internal components use high voltage, and touching them may result in electric shock.

Do not modify the printer by yourself.

Otherwise, electric shock or fire may result.



Do not connect or disconnect the power plug with wet hands.

Otherwise, electric shock may result.

User's Manual xi





If excessive heat, smoke, a strange odor, or a strange noise is coming the printer or any other abnormality is observed, immediately turn off the power to the printer by using the power switch, and be sure to disconnect the power plug from the outlet.

Then, after verifying the end of the abnormality (e.g., no more smoke is coming from the printer), request your printer dealer to make repairs. Do not repair the printer by yourself as doing so is dangerous.

Continued use of the printer when it is operating abnormally may result in electric shock or fire.

If a foreign object (e.g., water or other liquid, metal shard) has entered the printer, immediately turn off the power to the printer by using the power switch, and disconnect the power plug from the outlet. Then, contact your printer dealer.

Continued use of the printer in that condition may result in electric shock or fire. Customers who use the printer near children should take especial care regarding this point.

If the printer is dropped or a cover is damaged, turn off the power to the printer by using the power switch, and disconnect the power plug from the outlet. Then, contact your printer dealer.

Continued use of printer in that condition may result in electric shock or fire.

Before performing cleaning, maintenance, or troubleshooting work on the printer, switch off the power switch, and be sure to disconnect the power plug from the outlet.

Performing that work on the printer without the power turned off may result in burns or electric shock.



Dust accumulates on or near the metal parts of the power plug, so wipe away that dust with a dry cloth.

Continued use of printer in that condition may result in fire.



Do not drop or strike the printer, such as by hitting it against something.

Otherwise, a failure may result.

xii User's Manual





Insert the power plug completely into an outlet so that it is securely connected.

Otherwise, electric shock or fire may result.

Exercise caution to keep loose clothing, hair, neckties, etc. away from paper feed- or ejection openings, and tractors while the printer is operating.

Otherwise, personal injury may result.



When disconnecting the power plug from the outlet, pull it out while grasping the plug, not the cord.

If you pull it out while grasping the cord, the insulation may be damaged or the cable core may be exposed or damaged, possibly resulting in electric shock or fire.

Do not cover or wrap the printer with a cloth or anything else while it is operating.

Otherwise, heat accumulates, possibly resulting in fire.

Do not use the power cord with it bunched together.

Otherwise, heat accumulates, possibly resulting in fire.



If the printer is not to be used for a long time, disconnect the power plug from the outlet for safety reasons.

Otherwise, electric shock or fire may result.

If a lightning storm is in nearby, disconnect the power plug from the outlet.

Leaving the plug connected to the outlet may result in damage to the printer or other property damage.



The print head and internal frames become extremely hot during printer operation and remain so immediately afterwards. Do not touch these parts until sufficient time has passed to allow them to cool.

Otherwise, burns or personal injury may result.

User's Manual xiii

⚠ CAUTION



Do not touch the paper feed- or ejection openings while the printer is operating.

Otherwise, personal injury may be result.

Do not touch the printer cable connectors or the metal part of the print head.

Otherwise, personal injury or a printer failure may result.

Do not touch the print head while it is moving.

Otherwise, burns or personal injury may result.



Note that continuous forms that are fed in the reverse direction continuously may come off the paper feed tractors.

Operate the printer with the paper thickness lever set to the appropriate paper thickness.

Use only an original ribbon cassette that is specified as suitable by Fujitsu.

Textile fibers accumulate on components inside the printer and parts of the roller, so clean these parts regularly.

Do not turn the ribbon feed knob in the reverse direction.

Otherwise, the ribbon may become jammed and stuck.

If printing is started with a slack ribbon, the ribbon may become tangled or the ribbon feed mechanism may become locked.

The print head is extremely hot immediately after printing. When replacing the ribbon, verify that the print head is sufficiently cool before setting the print head to the ribbon replacement position.

xiv User's Manual

TABLE OF CONTENTS

	QUICK REFERENCE	QR-1
CHAPTER 1	INTRODUCTION	1-1
	FEATURES	
	MODELS	
	OPTIONS	
CHAPTER 2	SETTING UP	2-1
	SELECTING A GOOD LOCATION	
	UNPACKING THE PRINTER	
	Checking Options and Supplies	
	ASSEMBLING THE PRINTER	2-5
	Setting the paper table	
	Handling the paper table	2-6
	Installing the Ribbon cartridge	2-8
	Mounting and removing the tractor unit	2-11
	GETTING ACQUAINTED WITH YOUR PRINTER	
	CONNECTING THE POWER CORD	2-15
	TESTING THE PRINTER (OFFLINE)	
	Loading Paper for the Self-Test	2-16
	Printing the Self-Test	2-17
	CONNECTING THE PRINTER TO YOUR	
	COMPUTER	
	Selecting a Parallel Interface Cable	2-21
	Selecting a Serial Interface Cable	2-21
	Selecting a USB Cable	
	Selecting a LAN cable	2-22
	Connecting the Interface Cable	
	SELECTING AN EMULATION	
	PRINTING A SAMPLE PAGE (ONLINE)	
	INSTALLING THE PRINTER DRIVER	2-28
CHAPTER 3		
	SELECTING PAPER	
	OVERVIEW OF PAPER OPERATIONS	
	SELECTING PAPER PATH	
	Paper Paths and Feed Directions	
	ADJUSTING FOR PAPER THICKNESS	
	USING SINGLE SHEETS	
	Loading a Single Sheet of Paper	3-9
	Loading Paper from the Cut Sheet Feeder	0.40
	(Option)	
	Ejecting Single Sheets	
	USING CONTINUOUS FORMS	
	Positioning the Paper Stack	
	Loading Continuous Forms (Front Feed)	
	Loading Continuous Forms (Rear Feed) Unloading Continuous Forms	
	Tearing Off Continuous Forms	
	rearing On Continuous ronns	J-∠U

User's Manual xv

		FEEDING AND POSITIONING PAPER	3-22
		Line Feed/Form Feed	
		Micro Feed	
		Load Position Adjust	
		TIPS ON PAPER HANDLING	
		General Tips	
		Multipart Forms	3-23
		Envelopes	3-23
		Labels	3-23
CHAPTER 4	PRINTING		
		MULTIPART FORMS (HI IMPACT MODE)	4-1
		SELECTING PRINT FEATURES	
		Using Commercial Software	4-3
		Using the Control Panel	4-3
		Selecting MENU1 or MENU2	
		STARTING OR STOPPING PRINTING	
		Starting Printing	
		Stopping Printing	4-6
		Resuming from a Paper-Out	
		Printing the remaining lines on a page	
		Continuing printing after supplying paper	4-7
		Resuming after an Area Over warning	4-/
		REMOVING PRINTED PAGES	
		Removing Single Sheets	
		Removing Continuous Forms CLEARING THE PRINT BUFFER	
		CLEARING THE PRINT BUFFER	4-8
CHAPTER 5	USING SETUF	P MODE	
		HOW TO USE THIS CHAPTER	
		ENTERING SETUP MODE	
		OVERVIEW OF SETUP MODE	
		Setup Mode Example	5-5
		Points to Remember	
		PRINTING A LIST OF SELECTED OPTIONS	
		DECIDING WHICH OPTIONS TO CHANGE	
		MENU1 AND MENU2 ITEMS AND OPTIONS	
		Resetting MENU1 and MENU2	5-27
		1000tting WEITOT and WEITOZ	5-21
		CHANGING HARDWARE OPTIONS	5-27
		CHANGING HARDWARE OPTIONSCHANGING PRINT POSITION ADJUSTMENT	5-27
		CHANGING HARDWARE OPTIONSCHANGING PRINT POSITION ADJUSTMENT OPTIONS	5-27 5-32
		CHANGING HARDWARE OPTIONS CHANGING PRINT POSITION ADJUSTMENT OPTIONS CHANGING CONFIGURATION OPTIONS	5-27 5-32 5-38
		CHANGING HARDWARE OPTIONS	5-27 5-32 5-38 5-49
		CHANGING HARDWARE OPTIONS	5-27 5-32 5-38 5-49 5-50
		CHANGING HARDWARE OPTIONS	5-27 5-32 5-38 5-49 5-50
		CHANGING HARDWARE OPTIONS	5-27 5-32 5-38 5-49 5-50 5-50
		CHANGING HARDWARE OPTIONS	5-27 5-32 5-38 5-49 5-50 5-51 5-51
		CHANGING HARDWARE OPTIONS CHANGING PRINT POSITION ADJUSTMENT OPTIONS CHANGING CONFIGURATION OPTIONS HEAD GAP ADJUSTMENT ITEMS AND OPTIONS EXITING AND SAVING Procedure RESETTING DEFAULTS Resetting Power-On Defaults Resetting Factory Defaults	5-27 5-32 5-38 5-49 5-50 5-51 5-51
		CHANGING HARDWARE OPTIONS CHANGING PRINT POSITION ADJUSTMENT OPTIONS CHANGING CONFIGURATION OPTIONS HEAD GAP ADJUSTMENT ITEMS AND OPTIONS EXITING AND SAVING Procedure RESETTING DEFAULTS Resetting Power-On Defaults Resetting Factory Defaults in MENU1 and MENU2	5-275-325-385-495-505-515-51 25-51
		CHANGING HARDWARE OPTIONS CHANGING PRINT POSITION ADJUSTMENT OPTIONS CHANGING CONFIGURATION OPTIONS HEAD GAP ADJUSTMENT ITEMS AND OPTIONS EXITING AND SAVING Procedure RESETTING DEFAULTS Resetting Power-On Defaults Resetting Factory Defaults in MENU1 and MENU2 USING THE DIAGNOSTIC FUNCTIONS	5-275-325-385-495-505-515-515-51
		CHANGING HARDWARE OPTIONS CHANGING PRINT POSITION ADJUSTMENT OPTIONS CHANGING CONFIGURATION OPTIONS HEAD GAP ADJUSTMENT ITEMS AND OPTIONS EXITING AND SAVING Procedure RESETTING DEFAULTS Resetting Power-On Defaults Resetting Factory Defaults in MENU1 and MENU2 USING THE DIAGNOSTIC FUNCTIONS Printing the Self-Test	5-275-325-385-495-505-515-515-525-52
		CHANGING HARDWARE OPTIONS CHANGING PRINT POSITION ADJUSTMENT OPTIONS CHANGING CONFIGURATION OPTIONS HEAD GAP ADJUSTMENT ITEMS AND OPTIONS EXITING AND SAVING Procedure RESETTING DEFAULTS Resetting Power-On Defaults Resetting Factory Defaults in MENU1 and MENU2 USING THE DIAGNOSTIC FUNCTIONS	5-275-325-385-495-505-515-51 25-525-52

xvi User's Manual

	Procedure	5-54
	Checking Vertical Print Alignment (V-ALMNT)	5-56
	Procedure	
	SETUP MODE REFERENCE	5-58
	DPL24C PLUS ORGANIZATION	5-59
	Differences in IBM Proprinter XL24E Emulation	5-62
	Differences in Epson ESC/P2 Emulation	5-62
	ONLINE SETUP MODE	5-63
CHAPTER 6	MAINTENANCE	6.4
CHAPIER	CLEANING	
	Cleaning and Vacuuming the Printer	
	Cleaning the Platen REPLACING THE RIBBON	6.2
	REPLACING THE RIBBON	
	Opening and closing the control panel	
	Removing the stacker unit	
	Mounting the stacker unit	6-0
	Mounting the Stacker unit	6-9
CHAPTER 7	TROUBLE-SHOOTING	
	SOLVING PROBLEMS	7-1
	Print Quality Problems	7-1
	Paper Handling Problems	7-4
	Operating Problems	7-6
	Printer Failures	
	Alarm display function	7-8
	Responses to alarm occurrences	7-9
	DIAGNOSTIC FUNCTIONS	
	GETTING HELP	7-10
CHAPTER 8	INSTALLING OPTIONS	8-1
OTIAL LEIK O	INSTALLING THE CUT SHEET FEEDER	
	Installing on the front side of the printer	
	Installing on the rear side of the printer	8-4
	Removing the Cut Sheet Feeder	8-7
	INSTALLING THE TRACTOR UNIT	
	INSTALLING THE LARGE STACKER	
	INSTALLING THE LARGE PAPER TABLE	
ADDENIDIY A	CURRUES AND ORTIONS	
APPENDIX A	SUPPLIES AND OPTIONS	
	SUPPLIES	
	OPTIONS	A-1
APPENDIX B	PRINTER AND PAPER SPECIFICATIONS	B-1
	PHYSICAL SPECIFICATIONS	
	FUNCTIONAL SPECIFICATIONS	
	PERFORMANCE SPECIFICATIONS	
	PAPER SPECIFICATIONS	B-6
	Print Area	B-6
	Paper Thickness	B-8

User's Manual xvii

APPENDIX C	COMMAND SETS	. C-1
	FUJITSU DPL24C PLUS	
	Bar Code Printing Control	
	IBM PROPRINTER XL24E EMULATION	. C-22
	EPSON ESC/P2 EMULATION	
APPENDIX D	INTERFACE INFORMATION	D ₋ 1
AI I LIIDIA D	PARALLEL INTERFACE	ו - ט י. 1-1
	Compatible Mode	
	Nibble Mode	
	Data Transmission Timing	
	SERIAL INTERFACE	
	Serial Options	
	Cable Wiring	D-8
	Serial Protocols	
	USB INTERFACE	. D-11
	Cable	
	Specification	. D-11
	LAN INTERFACE	
	Cable	. D-12
APPENDIX E	CHARACTER SETS	E-1
	CHARACTER SETS 1 AND 2 (DPL24C PLUS AND	
	IBM XL24E EMULATION)	E-1
	ITALIC AND GRAPHICS CHARACTER SETS	
	(ESC/P2 EMULATION)	E-2
	NATIONAL CHARACTER SETS (ALL EMULATIONS)	
	EMULATIONS)	E-4
	NATIONAL CHARACTER SETS (DPL24C PLUS	
	AND IBM XL24E EMULATION)	. E-14
	NATIONAL CHARACTER SETS (ESC/P2	
	EMULATION)	. E-16
	NATIONAL CHARACTER SETS AND SUPPORTED	
	RESIDENT FONTS (ALL EMULATIONS)	. E-20
APPENDIX F	RESIDENT FONTS	F-1
INDEX		. IN-1
	ICES Inside back c	


xviii User's Manual

QUICK REFERENCE



Quick Reference is written for experienced users — users who are familiar with how the printer works, but who may need to refresh their memory occasionally. *Only the printer's normal (non-setup) mode is covered.* For details on setup mode, see Chapter 5.

Normal mode operation includes everyday operations, such as paper handling and font selection. The printer comes up in normal mode when turned on. To enter setup mode, press the AUTO GAP and HI IMPACT buttons at the same time while the ONLINE indicator is off (not lit).

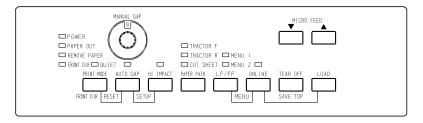

Control panel

The table on the next page lists normal mode operations with online and offline conditions and gives the required user response. Operations are listed by functions.

User's Manual QR-1

Printer Operations (Normal Mode)

✓: Operation can be performed when the printer is in this state.

—: Operation cannot be performed when the printer is in this state.

N/A: Does not apply.

Operation	Online	Offline	Required Response
Enter normal mode	N/A	N/A	Turn printer on. (Press I on the power switch.)
Place printer offline	✓	_	Press ONLINE.
Place printer online		✓	Press ONLINE.
Load paper	✓	✓	Press LOAD.
Line feed (forward)	✓	✓	Press LF/FF within three seconds.
Unload paper to park position (both front and rear-fed continuous forms)	✓	✓	Press LOAD.
Form feed (forward)	✓	✓	Press and hold LF/FF until the operation starts.
Eject single sheets	✓	✓	Press and hold LF/FF until the operation starts.
Tear off forms (continuous forms only)	√	✓	Press TEAR OFF. Tear off forms, then press any button to retract forms.
Micro feed (backward)	✓	✓	Press MICRO▲.
Micro feed (forward)	✓	✓	Press MICRO▼.
Select a paper feed direction		✓	Press FRONT DIR.
Select a print mode	✓	_	Press PRINT MODE.
Set/reset high impact mode	✓	✓	Press HI IMPACT.
Select a paper input source	✓	✓	Press PAPER PATH.
Select a gap mode	✓	✓	Press AUTO GAP.
Save adjusted load positions	✓	✓	Press ONLINE and LOAD.
Select MENU1 or MENU2		✓	Press ONLINE and LF/FF.
Clear print buffer		✓	Press FRONT DIR and AUTO GAP.
Reset power-on defaults	✓	✓	Turn printer off, then on.
Start/stop/resume printing	√	✓	Start: Send print command. Stop/resume: Press ONLINE.
Resume printing after paper	_	✓	Press ONLINE.

QR-2 User's Manual

Printer Operations (Normal Mode) (Cont.)

- ✓: Operation can be performed when the printer is in this state.
- —: Operation cannot be performed when the printer is in this state.

N/A: Does not apply.

Operation	Online	Offline	Required Response
Enter setup mode		✓	Press AUTO GAP and HI IMPACT.
Exit to normal mode Self-test printing	√	√	Start:Turn printer off. Press LF/FF while turning printer on. Pause/resume: Press LOAD. Exit: Press ONLINE.

User's Manual QR-3


QR-4 User's Manual

INTRODUCTION

1

Congratulations on purchasing this printer. This printer is a compact, versatile, flat paper path printer that offers maximum compatibility with today's software packages and personal computers.

The 24-wire print head provides crisp, clear printing for business, office, and home environments. This printer is also easy to install and use.

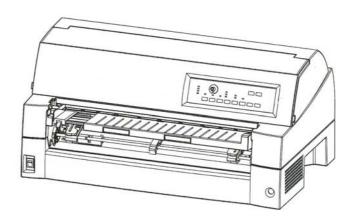

DL7400 dot matrix printer (136 columns)

FEATURES

Key printer features, models and options are listed in the next two sections.

- **Software compatibility**. This printer, which operates primarily with the Fujitsu DPL24C PLUS command set, is compatible with the IBM Proprinter XL24E command set and the Epson ESC/P2 command set.
- Various character sets. As basic character sets, IBM PC character sets 1 and 2 are available for the Fujitsu DPL24C PLUS command set and the IBM Proprinter XL24E emulation, and the italic character set and graphics character sets 1 and 2 are available for the Epson ESC/P2 emulation. As national character sets, a total of 56 or 58 national character sets (depending on the emulation), including IBM PS/2 character sets, are available.
- Multiple fonts. The printer has nineteen resident fonts: Ten bit-map fonts Courier 10, Pica 10, Prestige Elite 12, Boldface PS, OCR-B 10, OCR-A 10, Correspondence, Compressed, Draft, and Highspeed Draft and nine outline fonts Timeless, Nimbus Sans, and Courier, each in upright, italic, and bold.
- **High-speed printing**. At 10 cpi, print speed ranges from 160 cps for letter quality to 505 cps for draft quality.

User's Manual 1-1

- Large print buffer. 128K bytes are available in total for storing input data and downloading fonts. A large input data buffer allows you to send files to the printer and return to work in your application. A large download buffer allows you to use custom fonts.
- **136-column print line**. 136-column printers print in landscape mode using legal- or standard-size computer forms.
- **Simple switching of paper types**. The ability to "park" continuous forms makes it easy to switch between continuous forms and single sheets from the control panel. This switching is possible even for an optional cut sheet feeder and second tractor.
- Dual tractor feeding capability. The tractor unit is removable and can be converted to front-feed or rear-feed.
- Multi-path of paper. The printer has multiple paths to feed paper: For the continuous form front and rear tractor(second tractor is option), For cut sheet loading paper table (front), front csf(option), rear csf(option). Also for cut sheet ejecting front and rear is selectable(front eject paper require removing for next paper loading)
- **Tear-off function**. Available at both the front and the rear of the printer. The tear-off button on the control panel is used.
- Hight copy capability
 - Up to eight sheets for front/rear continuous forms and cut sheets fed from front paper table.
 - Up to five sheets for CSF fed
- Auto paper thickness control. Features as standard equipment.
- Auto interface selection. The printer automatically selects the interface proper to the occasion.
 - (This function can't move at single interface models)
- **Paper skew detection**. The printer detects a skew of paper that is manually fed from the paper table and automatically ejects it without printing.
- Area-over print prevention. The printer senses and memorizes the left and right edges of paper when loading the paper. If receiving data beyond either edge, the printer ignores it to prevent directly printing on the platen.
- **Maintenance-free**. The printer only requires periodic cleaning and changing of the ribbon cartridge.

MODELS

- Power Supply type; 100-120VAC input (M33324A)
 220-240VAC input (M33324B)
- **Interface type**; Centronics parallel + USB interfaces Centronics parallel + RS232C serial interface

1-2 User's Manual

OPTIONS

Printer add-on options are listed below. For details, see Chapter 8.

- **Cut sheet feeder**. The SF940 single-bin feeder is available as an option. Two cut sheet feeders can be installed in front of and behind the printer at the same time. A cut sheet feeder allows single cut sheets and multiple-part cut sheets to be fed automatically.
- **Tractor unit**. A second tractor unit may be bought as an additional option if dual tractor feeding capability is required.
- LAN card. A LAN card is available as a printer add-on option. A user installable function, the LAN card can be installed only on printer models with the Centronics parallel + USB interfaces. For details, see Chapter 8.
- **Large paper table.** The large paper table helps to increase operability when large cut sheets are used.
 - Also, sheets that are output from the front are easier to keep properly organized.
- **Large stacker.** The large stacker accommodates sheets output from the rear. It is used in continuous printing with a cut sheet feeder.

User's Manual 1-3

1-4 User's Manual

SETTING UP

2

Your new printer is easy to install and set up. This chapter tells you how to set up the printer and start printing right away. If this is your first printer, you should read the entire chapter before attempting to use the printer.

In this chapter, you will learn how to:

- Unpack, assemble, and select a good location for the printer
- Identify the printer's major parts
- Connect the power and interface cables
- Test the printer before connecting it to your computer
- Install the printer driver
- Select an emulation and print a sample page using your software

If you have a problem while setting up the printer, review the section Solving Problems in Chapter 7. If the problem persists, contact your dealer.

SELECTING A GOOD LOCATION

This printer is suitable for most business, office, and home environments. To obtain peak performance from the printer, select a location that meets the following guidelines:

- ✓ Place the printer on a sturdy, level surface.
- ✓ Place the printer near a well-grounded AC power outlet.
- ✓ Ensure easy access to the front and rear of the printer by leaving several inches of space around the printer. Do not block the air vents on the front, left, and right sides of the printer.
- ✓ Do not place the printer in direct sunlight or near heaters.
- ✓ Make sure that the room is well-ventilated and free from excessive dust.
- ✓ Do not expose the printer to extremes of temperature and humidity.


User's Manual 2-1

- ✓ Use only the power cord supplied with the printer or recommended by your dealer. Do not use an extension cord.
- ✓ Do not plug the printer into a power outlet that is shared with heavy industrial equipment, such as motors, or appliances, or such as copiers or coffee makers. Such equipment often emits electrical noise or causes power degradation.

UNPACKING THE PRINTER

Unpack the printer as follows:


 Open the carton and remove the printer and its components.
 Make sure that you have all of the items shown below. Note that the power cord supplied depends on the printer model (100-120

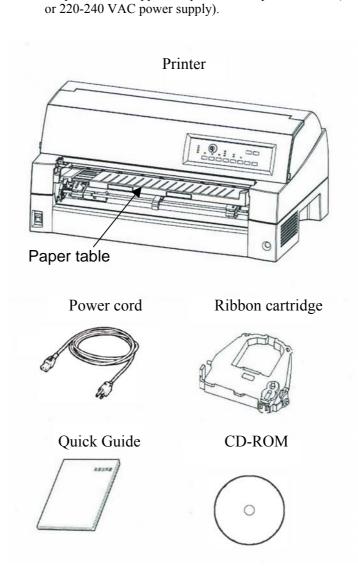

Checking items received

2-2 User's Manual

- 2. Carefully examine each item for damage. Report any problems to your dealer or shipping agent.
- 3. Place the printer where you plan to use it.
- 4. Remove the tapes and cushions securing the printer. Open the front cover and remove the shipping restraint cardboard that holds the print head carriage in place (shown below).

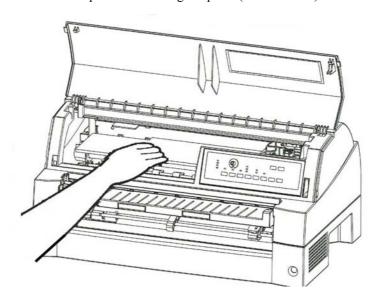

Removing the shipping restraint cardboard

5. Store the original shipping carton and packaging materials for future use. For example, the original packaging is ideal for use when you move or ship your printer to another location.

NOTE

The interface cable is not included with the printer. You must purchase it separately. Connection of the interface cable is described later in this chapter.

User's Manual 2-3

Checking Options and Supplies

The following options and supplies, if ordered, are shipped separately:

- LAN card (option)
- Cut sheet feeder (option)
- Tractor unit (option)
- Large Paper Table (option)
- Large Stacker (option)
- Extra monochrome ribbon cartridges

Make sure that you received all the options you ordered. Installation of options is described in Chapter 8.

Once you are sure you have everything, you are ready to assemble the printer.


2-4 User's Manual

ASSEMBLING THE PRINTER


This section explains how to setting the paper table and ribbon cartridge.

Setting the paper table

Turn the paper table (1) as shown in the table below, then push it (2) and set it (3).

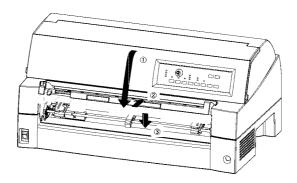

The complete setup conditions are shown below. Make sure that the top end of the paper table is engaged with the printer guide pin and the guide pin on the paper table is inserted into the cover groove.

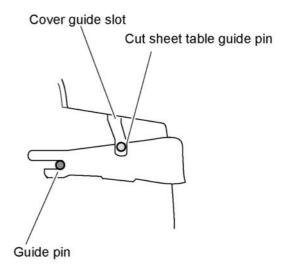

NOTE

Do not apply unreasonable force while you are setting the paper table. It could cause damage. Also, do not leave the paper table in incomplete setting. Running the printer with the paper table left in incomplete conditions could cause a paper jam.


User's Manual 2-5

Handling the paper table

You must open and close the paper table when you feed continuous forms using the front tractor or you attach the cut sheet feeder to the front of the printer.

Normal mode

The following figure shows the paper table in normal mode.

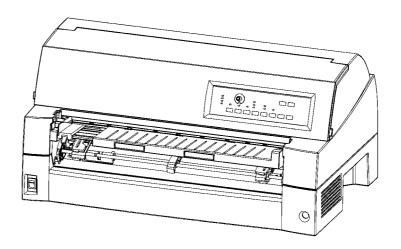


2-6 User's Manual

Open mode in which the front tractor is attached or detached or when continuous forms are fed using the front tractor

When you attach the optional cut sheet feeder to the front of the printer, open the paper table and proceed as follows:


1 Open the paper table.

Slightly raise the front end of the paper table (1), then pull (2) and lift the table (3).

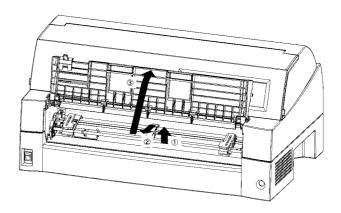

2 Close the paper table.

Lower the paper table as shown in the figure below (1), then push (2) and close (3) the table.

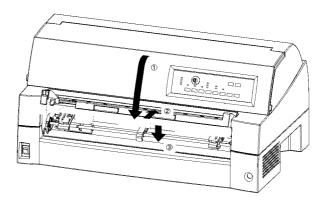

Installing the Ribbon cartridge



CAUTION <HOT>

(HOT)


The print head and metal frame is hot during printing or immediately after printing. Do not touch them until it cools down.

Prepare the printer to install the ribbon cartridge.
 Make sure that the print head protecting cardboard used for transportation has been removed, then turn on the printer power with the top cover closed. Ensure that the print head moves and stops at the ribbon replacement position.

NOTE

If you turn on the printer power with the top cover open, the print head does not move. Turn the printer power with the top cover closed.

- Turn off the printer power.Make sure that the power switch is set to the "O" side.
- 3. Open the front cover of the printer. Slide the print head carriage so that its center is at the position for replacing the ribbon cartridge (indicated by the triangle marking on the front of the upper cover).

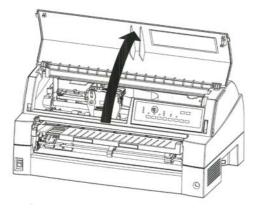

Preparing the printer to install the ribbon cartridge


NOTE

The buzzer may sound if the print head is moved while the power supply is ON.

2-8 User's Manual


4. Remove the ribbon cartridge from its package. Push in the two ribbon release tabs. The tabs snap into the cartridge and the ribbon feed mechanism engages.

Turn the ribbon feed knob clockwise to be sure that it feeds properly.

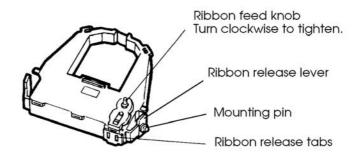

Preparing the ribbon cartridge

5. Locate the two ribbon release levers on either side of the ribbon cartridge. Each ribbon release lever has a mounting pin on the side. Place the mounting pins on the ribbon support bracket of the print head cartridge. Insert the ribbon so that the ribbon falls between the nose of the print head and the print guide.

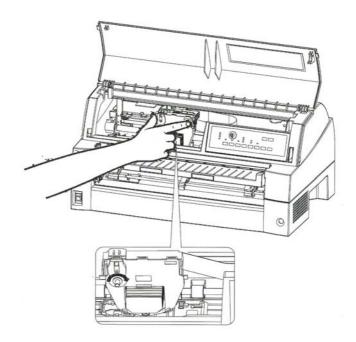

Installing the ribbon cartridge

- 6. Press the ribbon release levers inward until the mounting pins snap into the holes of the ribbon support brackets. Gently pull on the cartridge to be sure that the pins are secure in the holes.
- 7. Turn the ribbon feed knob clockwise to take up any slack in the ribbon.
- 8. Close the front cover.

NOTE

A Fujitsu ribbon cartridge is recommended. Don't use other cartridges. If other cartridges are used, operating problems or a damage of the print head may be caused.

Selecting the Tractor Unit Position

NOTE

This printer uses a detachable tractor that can be used on either the front or back of the printer. You can attach the tractor to either the front or back of the printer according to your installation or operating conditions. The printer is delivered to you with the tractor attached to the front. You can detach it from the front and then attach it to the back if needed.

See "SELECTING PAPER PATH" in Chapter 3.


2-10 User's Manual

Mounting and removing the tractor unit

Tractor unit at the front


[Removing the tractor unit]

Raise the cut sheet table. While pressing the lock levers of the tractor frames located on both sides of the tractor unit, lift out the tractor unit to remove it.

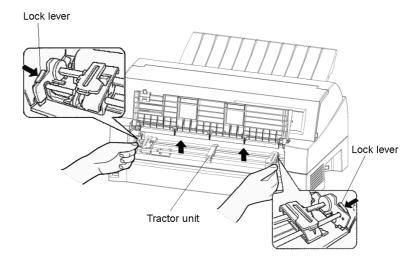


[Mounting the tractor unit]

- 1) Position the U-shaped slots on both sides of the tractor unit over the guide pins of the printer unit. (To set the tractor unit in position, line it up with the groove of the left guide pin. The right guide pin has no groove).
- 2) Push down the shaft at the front of the tractor unit until it locks with an audible click. (Do not press the lock levers when pushing down the shaft.)

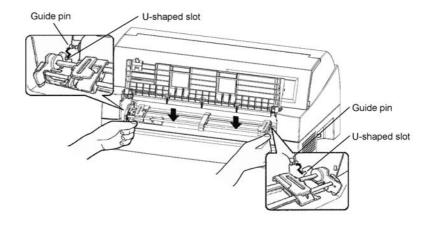


3) Verify that the hooks on both sides of the tractor unit are securely hooked onto guide pin 2 as shown in the following figure.

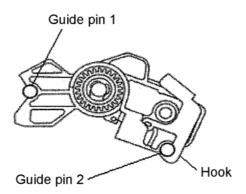

Tractor unit at the rear

[Removing the tractor unit]


While pressing the lock levers of the tractor frames located on both sides of the tractor unit, lift out the tractor unit to remove it.

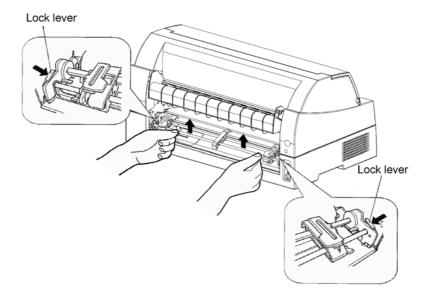


2-12 User's Manual

[Mounting the tractor unit]

- 1) Position the U-shaped slots on both sides of the tractor unit over the guide pins of the printer unit. (To set the tractor unit in position, line it up with the groove of the left guide pin. The right guide pin has no groove).
- 2) Push down the shaft at the front of the tractor unit until it locks with an audible click. (Do not press the lock levers when pushing down the shaft.)

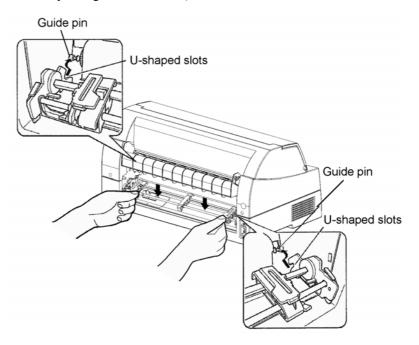


3) Verify that the hooks on both sides of the tractor unit are securely hooked onto guide pin 2 as shown in the following figure.

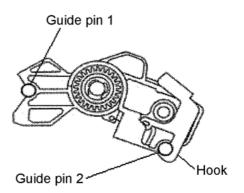


GETTING ACQUAINTED WITH YOUR PRINTER

Now that your printer is assembled, take a moment to become familiar with its major parts.

Looking at the printer from the front right side and rear left side, you can see the parts of the printer shown in the figure below.

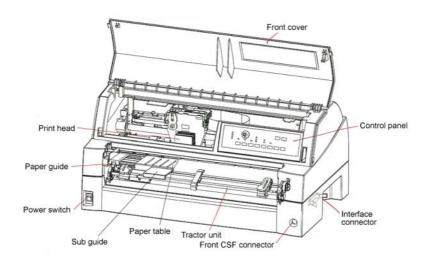

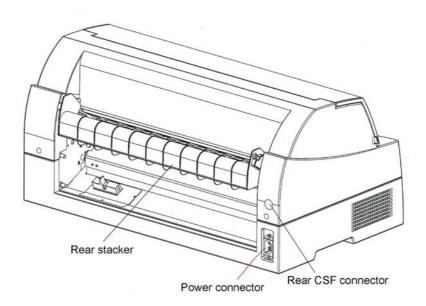

Printer components

The printer control panel has the buttons and indicators used to load and feed paper (see Chapter 3) and select print features (see Chapter 4). The control panel also allows you to change the printer's optional settings (see Chapter 5).

2-14 User's Manual


CONNECTING THE POWER CORD

Before you plug in the printer:

- ✓ Make sure that the printer power is switched off. The side marked "O" on the power switch should be depressed.
- ✓ Make sure that the power outlet is properly grounded.
- ✓ Make sure that you use the power cord shipped with the printer. This cord is designed to minimize radio frequency interference.

To plug in the power cord:

- 1. Plug one end of the power cord into the power connector on the rear of the printer.
- 2. Plug the other end of the power cord into the power outlet.

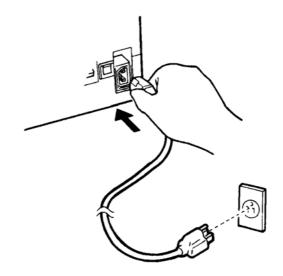

Connecting the power cord

- 3. Make sure that the power cord is securely connected.
- 4. Turn on the power by pressing the side marked "I" on the power switch. The POWER indicator on the printer control panel will light, the print head will move to its home position within a few seconds, and the ONLINE indicator will light (green).

NOTE

If no forms are loaded, the printer beeps and the red PAPER OUT indicator lights and the ONLINE indicator will not light.

TESTING THE PRINTER (OFFLINE)


At this point, load paper and run the printer self-test. The self-test checks printer performance and print quality before you connect the printer to the computer. Use either single sheets or continuous forms (see Chapter 3). This section describes the self-test procedure using single sheets.

Loading Paper for the Self-Test

To print the self-test, use paper wider than 215.9 mm (8.5 inches) and set the left paper guide all the way to the right to avoid clipping the test pattern. Standard letter or A4 size paper can be used lengthwise (portrait mode). Pull the subguide out as required to accommodate the paper size.

Before loading paper, make sure that the printer is on. Then, proceed as follows:

1. Press the PAPER PATH button on the control panel to select the cut sheet mode (the CUT SHEET indicator LED lights).

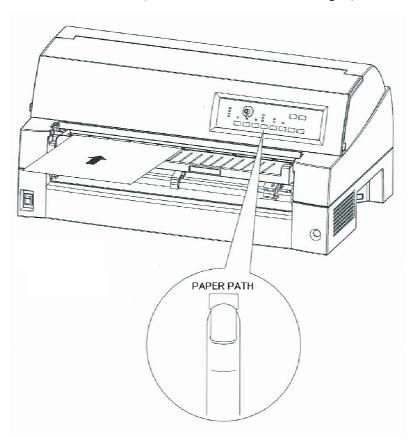

Loading a sheet of paper

2. Insert a sheet of paper (A4 or larger) into the printer, keeping it aligned with the paper guide on the left hand side of the paper table. The sheet will automatically be pulled into the printing start position.

2-16 User's Manual


Printing the Self-Test

The printer has a built-in self-test program. The self-test prints the firmware version, the names of the printer's resident emulations, and all of the characters available in the emulations. The self-test prints 80 characters per line.

To print a self-test page, make sure that a sheet of paper is loaded.

Then proceed as follows:

- 1. Turn the printer off.
- While pressing the LF/FF button, turn the printer back on.
 Keep the LF/FF button pressed until the printer beeps.
 Self-test printing will start.

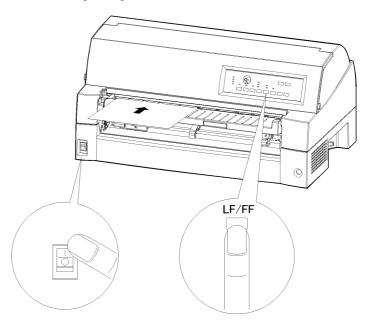

Starting the self-test

- 3. Allow printing to continue for a dozen or more lines of repeat printing. To exit the self-test mode, press the ONLINE button. Then press the LOAD button to remove the test page.
- 4. Examine the self-test page. It should look like the sample on the next page.

Check that printing is uniform and that there are no light, dark, or smudged areas. If the print quality is good, go to step 5. Otherwise, try to correct the problem as follows:

- Make sure that the ribbon is installed correctly.
- Load a new sheet of paper.
- Repeat the self-test procedure.

```
=== Self test printing ===
 BUTTON
                ACTION
                ACTION
Exit to normal mode
Return to <<FUNCTION>> mode
Change print mode
Change high impact
Pause/resume printing
  <ONLINE>
  <LF/FF >
 1. Software specification
      40100-4033 (01A) 035103
 2. Emulations
     DPL24C+ --- FUJITSU DPL24C PLUS
IBMXL24E --- IBM Proprinter XL24E
ESC/P-2 --- EPSON ESC/P-2
 3. Repeat printing
LOG : 00 00 00 00 00 00 00
```

Sample self-test page

5. To exit the self-test mode, press the ONLINE button. The printer will return online.

2-18 User's Manual

NOTE

The printer can also print a special "demo pattern" that illustrates some of the printer's capabilities. To print the demo pattern:

- 1. Load a sheet of paper (A4 or larger).
- 2. Turn the printer off.
- 3. While pressing the FRONT DIR button, turn the printer back on.
 - The printer will start printing the demo pattern.
- 4. The demo pattern stops printing after one page. To pause or restart the demo during printing of a page, press the ONLINE button.
- 5. To exit demo mode, turn the printer off.

==== PRINTER FUNCTION SPECIFICATION ==== 24 wire dot matrix, Logic seeking
Letter quality - 360 X 180 dots/inch
Draft quality - 90 X 180, 120 X 180 dots/inch
High speed draft - 90 X 180 dots/inch
Fujitsu DPL24C PLUS Version 2.01
Epson ESC/P2, IBM Proprinter XL24E
IBM PC char.sets 1 and 2
IBM PS/2 char.sets (Codepage 437,850,851,
852,855,860,863,865,866)
ISO8859-1/ECMA 94
National character sets (USA,UK,German,
French,Italian,Spanish,Swedish,Finnish, Printing technology: Resolution: Standard command set: Resident emulations: Character sets: National character sets (USA,UK,German, French,Italian,Spanish,Swedish,Finnish, Norwegian,Danish 1 and 2,Hungarian 1 and 2, Slovenia 1 and 2,Mazowia 1 and 2,PG-DHN, Polish 1 and 2,Latin P, ISO-Latin,Kamenicky 1 and 2,Turkish 1 and 2, ELOT927,ELOT928,Cyrillic,Lithuanian 1 and 2, Mik,Macdonian,PG-MAC,ABG,ABY,DEC GR,Greekl1,HBR-DEC,HBR-OLD,ISO-Turkish,Korean and Legal, Latin 9,RUSCII) 691 characters per font 691 characters per font See below. Print functions: Fonts - <Bitmap> Courier 10, Pica 10, Prestige 12, Boldface PS
Compression 17, Correspondence 10, Draft 12, HI-Draft 12
0CR-B 10, 0CR-A 10
<Scalable> Courier scalable Upright/Italic/Bold
Timeless PS Upright/Italic/Bold
Nimbus Sans PS Upright/Italic/Bold Bold printing Shadow printing Italic printing Underline Double width Double height Double W & H (The following functions are for the DPL24C PLUS only) Underline TYPE 1 TYPE 2 TYPE 3 TYPE 4 TYPE 5 TYPE 6 Overline Bar code print: Codabar, EAN8, EAN13, EAN example: Codapar, EANN, EANI3, Code 3 of 9, Industrial 2 of 5, Interleaved 2 of 5, Matrix 2 of 5, UPC type A, Code 128 Scalable font + Screened outline: Demo pattern

2-20 User's Manual

CONNECTING THE PRINTER TO YOUR COMPUTER

Your printer supports one of the following interface options:

- Centronics parallel interface+RS-232C serial interface
- Centronics parallel interface+USB (+LAN) interface

The parallel interface connector has wire clips. The serial interface connector has tapped holes. Cables for these interfaces are available from dealers, cable manufacturers, and other suppliers.

The LAN card is a user installable option. For details, see Chapter 8 or refer to the Online Manual that comes with the LAN card.

For detailed interface specifications, see Appendix D.

Selecting a Parallel Interface Cable

For the parallel interface, use a cable that meets the following specifications:

- ✓ At the printer end, use a shielded male Centronics connector, such as an Amphenol DDK 57FE-30360 or its equivalent. To prevent RFI (radio frequency interference), the connector cover must be connected to the cable shield.
- ✓ At the computer end, most computers (including IBM PCs) require a male DB-25P connector. Some computers, however, require a Centronics connector. To determine the type of connector your computer uses, refer to your computer user manual.
- Make sure that the cable length does not exceed 3 meters (10 feet).

Selecting a Serial Interface Cable

For the serial interface, use a cable that meets the following specifications:

- ✓ At the printer end, use a 25-pin male connector, such as a Cannon DB-25P or its equivalent.
- ✓ To determine the type of connector your computer requires, refer to your computer user manual or ask your dealer.
- ✓ The cable length can be up to 15 meters (50 feet). This type of length is required in many networking and shared-printer configurations.

Selecting a USB Cable

- ✓ When the USB interface is used to connect to the host computer, the parallel interface and the serial interface (factory add-on option) cannot be connected simultaneously.
- ✓ The USB interface does not guarantee all connections of USBsupported devices.


Selecting a LAN cable


- ✓ When the LAN cable is connected, the parallel and USB cables cannot be used.
- ✓ The LAN cable, when used in 100BASE-TX environments, must conform to category 5 or higher.

Connecting the Interface Cable

To connect the interface cable:

- 1. Turn off both the printer and the computer.
- 2. Attach the interface cable to the connector. Do not connect more than one interface cable type to the printer at the same time.

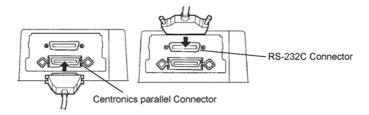

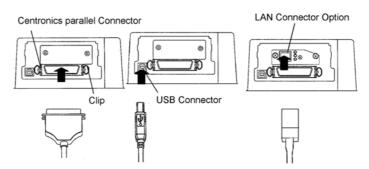

Connecting the interface cable

2-22 User's Manual

NOTE

The LAN interface is a user add-on option.

When installing a LAN card, remove the two screws securing the cover and remove the cover. Then insert the LAN card and reattach the cover with the two screws removed earlier. For details, refer to the Online Manual that comes with the LAN card.

- 3. To secure a parallel interface cable, flip the fastener clips located on the printer into the notches on the cable connector. To secure a serial interface cable, tighten the screws in the cable connector.
- 4. Attach the other end of the interface cable to your computer. Gently pull on the cable to verify that it is secure.

SELECTING AN EMULATION

Before printing with your software, verify that the correct emulation is selected on your printer. This section describes the available emulations and their selection.

For Experienced Users:

The printer's preselected factory setting is the Fujitsu DPL24C PLUS emulation. If this emulation is acceptable, you may skip this section.

An emulation is a set of commands used by your software to communicate with the printer. There are many different emulations available for printers.

Each emulation has unique features and capabilities. This printer offers three resident emulations:

- Fujitsu DPL24C PLUS (for Fujitsu DL-series printers)
- IBM Proprinter XL24E
- Epson ESC/P2

Resident emulations are stored in the printer's permanent memory.

Here are some points to help you determine which emulation to select:

✓ Determine which emulations your software supports. (Refer to your software documentation.) Since most software programs support this printer, try to run a program with the factory default emulation first.

(DPL24C PLUS emulation is the factory default.) Try this emulation even if you are not sure of which emulation to choose. See Chapter 5 for detailed information about how your printer communicates with your software.

✓ If you are using more than one software package, determine which emulation is supported by the software you use most frequently.

Select that emulation.

- ✓ If your software supports more than one emulation, select the DPL24C PLUS emulation if possible. This emulation has the greatest capabilities.
- ✓ If you want to use an emulation that is not supported by your software, contact your software manufacturer or printer dealer and ask whether support is available. You may be able to obtain a printer driver that is not shipped with the original software package.

To select an emulation, proceed as follows:

1. Turn the printer on and load a sheet of paper.


To change a single printer setting, such as the emulation, you can use a single sheet paper. To change several printer settings as described in Chapter 5, you must load continuous forms paper. See Chapter 3 for paper loading instructions.

2. Enter setup mode.

Press the ONLINE button to place the printer offline. Then, press the AUTO GAP button and the HI IMPACT button.

As the printer enters offline setup mode, it prints the following information:

2-24 User's Manual

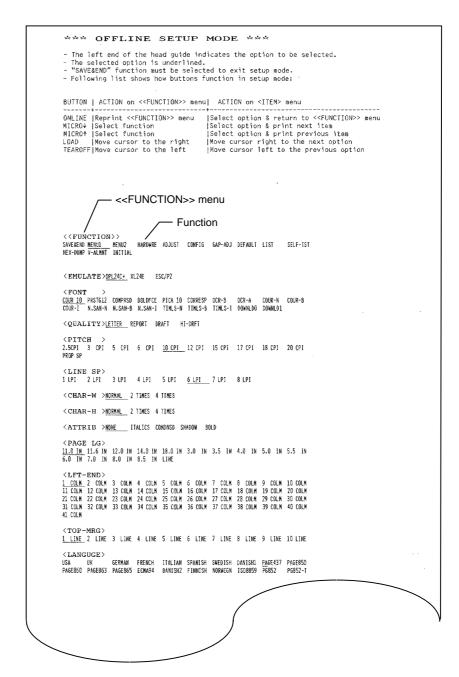


Initial printout in setup mode

Check that the <<FUNCTION>> menu is printed at the bottom of the page.

3. Select the MENU1 function.

Locate the cursor on left edge of the aluminum print guide. Initially, this cursor should be positioned at SAVE & END at the beginning of the <<FUNCTION>> menu. Press the LOAD button repeatedly to position the cursor at MENU1, as shown below:

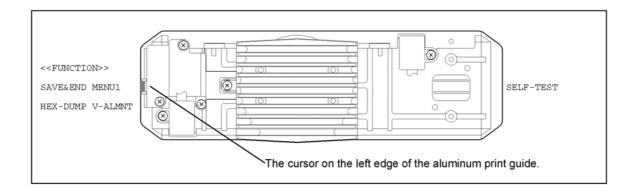

Press the ▼ MICRO FEED button to select MENU1 and print the following <EMULATE> options:

The currently selected emulation is indicated by a short underline. In the figure shown above, the Fujitsu DPL24C PLUS emulation is selected.

4. Select an emulation.

Press the LOAD button repeatedly to position the cursor at the required emulation. Press the ▼ MICRO FEED button to select the emulation and print the next MENU1 item.

5. Exit MENU1.

Press the ONLINE button to exit the MENU1 function and reprint the <<FUNCTION>> menu.

6. Exit setup mode to save the emulation.

To exit setup mode and save the new emulation, make sure that the cursor is positioned under SAVE & END. Then press the
▼ MICRO FEED button. The printer selects SAVE & END and then goes online.

To change other printer settings using the printer setup mode, see Chapter 5.

2-26 User's Manual

PRINTING A SAMPLE PAGE (ONLINE)

Once the self-test verifies that the printer is functioning correctly, try printing using one of your software packages. This exercise will ensure that the printer is correctly connected to your computer.

If you are using a parallel interface, the printer usually prints the correct characters automatically. However, you may need to adjust the page layout or various print features using your software or the printer setup mode. If you are using a serial interface, the printer may not work at all or it may print a lot of "?" characters. In this case, the serial settings on the printer do not match those of your computer or your software. Before changing any settings, use the procedure described below to try printing using the printer's preselected factory settings.

Test communication between the printer and computer as follows:

- 1. Load a sheet of paper.
- 2. Check that the printer is online. If the ONLINE indicator is not green, press the ONLINE button.
- 3. Try to print using your word processor, a programming language, or other software.
- 4. Use your software printer selection menus or the printer setup mode (described in Chapter 5) to make required changes in the page layout or other print features.

If the printer does not print or prints the wrong characters, proceed as follows:

- Make sure that the interface cable is properly connected.
- Make sure that the printer emulation selected in your software is the same as that selected on the printer.
- If you are using a serial interface, make sure that the printer serial interface settings are the same as those on the computer. The printer's preselected factory settings are 8 data bits, no parity, 1 stop bit, 9600 baud, and XON/XOFF protocol.

You can change the serial settings on either the printer or your computer. To change the printer settings, see Chapter 5. To change the computer settings, use the selection menus provided by your software or the commands of your computer operating system.

The following example uses the MS-DOS operating system:

Using MS-DOS to Specify Serial Interface Settings

For an IBM PC or compatible device, use the following MS-DOS MODE commands to set the computer serial settings to match the printer factory settings:

MODE COM1:9600,N,8,1,P MODE LPT1:=COM1

To activate these settings whenever you turn the computer on, write the MODE commands in your AUTOEXEC.BAT file. Make sure that the MODE.COM file is included in your root directory.

If the printer still doesn't work, consult your dealer or someone experienced in serial interface communications.

If an error occurs during printing with Windows, simply
printing the page again will cause the printed characters to
be garbled. To avoid this problem, execute reset from the
control panel or turn off the printer, then print the page
again.

You are now finished setting up and testing the printer. To familiarize yourself with everyday printer operations, such as loading paper, selecting print features, and printing, see Chapters 3 and 4.

INSTALLING THE PRINTER DRIVER

A printer driver is required for using the printer in a Windows environment. Special printer drivers for Windows 95, 98, Me, NT 4.0, 2000, XP, and Server 2003 are provided with the DL7400 printer.

For information about how to install printer drivers, refer to Readme.txt of the printer driver to be installed.

- These printer drivers run with DLP24C+ emulation. Be sure to specify DLP24C+ emulation for the printer mode.
- The DL7400 printer driver is a printer driver for monochrome printing.

The color data printing result may differ from its print preview or the monochrome data printing result.

2-28 User's Manual

PAPER HANDLING

3

This chapter explains how your printer uses paper.

Topics covered are:

- Selecting paper
- Overview of paper operations
- Adjusting for paper thickness
- Using single sheets
- Using continuous forms (front-tractor feed and rear-tractor feed)
- Feeding and positioning paper
- Switching paper types

Tips for paper handling are given at the end of this chapter. Check that section if you are using multipart forms, envelopes, or labels.

SELECTING PAPER

The printer can handle either single sheets or continuous forms. Single sheets, also called cut sheets, include envelopes and noncontinuous, multipart forms. Continuous forms include labels and multipart forms fed into the printer using the forms tractors.

For best results, use paper that meets the specifications listed below. (See Appendix B for detailed specifications.) If you are unsure of the suitability of a particular paper, try testing the paper or consult your dealer.

Length	Single sheets: 70 to 420 mm (3 to 16.5 in) Continuous forms: 102 mm (4 in) or greater
Width	Single sheets: 55 to 420 mm (2.16 to 16.5 in) Continuous forms: 102 to 420 mm (4 to 16.5 in)
Thickness	0.57 mm (0.022 in) maximum total thickness.
Copies	1 to 8-copies (Paper table/Front/Rear tractor) 1 to 5-copies (Cut sheet feeder)

Note:

To use cut sheets exceeding 297 mm in length, the optional large cut sheet table and large stacker are required.


OVERVIEW OF PAPER OPERATIONS

The following buttons are used in paper handling:

LF/FF, TEAR OFF, PAPER PATH, ▲ MICRO FEED,
 ▼ MICRO FEED and LOAD buttons on the control panel

(A different function is enabled when each button is pressed in conjunction with the ONLINE button.)

The following figure shows the location of each button:

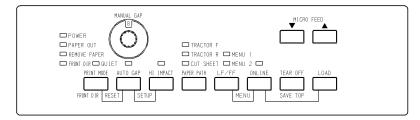

Location of the buttons

Table 3.1 summarizes the use of buttons in paper handling. More detailed information is provided later in this chapter.

NOTE

To load or feed paper, the printer must be:

- Online but not receiving or printing data
- Offline but not in setup mode

To micro feed paper, the printer must be:

- Online but not receiving or printing data
- Offline but not in setup mode

3-2 User's Manual

Table 3.1 Buttons Used for Paper Handling

Button/Dial	Purpose	Action
ONLINE	Change the printer mode Stop/resume printing	Press ONLINE to place the printer online or offline. Press ONLINE to stop or resume printing.
LOAD	Load/unload paper	Press LOAD to load paper or to retract continuous forms to the "park position."
	Save adjusted load point	Press LOAD and ONLINE simultaneously to permanently store a load position adjusted by micro feeding immediately after loading paper.
LF/FF	Form feed Line feed	Press and hold LF/FF to execute a form feed. Continuous forms are fed forward by one page. Single sheets are ejected. Press LF/FF within three seconds to feed paper
		forward by one line.
TEAR OFF	Advance forms for tear-off	Press TEAR OFF to advance the forms perforation to the tear-off edge. Tear off the forms, then press any button to retract the remaining forms.
PAPER PATH	Selects paper path	Press PAPER PATH to select the paper path: front tractor, rear tractor, cut sheet.
HI IMPACT	Set/reset HI IMPACT mode	Press HI IMPACT to set or reset hi impact mode.

Table 3.1 Buttons Used for Paper Handling (Cont.)

Button/Dial	Purpose	Action		
PRINT MODE/ FRONT DIR	Select cut sheet ejection	Press PRINT MODE/FRONT DIR at Offline to select a direction of ejecting cut sheet.		
		Front ejection – FRONT indicator lights. It blinks when paper is ejected to the paper table prompting the user to remove the paper.		
		Rear ejection – FRONT indicator does not light.		
		When you save your setting in the setup mode, it becomes the new default. The default setting is invoked whenever you turn on the printer.		
▲ MICRO	Micro Feed	Press ▲MICRO/▼MICRO to feed paper by 1/180		
▼ MICRO		inch in the direction of the arrow.		
AUTO GAP	Select paper thickness control mode	Select paper thickness control mode.		
		AUTO GAP — AUTO GAP indicator lights.		
		Manual Gap — AUTO GAP indicator doesn't lights.		
		The Manual Gap dial is enabled.		
MANUAL Gap Dial	Select paper Thickness at MANUAL MODE	Select the paper thickness at MANUAL MODE. Auto Gap is usually used. Auto Gap is used for printing on paper of different thicknesses.		

3-4 User's Manual

SELECTING PAPER PATH

This printer has a variety of paper paths and feed directions.

Paper Paths and Feed Directions

See the following five cases.

---- : Cut sheet


: Continuous forms

(n): Input

[n]: Output


With rear tractor

- (1) Paper table \rightarrow Print \rightarrow Paper table
- (2) Paper table \rightarrow Print \rightarrow Rear stacker
- (3) Rear tractor \rightarrow Print \rightarrow Front eject

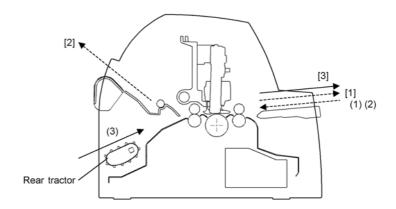


With front tractor

- (1) Paper table \rightarrow Print \rightarrow Paper table
- (2) Paper table \rightarrow Print \rightarrow Rear stacker
- (4) Front tractor \rightarrow Print \rightarrow Rear eject

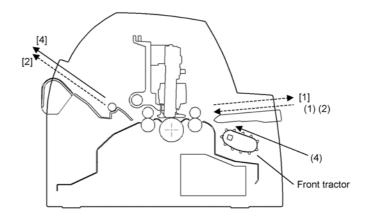

With front and rear tractors (either optional)


- (1) Paper table \rightarrow Print \rightarrow Paper table
- (2) Paper table \rightarrow Print \rightarrow Rear stacker
- (3) Rear tractor \rightarrow Print \rightarrow Front eject
- (4) Front tractor \rightarrow Print \rightarrow Rear eject

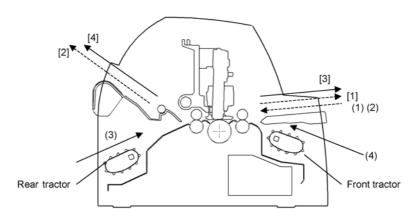

In the next two cases, the number of cut sheets stacked in the printer may be reduced depending on printing conditions and environments. Follow the notes.

With rear tractor and front optional cut sheet feeder and large stacker

- (1) Paper table \rightarrow Print \rightarrow Paper table
- (3) Rear tractor \rightarrow Print \rightarrow Front eject
- (5) Front cut sheet feeder \rightarrow Print \rightarrow Paper table
- (6) Front cut sheet feeder \rightarrow Print \rightarrow Rear stacker

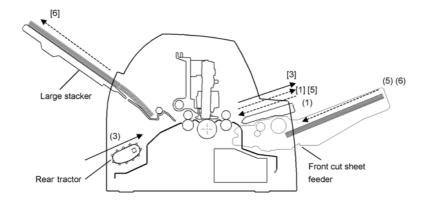

3-6 User's Manual

With front or rear tractor and rear optional cut sheet feeder and large stacker.


In addition, the front and rear tractor (either is optional) can be mounted.

(3) Rear tractor \rightarrow Print \rightarrow Front eject

(4) Front tractor \rightarrow Print \rightarrow Rear eject

(7) Rear cut sheet feeder \rightarrow Print \rightarrow Paper table

(8) Rear cut sheet feeder \rightarrow Print \rightarrow Rear stacker

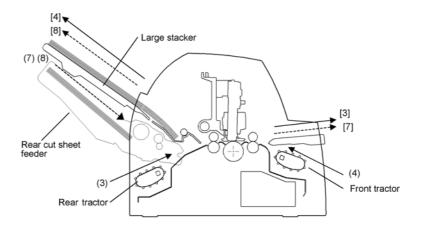

NOTES

When ejecting cut sheets to the paper table, the REMOVE PAPER indicator blinks after ejecting a cut sheet and stops printing. Before restarting printing, be sure to remove the cut sheet.

You must remove cut sheets one by one immediately after ejection.

This is required therefore the printer may load an ejected sheet again or an ejected sheet may push the previous sheets out of the printer.

To eject sheets larger than A4 size onto the paper table, the paper table must be replaced with the optional large cut sheet table to prevent ejected sheets from falling off the paper table.


When printing thin paper, multipart copy paper, or large size paper, frequently remove the paper from the rear stacker or the paper table.

ADJUSTING FOR PAPER THICKNESS

The printer can handle paper of different thicknesses, including multipart forms with up to eight parts (original plus seven copies). For details on paper thickness specifications, see Appendix B.

The printer automatically adjusts for different paper thicknesses.

You can use the MANUAL GAP DIAL to adjust the paper thickness manually at manual mode.

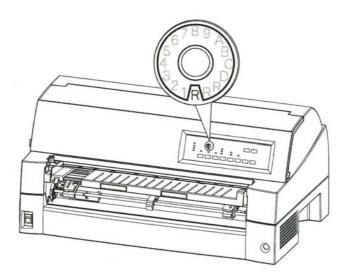

Adjusting the manual gap dial

3-8 User's Manual

Table 3.2 Manual Gap Dial Settings

Number of Copies (Including the Original) *1	Setting *2
1 copy	1
2 copies	2
3 copies	3
4 copies	4
5 copies	5
6 copies	6
7 copies	7
8 copies	8
Envelopes	Α
Slips	B, C, D
Ribbon replacement	R

- *1 For carbon-interleaved paper, the carbon counts as one copy.
- *2 Vary the setting up or down (including **A** to **R**) to optimize printing especially for labels and envelopes. Select **R** when replacing a ribbon or clearing a paper jam.

NOTE

If printing is messy, the ribbon misfeeds, or the paper jams, move the lever one setting higher.

USING SINGLE SHEETS

This section describes how to load paper from the paper table or cut sheet feeder. The paper table allows paper to be loaded manually, one sheet at a time. A cut sheet feeder allows paper to be loaded automatically from the paper bin.

Loading a Single Sheet of Paper

To load a sheet of paper from the paper table:

- 1. Make sure that the printer is turned on.
- 2. Press the PAPER PATH button to select CUT SHEET (the indicator lights).
- 3. Press the FRONT DIR button to select the direction of ejecting single sheets.
 - Front ejection FRONTDIR indicator lights.
 - Rear ejection FRONTDIR indicator doesn't light.


4. Adjust the left margin.

On the left hand side of the paper table, a scale graduated in units of 1 [mm]. When the paper guide is positioned at scale 0 [mm], the left margin is 5 mm (0.2 inch). Push the lock lever down to secure the guide.

5. Pull the subguide out as required to accommodate the paper size.

NOTE

When using the paper whose width is under 100 mm (4 inch), position the paper guide at scale 0 [mm].

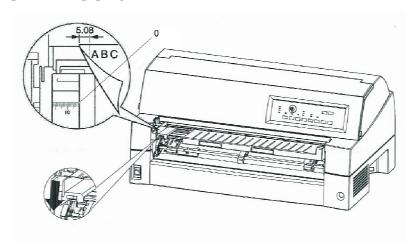

Preparing to load a sheet of paper

6. Insert a sheet of paper into the paper table. Make sure that the front edge of the paper engages snugly with the feed roller.


NOTE

If paper skews when it is loaded, the printer does not print and ejects the paper. (This function can be disabled by a setting in setup mode.)

3-10 User's Manual

7. Press the LOAD button. The paper will advance to the top-of-form position. The top-of-form position is the first line on which printing can start. To adjust the position of the paper slightly, press the ▲ MICRO FEED button or the ▼ MICRO FEED button. The paper will move forward or backward in 1/180-inch increments.

After loading paper, the printer goes into online mode.

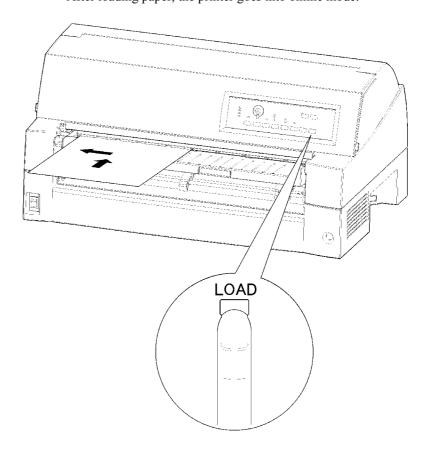

Loading a sheet of paper

- 8. Print a sample page and check the page margins. Make the following adjustments, as necessary:
 - Horizontal alignment. Readjust the paper guide if required.
 - Top-of-form setting (see Chapter 5).
 - Margin settings. Use your software or the printer setup mode (see Chapter 5).

NOTE


Do not open the front cover during printing. With the cover open detection option installed, the printer never prints while the front cover is open. Close the front cover to perform printing.

Loading Paper from the Cut Sheet Feeder (Option)

A cut sheet feeder (SF940) allows automatic printing on single sheets without the need to manually insert the sheets one-by-one. This can save you a lot of time when printing long files using single sheets. See Chapter 8 for more information on the cut sheet feeder.

For installation of the feeder, refer to its user's manual. When a feeder is mounted and the feeder cable is connected, the printer automatically knows the feeder type and controls the feeder accordingly.


1. Two steps of extension are available for supporting long sheets of paper.

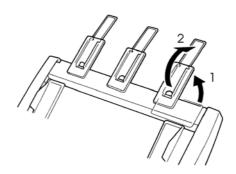

Steps of extension

2. Adjust the left margin.

To help align the left paper guide, use the inch-based ruler located behind the paper guides. The ruler is graduated in 10 columns per inch. For example, setting the left paper guide 12.7 mm (0.5 inch) from the left gives a left margin of 6.3 mm (0.25 inch) plus the left margin specified by your software or the printer setup mode.

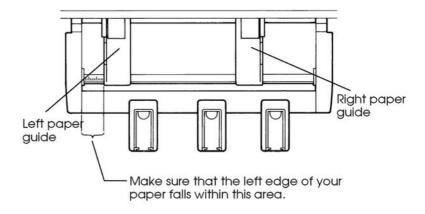


3-12 User's Manual


- Slide the right paper guide until the distance between the two guides is the approximate width of your paper.
- 3. Manually fan the stack of paper and place it in the paper bin.

NOTE

A short horizontal mark inside the left paper guide indicates the maximum capacity of the bin. Make sure that your paper stack does not exceed this horizontal mark.

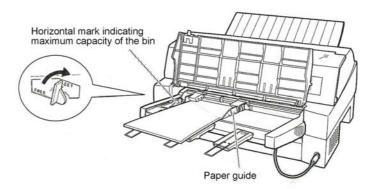

Loading the cut sheet feeder (Front feed)

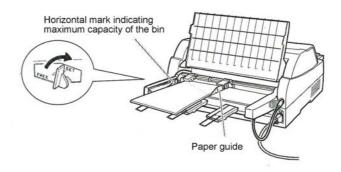

Loading the cut sheet feeder (Rear feed)

- 4. Readjust the right paper guide, leaving a slight gap between the paper guide and the right edge of the paper. Slide the guide to the approximate width of the paper, or the paper will not be loaded properly. Pull the right locking lever forward.
- 5. Push the bin lever down to the "SET" position.
- 6. Load paper to the top-of-form position using either of the following methods:

- Load the paper manually. Press the LOAD button. The paper will advance to the top-of-form position. Adjust the position of the paper as needed by the ▲MICRO button or the ▼MICRO button (micro feed).
- Load the paper using your software. Press the ONLINE button to place the printer online. Load paper according to the instructions in your software documentation. Most software packages load paper automatically.

After loading paper, the printer goes into online mode.

- 7. Print a sample page and check the page margins. Make the following adjustments, as necessary:
 - Horizontal alignment. Readjust the paper guides if required.
 - Top-of-form setting (see Chapter 5).
 - Margin settings. Use your software or the printer setup mode (see Chapter 5).

NOTE

Do not open the front cover during printing.

Ejecting Single Sheets

If you print using software, each sheet is ejected automatically when the end of the printed page is reached. To manually eject sheets of paper, use the following method:

 Press and hold down the LF/FF button to execute a forward form feed.


USING CONTINUOUS FORMS

Continuous forms paper, fanfolded at the horizontal perforations, is ideal for printing rough drafts and long files. The paper is fed into the printer using the forms tractors.


3-14 User's Manual

Positioning the Paper Stack


Place the stack of continuous forms paper directly below the rear of the printer or below the front of the printer. After the paper is installed in the printer, the paper path should look like this:

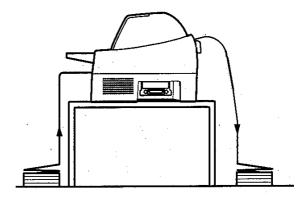

Good placement

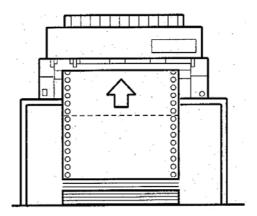

Bad placement

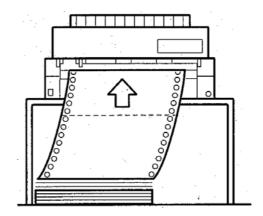

Placement of continuous forms


Loading Continuous Forms (Front Feed)

This section explains how to use continuous forms as the tractor unit is installed at the front of the printer. The tractor unit pushes continuous forms. This condition applies when you first purchase the printer. Up to 8-ply media can be fed by the front tractor unit.

You can use continuous forms paper even if you have a cut sheet feeder installed at the rear of the printer.

To load continuous forms paper:

- 1. Make sure that the printer is turned on. Remove any single-sheet paper from the printer.
- 2. Lift up the paper table as shown below.
- 3. Release the tractor locking levers by pulling them up. Open the tractor paper holders. See the following figure.
- 4. Position the left tractor. Push the left locking lever down to secure the tractor. Center the middle forms support.

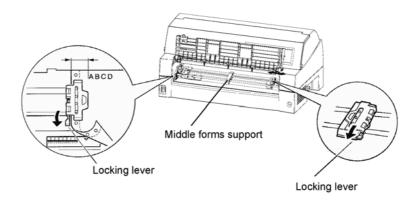


Positioning the tractors

5. Adjust the left margin.

Below the left tractor, there is a tractor guide, short inch-based ruler graduated in 10 columns per inch. Use the ruler to help position the tractor. When the paper edge is positioned to the zero line, the left margin is 12 mm (0.5 inch) including perforation area and the arrow indicates the location of the first character.


6. Fit the paper feed holes onto the left and right tractor pins. Adjust the right tractor to the width of the form. Close the paper holders.

3-16 User's Manual

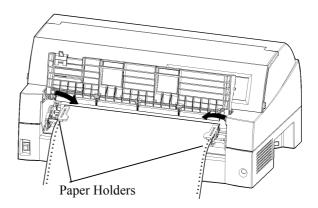

Adjusting paper tension

- 7. Pull the right tractor to stretch the paper taut. Push the right locking lever down to secure the tractor in place.
- 8. Lower the paper table to the down position (normal mode).

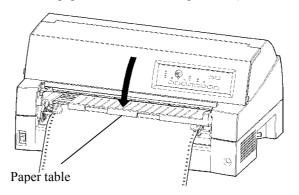

Lowering the cut sheet stand

CAUTION

- Before lowering the paper table, make sure that the paper holders are closed.
 - If the holders are opened, they may cause damage to the tractors and the paper table.
- Make sure that the paper table is positioned to its normal mode. If it is not done, jamming may occur when continuous forms paper is fed.

- 9. Press the PAPER PATH button to select "FRONT TRACTOR". (The indicator lights.)
- 10. Press the LOAD button to advance the paper to the top-of-form position. Top-of-form is the first line on which printing can start. After loading paper, the printer goes into online mode.
- 11. Print a sample page and check the page margins. Make the following adjustments, as necessary:
 - Horizontal alignment. Move the forms tractors as required.
 - Top-of-form setting (see Chapter 5).
 - Margin settings. Use your software or the printer setup mode (see Chapter 5).

NOTE

Do not open the front cover during printing.

3-18 User's Manual

Loading Continuous Forms (Rear Feed)

A tractor is supplied as standard and is attached to the front of the printer. It can be attached to the rear of the printer. You can also buy a tractor unit as an additional rear tractor unit.

A maximum of 8-ply media can be fed from the rear tractor unit.

 Put the paper table in the normal mode when the rear tractor unit is to be used.

For reinstalling the tractor unit for rear feed, see page 2-10 to 2-13.

- 1. Press the PAPER PATH button to select REAR TRACTOR (the indicator lights).
- 2. Set the continuous forms.

Go to step 3-8 in the section **Loading Continuous Forms** (**Front Feed**) in this chapter.

3. Load the continuous forms.

Go to step 9 in the section **Loading Continuous Forms (Front Feed)** in this chapter.

Unloading Continuous Forms

To unload continuous forms:

- 1. Make sure that the FRONT TRACTOR or REAR TRACTOR indicator lights.
- 2. Press the LOAD button. The continuous forms paper is retracted to the park position. If the paper cannot be retracted in one operation, continue to press the LOAD button until the paper is parked.

NOTE

The printer can retract continuous forms paper up to a maximum of 55.8 cm (22 inches) per operation.

3. To remove the paper, raise the tractor paper holders and lift out the paper.

NOTE

If continuous forms are unloaded without stopping, the paper may slip off the tractors.

Tearing Off Continuous Forms

Your printer has a special "tear-off edge" that allows you to tear off printed pages without wasting paper. The tear-off edge is located on the front and rear of the printer.

To tear off continuous forms using the tear-off edge:

1. Press the TEAR OFF button. The bottom perforation of the last page advances to the tear-off edge. If you specified TEAR OFF:


AUTO using the HARDWARE function in setup mode, the paper automatically advances to the tear-off edge at the end of each job (or when the printer has printed all the data received).


NOTE

If the bottom perforation of your paper is not positioned at the tear-off edge, the length of your paper may not be specified correctly in your software or the printer setup mode.


Check that the paper length is specified correctly. For information on specifying page length using setup mode, see Chapter 5.

3-20 User's Manual

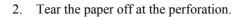

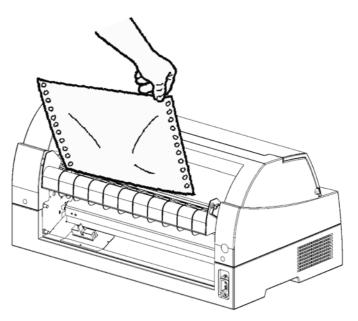

Tearing off continuous forms (front feed)

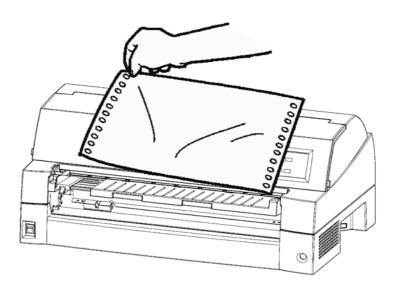

Tearing off continuous forms (rear feed)

3. Press any button to retract the forms back to the top-of-form position.

FEEDING AND POSITIONING PAPER

The following functions are available whether the printer is online or offline.

Line Feed/Form Feed

Use the line feed/form feed function to move paper forward.

- Pressing and holding down the LF/FF button feeds one sheet of paper.
- Pressing the LF/FF button once advances the paper one line (do not hold the button more than three seconds).

Micro Feed

Use the micro feed function to fine tune the position of the paper.

- Press the ▲ MICRO button to feed paper backward by 1/180 inch.
- Press the ▼ MICRO button to feed paper forward by 1/180 inch.

Remember that the top-of-form will differ from the original setting.

Load Position Adjust

Use also the micro feed function to adjust the load position of the paper.

- When the ▲ MICRO button or the ▼ MICRO button is used immediately after the LOAD button is pressed, the adjusted position of paper is retained as the new load position until the power is turned off.
- Pressing the ONLINE and LOAD buttons simultaneously saves the new position permanently.

The load position can be set for single sheets and continuous forms respectively.

3-22 User's Manual

TIPS ON PAPER HANDLING

General Tips

- Use high-quality paper. Do not use paper that is wrinkled or curled at the edges.
- Do not use paper with staples or metal parts.
- Do not use paper with unpredictable variations in thickness, such as paper with partial multilayers, paper with embossed printing, and labels with the backing sheet exposed.
- Store paper in a clean, dry environment.

Multipart Forms

- Avoid using carbon-interleaved single sheets if possible.
 Printing tends to become misaligned on the bottom sheet.
- To ensure smoother feeding of paper-stapled, multipart forms, raise the rear stacker to support the forms.

Envelopes

When printing envelopes, use the paper table or the manual feed slot of the cut sheet feeder. Note the following:

• When loading envelopes, make sure that the envelope flaps face forward. Otherwise, the envelopes may jam in the printer.

Labels

- Be careful to check operating conditions when using labels.
 Labels are sensitive to temperature and humidity.
- Only use labels mounted on continuous forms backing sheets.
 Do not print labels mounted on single sheet backing. Labels mounted on single sheet backing tend to slip and printing becomes crooked.
- Do not feed labels backwards using the LOAD button from the control panel. Jamming may occur.
- Do not use the printer tear-off feature when printing labels. If the labels are retracted, the backing may peel off and the labels may jam in the printer.
- Test-print labels before running a job. If jams occur, go into setup mode and
 - set the paper thickness control to manual mode and
 - set the paper thickness indicator to a wider position manually.

If jamming problems continue, try a different type of label.

3-24 User's Manual

PRINTING

4


This chapter describes the following everyday printing operations:

- Using multipart form (hi impact mode)
- Starting, stopping, or resuming printing
- Removing printed pages
- Clearing the print buffer

MULTIPART FORMS (HI IMPACT MODE)

Instructions for loading paper are given in Chapter 3.

This printer has enough capability to print multipart forms. When superior copy capability is required, use the hi impact mode. Press the HI IMPACT button on the printer control panel. This function is valid when the HI IMPACT indicator lights.

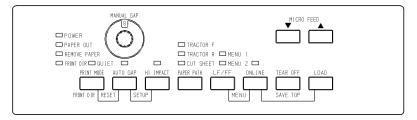

Print control panel

NOTE

- Setting hi impact mode by pressing the HI IMPACT button is cancelled when you turn off the printer.
- If you wish to have the hi impact mode set on power-on, save the setting in setup mode.

SELECTING PRINT FEATURES

The print features you select determine how your printed pages will look.

Print features include the following:

- Print quality
- Fonts
- Pitch (characters per horizontal inch)
- Page length and width
- Line spacing (lines per vertical inch)

To select print features, you can use either commercial software or the printer control panel. The method you use depends on the capabilities of your software. If your software has most of the features you require, you may rarely – if ever – have to use the control panel. *In fact, your software often overrides the printer settings*.

If your software has limited options, you can use the printer control panel to select print features. Sometimes, the control panel enables you to select features not available through your software. For example, you can select downloaded fonts not supported by your software.

4-2 User's Manual


Using Commercial Software

Many commercial software packages offer a wide variety of print features, including some features that are not supported by this printer. For example, software often provides a wider range of font sizes than the printer can accommodate. Software also allows you to specify multiple fonts on a page.

To determine which features your software supports and how to select them, refer to your software documentation.

Using the Control Panel

Use the ONLINE and LF/FF button to directly select one of the two menus.

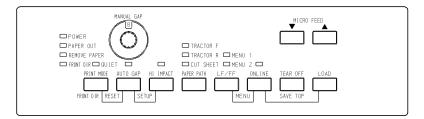

Printer control panel

The AUTO GAP and HI IMPACT buttons specify MENU1 or MENU2, either of which allows you to specify different sets of options in advance. Some of the print features include emulation, print quality, character pitch, and line spacing.

When you first turn the printer on, the MENU 1 indicator is lit; that is, all of the print features assigned to MENU1 are enabled. However, you can easily switch to MENU2 before printing. You can also select a resident font other than the fonts assigned to MENU1 and MENU2.


NOTE

For easy reference, keep a list of your current MENU 1 and MENU 2 settings near the printer. To print a list of current settings, see the section Printing a List of Selected Options in Chapter 5. You may also want to use the space provided in Table 4.1 to record your settings.

Selecting MENU1 or MENU2

When you first turn the printer on, MENU1 is selected. To change to MENU2 or back to MENU1, proceed as follows:

- 1. Press the ONLINE button to place the printer offline.
- 2. Repeatedly press the ONLINE and LF/FF buttons. The lighted indicator (1 or 2) shows the menu selected. When the menu selection is changed, the font (font, pitch, and quality) assigned in the selected menu becomes valid.

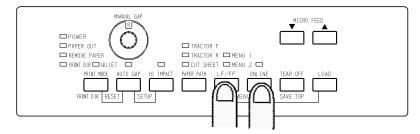

4-4 User's Manual

Table 4.1 MENU1 and MENU2 Settings

Setting	Default Sett	
	your default settings in th	ne space below.
Print Feature	MENU1	MENU2
Emulation		
Fujitsu DPL24C PLUS		
IBM Proprinter XL24E		
Epson ESC/P2		
Font		
Courier 10		
Prestige Elite 12		
Compressed 17		
Boldface PS		
Pica 10		
Correspondence		
OCR-B 10		
OCR-A 10		
Courier Normal 10 (outline)		
Courier Bold 10 (outline)		
Courier Italic 10 (outline)		
Nimbus Sans Normal PS (outline)		
Nimbus Sans Bold PS (outline)		
Nimbus Sans Italic PS (outline)		
Timeless Normal PS (outline)		
Timeless Bold PS (outline)		
Timeless Italic PS (outline)		
Downloaded font 0		
Downloaded font 1		
Print quality		
Letter		
Report		
Draft		
High-speed draft		
Pitch		
2.5, 3, 5, 6, 10, 12		
15, 17, 18 or 20 cpi		
Proportional spacing		
Other features:		

3. Press the ONLINE button to return online. You are ready to print using the selected menu.

STARTING OR STOPPING PRINTING

Starting Printing

Before you start to print, make sure that paper is loaded.

To start printing, press the ONLINE button to place the printer online. Then start your software.

Stopping Printing

To stop printing immediately, press the ONLINE button to place the printer offline. You can also use your software to stop printing, but there will be a slight delay before printing stops. Any data sent to the print buffer but not yet printed is stored until you resume printing. Data in the print buffer is lost if you turn the printer off.

To resume printing, press the ONLINE button again. To cancel printing, use the cancel commands provided by your software or computer. To clear the print buffer, place the printer offline and press the PRINT MODE and AUTO GAP buttons. Any data sent to the print buffer before you canceled printing will be lost.

Resuming from a Paper-Out

The printer can "sense" when paper runs out. Depending upon how PPR-OUT (paper-out) is set in setup mode, the printer either:

- Stops printing and lights the red PAPER OUT indicator, or
- Continues printing until no more data remains in the printer.

See Chapter 5 for details on setting PPR-OUT. The factory default is to stop printing if continuous forms paper runs out and to continue printing if single sheet paper runs out.

To resume printing when paper runs out, use either of the methods described below:

Printing the remaining lines on a page

This method is convenient to continue printing under the paper-out condition, but is not available when the cut sheet feeder is used.

- Press the ONLINE button. The printer returns to online mode, prints or feeds one line, and the PAPER OUT indicator lights up again.
- 2. Repeat this procedure until the full page is printed. Line spacings, however, may be uneven.

4-6 User's Manual

CAUTION

When printing remaining lines, be careful not to print on the platen. Printing on the platen may damage both the platen and the print head.

Continuing printing after supplying paper

- 1. Install paper on the forms tractors or on the cut sheet stand, or in the cut sheet feeder bin, as described in Chapter 3.
- 2. To load the first sheet of paper, press the LOAD button. The PAPER OUT indicator will turn off.
- 3. Press the ONLINE button to place the printer online. The printer resumes printing.

NOTE

For continuous forms paper, the page where printing stopped and the page where printing resumes may be incorrectly printed. In this case, wait for the entire job to finish printing. Then reprint the incorrect pages.

Resuming after an Area Over warning

The printer senses the left and right edges of paper and stores their positions when the paper is loaded. If your software will print data past either edge, the printer ignores that data but does not stop printing.

The AREA OVER detection control functions when AREACNT (area control) is set to ENABLE in setup mode. See Chapter 5 for information on setting AREACNT. The factory default is not to sense the edges. If paper is dark-colored or preprinted, the printer may not be able to sense the edges correctly. In this case, disable the sensor.

REMOVING PRINTED PAGES

This section describes the best methods for removing single sheets or continuous forms paper after printing.

Removing Single Sheets

When you print using software, the printer automatically ejects each sheet of paper when the end of the printed page is reached. To eject sheets manually, use one of the following methods:

• Press and hold down the LF/FF button to execute a form feed.

Removing Continuous Forms

To avoid wasting paper, use the printer tear-off function to remove continuous forms paper. Press the TEAR OFF button to advance the perforation to the tear-off edge. Tear the paper off, and then press any button to retract the paper back to the top-of-form position. See Chapter 3 for more detailed instructions.

CLEARING THE PRINT BUFFER

Place the printer offline. Press the PRINT MODE and AUTO GAP buttons simultaneously to clear all data from the print buffer. This method is useful when you cancel a print operation and do not want to continue printing data already sent to the printer.

This method does not change or clear MENU1 and MENU2 settings, paper loading position settings, and downloaded fonts.

4-8 User's Manual

USING SETUP MODE

5

Your printer has two modes: normal and setup. Normal mode is used for everyday printer operations and is explained in Chapters 3 and 4.

Setup mode serves two purposes. It enables you to:

- Select the printer's optional settings
- Help diagnose printer problems

These setup mode functions can be done either offline, using the printer control panel (offline setup), or remotely, using a setup program in your computer system or software (online setup). Primarily, this chapter explains how to use the offline setup mode. The online setup mode, which is reviewed briefly at the end of this chapter, is valid in all emulations.

Optional settings on the printer include the emulation, fonts, pitch, page length and page width, serial interface options, and the top-ofform setting. When you save your settings in the printer's permanent memory, they become the new settings or defaults. These defaults are invoked whenever you turn on the printer. For example, if you save DPL24C PLUS as the default emulation, DPL24C PLUS is invoked when you turn on the printer.

The printer diagnostic functions are SELF-TST, HEX-DUMP, and V-ALMNT. These functions are helpful for printer trouble-shooting, as described in Chapter 7.

HOW TO USE THIS CHAPTER

The sections in this chapter are presented in logical sequence. *If you are a first-time user, be sure to read the following sections first:*

- Entering Setup Mode
- Overview of Setup Mode

These sections will familiarize you with how setup mode works. Once you understand the basics, use the following sections to select printer options that are compatible with your computer system's hardware and software setup:

- Printing a List of Selected Options
- Deciding Which Options to Change
- MENU1 and MENU2 Items and Options
- Hardware Items and Options
- Print Position Adjustment Items and Options
- Configuration Items and Options

- Head Gap Adjustment Items and Options
- Exiting and Saving

To restore the printer default settings (factory defaults or power-on defaults), see the section **Resetting Defaults** later in this chapter.

For information on using the SELF-TST, HEX-DUMP, and V-ALMNT functions, see the section **Using the Diagnostic Functions** later in this chapter.

For Experienced Users:


Once you are familiar with setup mode, you may want to use the flowchart at the end of this chapter for quick reference. The flowchart lists all printer setup functions, items, and options.

ENTERING SETUP MODE

Before entering setup mode, load continuous forms paper from the front tractor into the printer as described in Chapter 3. Several sheets of paper may be required to make all of your setup mode selections.

To enter setup mode, follow these steps:

- 1. Make sure that front continuous forms paper is loaded and press the PAPER PATH button to select the appropriate paper path.
 - If continuous forms paper is fed from the rear or a CSF is mounted, the printer does not enter SETUP mode.
- 2. Press the ONLINE button to place the printer offline.
- 3. Press the AUTO GAP and HI IMPACT buttons simultaneously until the printer beeps.

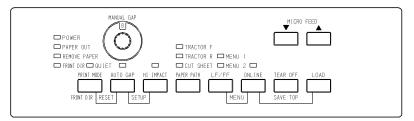


Entering setup mode

If you do not hear a beep or an alarm beep (beeps four times), you are not in setup mode. Place the printer offline and try again.

5-2 User's Manual

4. When the printer enters offline setup mode, it prints the following information.

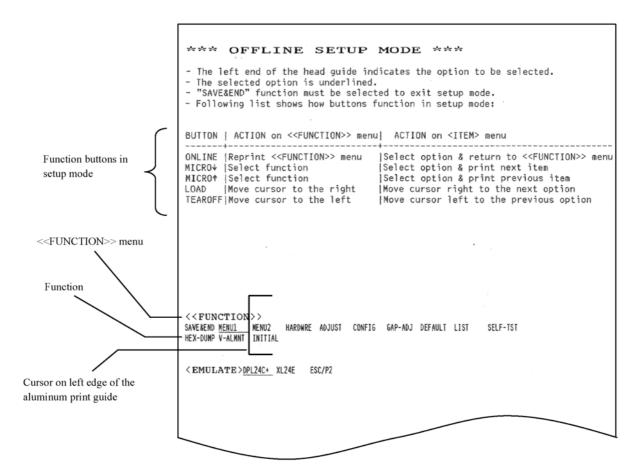

Initial printout in setup mode

The initial printout contains a header, help menu, and <<FUNCTION>> menu. The header tells you that the printer is offline and in setup mode. The help menu provides a quick summary of how to use setup mode. The <<FUNCTION>> menu lists all of the functions available to you in setup mode. Note that the cursor on the left edge of the aluminum print guide is initially positioned at the SAVE & END function.

Setup mode can also be entered by turning off the printer, then turning the printer back on while pressing the AUTO GAP and HI IMPACT buttons simultaneously until the printer beeps.

OVERVIEW OF SETUP MODE

When you enter setup mode, the following <<FUNCTION>> menu is printed:

<< FUNCTION >>

SAVE&END MENU1 MENU2 HARDWRE ADJUST CONFIG GAP-ADJ DEFAULT LIST SELF-TST

HEX-DUMP V-ALMNT INITIAL

Table 5.1 summarizes the purpose of each function.

Table 5.1 Setup Mode Functions

Function	Purpose
SAVE & END	Exits setup mode and saves any changes made while in setup mode.
MENU1 and MENU2	Assigns print features to MENU1 and MENU2 on the printer control panel.
HARDWRE	Changes the printer hardware options.
ADJUST	Changes the print position adjustment options.
CONFIG	Changes the configuration options.
GAP-ADJ	Adjust the gap between the print head and printing paper.
DEFAULT	Resets factory defaults in MENU1 and MENU2.
INITIAL	Resets factory defaults in MENU1, MENU2, HARDWRE, ADJUST, CONFIG, GAP-ADJ.
LIST	Prints a list of all currently selected options.
SELF-TST	Runs the self-test.
HEX-DUMP	Prints hex dumps.
V-ALMNT	Checks and corrects vertical print alignment.

To select a function from the <<FUNCTION>> menu:

- 1. Repeatedly press the "TEAR OFF" or "LOAD" button to position the cursor on the left edge of the aluminum print guide at the function you require.
- Press the ▲ button or the ▼ button to select the function. If the function has items and options, the printer prints the first item and its options. The MENU1, MENU2, HARDWRE, ADJUST, CONFIG, and GAP-ADJ functions contain items that have selectable options. The other functions have neither items nor options.

5-4 User's Manual

The first three MENU1 items and their options are shown below. Items are enclosed in single brackets <>.

To select an option from the <item> menu:

- 1. Repeatedly press the "TEAR OFF" or "LOAD" button to position the cursor on the left edge of the aluminum print guide at the option you require.
- 2. Press the ▼ button to select the option. The printer prints the next item and its options. You can press ▲ to select the option. Then, the printer prints the previous item and its options.
- 3. After selecting the desired options, press the ONLINE button to reprint the <<FUNCTION>> menu.

For each item, the short-underlined option is the current default option (the option currently saved in the printer's permanent memory). In the previous example, the default options are Fujitsu DPL24C PLUS emulation, Courier 10 font, and letter print quality.

The chart on the next page summarizes how to select options such as emulation, font, and print quality and how to use functions that do not have options.

Setup Mode Example


To become familiar with setup mode, try the following example. This example shows how to change the font and pitch in MENU2 to Prestige Elite 12 and 12 cpi.

- 1. Load continuous forms paper.
- 2. Enter setup mode.

Press the AUTO GAP and HI IMPACT buttons simultaneously until the printer beeps.

3. Select the MENU2 function.

Wait for the printer to stop printing and press the "TEAR OFF" or "LOAD" button twice to position the cursor on the left edge of the aluminum print guide at MENU2. Press the "▲" button or the "▼" button to select the MENU2 function and print the <EMULATE> item and its options.

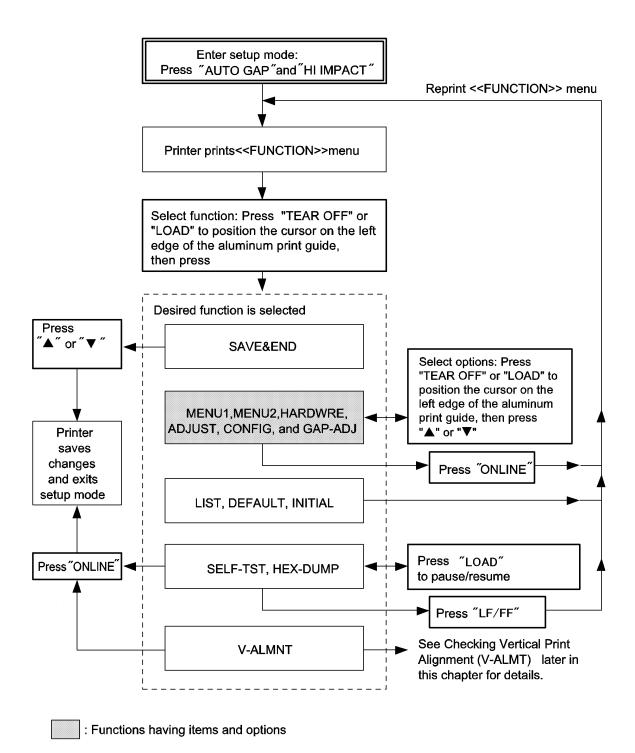

Summary of setup mode

5-6 User's Manual

4. Select the current emulation.

Since you do not want to change the emulation, press the "▼" button to select the current emulation and print the next item, and its options.

5. Change the font to Prestige Elite 12.

Press the "TEAR OFF" or "LOAD" button once to position the cursor on the left edge of the aluminum print guide on PRSTG12. Press the "▼" button to select PRSTG12 and print the next item, <QUALITY>, and its options.

6. Select the current print quality.

Since you do not want to change the print quality, press the ▼ button to select the current print quality and print the next item, <PITCH>, and its options.

7. Change the pitch to 12 cpi and exit the MENU2 function.

Press the "TEAR OFF" or "LOAD" button once to position the cursor on the left edge of the aluminum print guide on 12 CPI. Since you do not want to make any other changes in MENU2, press the ONLINE button to select 12 CPI and exit MENU2. The <<FUNCTION>> menu is then reprinted.

8. Exit setup mode, saving the new font and pitch.

Since the cursor on the left edge of the aluminum print guide is on SAVE & END, press the ▲ MICRO FEED button or the ▼ MICRO FEED button to select SAVE & END. The printer saves Prestige Elite 12 and 12 cpi as the new power-on defaults in MENU2. The printer then exits setup mode and returns online. These settings remain in effect until changed.

Points to Remember

• Whenever you enter setup mode, short help menus are printed at the top of the page. Help menus are also printed when you select the SELF-TST, HEX-DUMP, or V-ALMNT functions.

Use help menus for quick reference while in setup mode.

- When printing the items and options for each function, you can
 only print one item at a time. However, you can move either
 forward or backward in the item list. To move forward (print the
 next item), press the ▼ button. To move backward (print the
 previous item), press the ▲ button.
- While in the <<FUNCTION>> menu or when selecting a function that contains items and selectable options, press the ONLINE button to reprint the <<FUNCTION>> menu.
- A short underline under the first two letters of an option indicates that it is the current default setting. For example, 12 CPI indicates that 12 characters per inch is the default pitch.

To change the default, select and save a new pitch setting.

- While in setup mode, you can use the LIST function to print out a list of the currently selected options (see the next section for details).
- To exit setup mode and permanently save your changes, select the SAVE & END function. For details, see the section Exiting and Saving later in this chapter. To exit setup mode without saving your changes, turn the printer off. Your previous poweron defaults are active when you turn the printer on again.

PRINTING A LIST OF SELECTED OPTIONS

The LIST function prints a list of all the printer's currently selected options. This function is useful for checking the printer settings when you first enter setup mode or just before you exit. To print a list of options, load continuous forms paper and then proceed as follows:

1. Enter setup mode.

Press the AUTO GAP button and the HI IMPACT button simultaneously until the printer beeps. Wait for the printer to stop printing and check that the following <<FUNCTION>> menu is printed:

5-8 User's Manual

2. Select the LIST function.

Repeatedly press the "TEAR OFF" or "LOAD" button to position the cursor on the left edge of the aluminum print guide on LIST. Next press the ▲ button or the ▼ button to select the LIST function. The printer starts to print a list of the currently selected options. The preselected factory settings, also called factory defaults, are shown on the opposite page.

When the printer finishes printing the list of options, it reprints the <<FUNCTION>> menu.

3. Do either of the following:

- Select another function, or
- Exit setup mode, saving any changes you made.

For details about other functions, see the other sections in this chapter. To exit setup mode and save your changes, make sure that the cursor on the left edge of the aluminum print guide is positioned on SAVE & END, then press the ▲ button or the ▼ button.

	1 settin				2 settin		
Euro a	Ttom	Option		Func.	Item		
MENU1	EMULATE	DPL24C+ COUR 10 LETTER 10 CPI 6 LPI NORMAL NORMAL NONE 11.0 IN 1 COLM 1 LINE PAGE437 SET2 NO-SKIP 13.6 IN NO-SLSH ENABLE CR ONLY LF & CR WRAP	-	MENTIO	EMULATE	DDT.24C+	
MENU1	FONT	COUR 10		MENU2	FONT	COUR 10	
MENTI	QUALITY	10 CDT		MENU2 MENU2 MENU2 MENU2 MENU2	DIMON	10 CDT	
MENUL	PITCH	I CPI		MENU2	PITCH	I C T DT	
MENUI MENUI	TIME SP	NODMAT.		MENUZ	TIME SE	NODMAT.	
MENTI1	CHAR-H	NORMAT.		MENII2	CHAR-H	NORMAI.	
MENU1	ATTRIB	NONE		MENU2	ATTRIB	NONE	
MENU1	PAGE LG	11.0 IN		MENU2	PAGE LG	11.0 IN	
MENU1	LFT-END	1 COLM		MENU2	LFT-END	1 COLM	
MENU1	TOP-MRG	1 LINE		MENU2	TOP-MRG	1 LINE	
MENU1	LANGUGE	PAGE437		MENU2	LANGUGE	PAGE437	
MENU1	CHR-SET	SET2		MENU2	CHR-SET	SET2	
MENU1	PRF-SKP	NO-SKIP		MENU2	PRF-SKP	NO-SKIP	
MENU1	WIDTH	13.6 IN		MENU2	WIDTH	13.6 IN	
MENUL	ZEROFNT	NO-SLSH		MENU2	ZEROFNT	NO-SLSH	
MENUI	DC3-CDE	ENABLE		MENU2	DC3-CDE	ENABLE	
MENII1	LE-CODE	LE & CD		MENTIO	LE-CODE	LE C CD	
MENU1	RGHTEND	WRAP		MENII2	RGHTEND	WRAP	
MENU1	==END==	WINT		MENU2	==END==	*******	
			-	MENU2 MENU2			
	ware sett		_		ig settin		
Func.	Item	Option		Func.	Item	Option	
	PPR-OUT				TEAROFF		
	PRT-DIR				TEARPOS		
	BUZZER			CONFIG	CUTLOAD	AUTO	
HARDWRE	WORD-LG	8 BIT		CONFIG	LOADTIM	1.5 SEC DIRECT DISABLE	(*
HARDWRE	BUFFER	8KBYTE		CONFIG	DECODE	DIRECT	
HARDWRE	INTRFCE	AUTO-2S		CONFIG	AREACNT	DISABLE	
HARDWRE	FORMAT	8NONE 1	(*1)	CONFIG CONFIG	CUT-ONL	ONLINE	
HARDWRE	BAUD-RT	9600 XON/XOF IGNORE	(*1)	CONFIG	CNT-ONL	ONLINE	
HARDWRE	PROTOCL	XON/XOF	(*1)	CONFIG	LOCK	NONE	
HARDWRE	DSR	IGNORE	(*1)	CONFIG	//S//	DISABLE	
HARDWRE	DUPLEX	FULL	(*1)	CONFIG CONFIG	FCNT-PE	EDGE	
HAKUWRE	CTS	IGNORE FULL DETECT IGNORE	(*1) (*1)	CONFIG	RCNT-PE	EDGE	
HADDWIDE	==EMD==	TGNOKE	(~ 1)		GATHER CUT-CTL		
HARDWRE	==END==	I 	_	CONFIG	CUT-CTL SKIP-PR	ENARI.E	
					STATUS		
<< Adius	st settir	ngs >>			BANDCTL		
			-		TOF-CTL		
Func.	Item	Option			CUTEDIR		
			-	CONFIG	CSFEDIR	REAR	
ADJUST	FCNTORG	1.8/6IN			CUTEJCT		
ADJUST	FCNTFIN	0 /180 1.8/6IN			FL-CENT		
ADJUST	RCNTORG	1.8/6IN			RL-CENT		
ADJUST	RCNTFIN	0 /180			SKENCNT		
ADJUST	FCUTORG FCUTFIN	1.8/6IN			FF-CODE		
VDO ORT	RCUTORG	1 8/6TN			PRT-CUT CSFBIN1		
	RCUTFIN				CNT-LD		
ADJUST	CNT-LFT	0 /90			CNT-LD CSF-LD		
ADJUST	CUT-LFT			CONFIG	CSFAPTC	NORMAT.	
ADJUST	FCNTADJ	0 /360		CONFIG	LF-CTL	SPEED	
	RCNTADJ			CONFIG	PR-MODE	NORMAL	
ADJUST	FCNTAJL	0 /360		CONFIG	HI-IMPT	DISABLE	
A D.TITCTP	DOMPA.TT.	0 /360		CONFIG	HI-IMPT DQ-MODE	MODE1	
ADJUST	CUT-ADJ	0 /360		CONFIG	==END==		
ADJUST	FCSFADJ	0 /360					
ADJUST	RCSFADJ	0 /360					
ADJUST	CUT-ADJ FCSFADJ RCSFADJ ==END==	 	_	<< Gap /	Adjust s	ettings >>	
				Func.	Item	Option	

^{*1} FORMAT to CD are not printed when PARALEL option is selected for INTRFCE.
It is printed equipped with RS-232C.

*2 TEAR-EN is printed when AUTO option is selected for TEAROFF.

Printout of factory defaults using LIST

5-10 User's Manual

DECIDING WHICH OPTIONS TO CHANGE

The previous page shows a printout of the printer's factory default settings. In this printout, options are listed by functional group:

- Menu 1 settings (MENU1 function)
- Menu 2 settings (MENU2 function)
- Hardware settings (HARDWRE function)
- Print position adjustment settings (ADJUST function)
- Configuration settings (CONFIG function)
- Print head gap adjustment settings (GAP-ADJ function)

Most selectable options only alter print features, such as the typestyle, and page format. However, some options must be selected correctly for the printer to work properly with your hardware and software.

For each function, Table 5.2 lists items whose options must be selected correctly for system and printer accessory compatibility.

Table 5.2 Required Options

Function	Item	Option
MENU1	EMULATE	The emulation selected on the printer must be the same as the emulation selected in your software. If you selected an emulation when you set up the printer (Chapter 2), you do not need to change the EMULATE option unless you want to change to a different emulation. The emulation assigned to MENU1 is the default when you turn the printer on. See the section MENU1 and MENU2 Items and Options later in this chapter.
MENU2	None	If you use MENU2, the emulation selected for MENU 2 must be the same as the emulation selected in your software. See the section MENU1 and MENU2 Items and Options later in this chapter.

Table 5.2 Required Options (Cont.)

Function	Item	Option
HARDWRE	FORMAT BAUD-RT PROTOCL DSR DUPLEX CTS CD	If you have a serial interface, the serial interface options selected on the printer must be the same as the settings you selected using your software or your computer operating system. If the settings are not the same, the printer will not print or will print garbage. See the section Hardware Items and Options later in this chapter.
ADJUST	None	If you are not using software to specify the top margin of the page, use the printer's default top-of-form setting, 1 inch (25.4 mm) from the top of the paper. If you are using software to specify the top margin of the page, change the default setting to 1/6 inch (4.2 mm). See the section Print Position Adjustment Items and Options later in this chapter.
CONFIG	None	You can change the printer's primary configuration. See the section Configuration Items and Options later in this chapter.
GAP-ADJ	None	If you adjust the gap manually or fix the gap, change the setting. See the section Print Head Gap Adjustment Items and Options.

5-12 User's Manual

MENU1 AND MENU2 ITEMS AND OPTIONS

The MENU1 and MENU2 functions allow you to change the print options assigned to MENU1 and MENU2 on the printer control panel. In normal (nonsetup) mode, you can easily switch between the menus for printing, as described in Chapter 4.

MENU1 is invoked when you first turn the printer on.

Select the same emulation on the printer as is selected in your software. If the emulations are not the same, the printer will not work correctly with your software. If you plan to use two different emulations on a regular basis, assign the most frequently used emulation to MENU1. Assign the second emulation to MENU2. All of the other settings available for MENU1 and MENU2 are optional. Some of the items and options will vary with the emulation.

To determine which features your software supports, refer to your software documentation.

Table 5.3 describes the MENU1 and MENU2 items and options. Both functions offer the same items and options. The items in Table 5.3 are listed in the order in which they are printed. Not all items are defined for all emulations and some options vary with the emulation.

The procedure for changing the options is referred to in the section **Setup Mode Example**.

NOTES:

- Underlined options are the factory defaults.
- Asterisks identify items and options that differ for the IBM XL24E and Epson ESC/P2 emulations. The notes are defined at the end of the table.

MENU1 and MENU2 Items	Options	Description
<emulate></emulate>		Select the same emulation as is selected in your software. See the section Selecting an Emulation in Chapter 2 for information on selecting an emulation.
	DPL24C+	Fujitsu DL-series printers (DPL24C PLUS command set)
	XL24E ESC/P2	IBM Proprinter XL24E printers Epson printers using the ESC/P2 command set
		NOTE: When you change the emulation, all MENU1 or MENU2 options are reset to the factory defaults for that emulation.
		For each of the following fonts, the recommended pitch settings are given after the font name. When you change the font, be sure to also change the pitch, if required.
	COUR 10 PRSTG12 COMPRSD BOLDFCE PICA 10 CORRESP OCR-B OCR-A COUR-N COUR-B COUR-I N.SAN-N N.SAN-B N.SAN-I	Courier, 10cpi Prestige Elite, 12cpi Compressed font, 15,17,and 18cpi Boldface, Proportional Pica, 10cpi Correspondence, 10cpi OCR-B, 10cpi OCR-A, 10cpi Courier Normal, 10cpi Courier Bold, 10cpi Courier Italic, 10cpi Nimbus Sans Normal, Prop. Nimbus Sans Bold, Prop. Nimbus Sans Italic, Prop.

5-14 User's Manual

NOTES:

- Underlined options are the factory defaults.
- Asterisks identify items and options that differ for the IBM XL24E and Epson ESC/P2 emulations. The notes are defined at the end of the table.

MENU1 and MENU2 Items	Options	Description
 (continued)	TIMLS-N TIMLS-B TIMLS-I	Timeless Normal, Prop. Timeless Bold, Prop. Timeless Italic, Prop.
	DOWNLD#	Font 0 or font 1 in the printer's download RAM
		See Appendix F for font examples.
<quality></quality>		Select the print quality that most often meets your needs.
	LETTER	Letter print quality. This option provides the highest resolution but the slowest print speed. It cannot be used with the compressed font.
	REPORT	Report print quality. This option provides lower resolution than letter quality, but at twice the speed. If you want only the double speed, regardless of fonts, use the correspondence font. The quality of the correspondence font is higher than that of report.
	DRAFT	Regular draft print quality. This option provides lower resolution than report quality, but at 3.2 times letter speed.
	HI-DRFT	High-speed draft print quality. This option provides lower resolution than draft quality, but at 3.5 times letter speed.
<pitch></pitch>	## CPI	2.5, 3, 5, 6, <u>10</u> , 12, 15, 17, 18, or 20 cpi (characters per horizontal inch)
	PROP SP	Proportional spacing (1/12 inch per character space)

NOTES:

- Underlined options are the factory defaults.
- Asterisks identify items and options that differ for the IBM XL24E and Epson ESC/P2 emulations. The notes are defined at the end of the table.

MENU1 and MENU2 Items	Options	Description
<line sp=""></line>	## LPI	1, 2, 3, 4, 5, <u>6</u> , 7, or 8 lpi (lines per vertical inch)
		6 lpi 3 lpi (double spacing)
		ABCD ABCD
		ABCD
		ABCD ABCD
		ABCD
		ABCD ABCD
		ABCD
<char-w></char-w>		Change also the pitch 2 TIMES or 4 TIMES is selected.
	<u>NORMAL</u>	Standard character width
		ABCD
	2 TIMES	Double character width
		ABCD
	4 TIMES	Quadruple character width
	(*1)	ABCD
<char-h></char-h>		Change also the line spacing if 2 TIMES or 4 TIMES is selected.
	NORMAL	Standard character height
		ABCD abcd
	2 TIMES	Double character height
		ABCD abcd
	4 TIMES	Quadruple character height
	(*1)	ABCD abcd

5-16 User's Manual

NOTES:

- Underlined options are the factory defaults.
- Asterisks identify items and options that differ for the IBM XL24E and Epson ESC/P2 emulations. The notes are defined at the end of the table.

MENU1 and MENU2 Items	Options	Description
<attrib></attrib>		Selects an attribute to add emphasis to your documents.
		Only one attribute may be selected at a time.
	<u>NONE</u>	Standard characters (no attributes)
	ITALICS	Italic printing
	CONDNSD (*1)	Condensed printing
	SHADOW	Double printing with a slight horizontal offset
	BOLD	Double printing at the same position
<page lg=""></page>		Specifies the length of the page in inches.
	## IN	For DPL24C PLUS and IBM XL24E emulations:
		3.0, 3.5, 4.0, 5.0, 5.5, 6.0, 7.0, 8.0, 8.5, <u>11.0</u> (letter size), 11.6 (A4 size), 12.0, 14.0, 18.0 inches, or LINE
		For Epson ESC/P2 emulation: 4.0, 4.5, 5.0,, <u>11.0</u> , 11.5,, 22.0 inches
	LINE	Selecting the page length by specifying number of lines per page (default: 66 lines per page) Selecting this option displays the <pg lx10=""> and <pg lx1="">. Use in combination the <pg lx10=""> to set the tens value of the lines-per-page setting, and the <pg lx1=""> to set the ones value of the lines-per-page setting.</pg></pg></pg></pg>

NOTES:

- Underlined options are the factory defaults.
- Asterisks identify items and options that differ for the IBM XL24E and Epson ESC/P2 emulations. The notes are defined at the end of the table.

MENU1 and MENU2 Items	Options	Description
<pg lx10=""></pg>	Tens value setting for setting number of lines per page	 0 LINE, 10 LINE, 20 LINE, 30 LINE 40 LINE, 50 LINE, 60 LINE, 70 LINE 80 LINE, 90 LINE The LINE setting depends on the line spacing setting 'LINE SP'. When 0 LINE is set, the line spacing value is 11.0 IN (only when both 'PG LX10' = '0 LINE' and 'PG LX1' = '0 LINE' are set).
<pg lx1=""></pg>	Ones value setting for setting number of lines per page	 0 LINE, 1 LINE, 2 LINE, 3 LINE 4 LINE, 5 LINE, 6 LINE, 7 LINE 8 LINE, 9 LINE The LINE setting depends on the line spacing setting 'LINE SP'. When 0 LINE is set, the line spacing value is 11.0 IN (only when both 'PG LX10' = '0 LINE' and 'PG LX1' = '0 LINE' are set).
<lft-end></lft-end>	## COLM	Specifies the print start column for changing the left margin. Printing starts at the position given by this column plus your software-specified left margin. Column 1, 2, 3,, 41 LET-END Software-specified margin

5-18 User's Manual

NOTES:

- Underlined options are the factory defaults.
- Asterisks identify items and options that differ for the IBM XL24E and Epson ESC/P2 emulations. The notes are defined at the end of the table.

MENU1 and MENU2 Items	Options	Description		
<top-mrg></top-mrg>		Specifies the number of space lines for the top margin. The resultant blank space is the <top-mrg> setting minus 1 line. The total size of your top margin is the above resultant value plus the following two settings: top-of-form (default = 1 inch) and the software-specified top margin. If you are using software to specify the top margin, use the default (1 line) for <top-mrg>. 1, 2, 3, 4, 5, 6, 7, 8, 9, or 10 lines</top-mrg></top-mrg>		
	## LINE			

NOTES:

- Underlined options are the factory defaults.
- Asterisks identify items and options that differ for the IBM XL24E and Epson ESC/P2 emulations. The notes are defined at the end of the table.

MENU1 and MENU2 Items	Options	Description
<languge></languge>		Selects a language. Appendix E shows the character sets for each language.
		Two-pass means that diacritical marks are printed separately from their letters and that letters are printed without any reduction.
		The first listing is common to all emulations. Options specific to each emulation are skipped. See the subsequent listings (*2) and(*3).
	USA	American English (Same as code page 437)
	UK	British English
	GERMAN	German
	SWEDISH	Swedish
	PAGE437	Code page 437
	PAGE850	Code page 850
	PAGE860	Code page 860
	PAGE863	Code page 863
	PAGE865	Code page 865
	ECMA94	ECMA 94
	ISO8859	ISO 8859-1
	PG852	Code page 852
	PG852-T	Code page 852 two-pass
	PG855	Code page 855
	PG866	Code page 866
	HUNGARY	Hungarian
	HUNG-T	Hungarian two-pass

5-20 User's Manual

NOTES:

- Underlined options are the factory defaults.
- Asterisks identify items and options that differ for the IBM XL24E and Epson ESC/P2 emulations. The notes are defined at the end of the table.

MENU1 and MENU2 Items	Options	Description	
<languge></languge>	SLOV	Slovenian	
(continued)	SLOV-T	Slovenian two-pass	
	POLISH	Polish	
	POLSH-T	Polish two-pass	
	MAZOWIA	Mazowian	
	MAZOW-T	Mazowian two-pass	
	LATIN2	Latin 2	
	LATIN2-T	Latin 2 two-pass	
	KAMENIC	Kamenicky	
	KAMEN-T	Kamenicky two-pass	
	TURKY	Turkish	
	TURKY-T	Turkish two-pass	
	CYRILIC	Cyrillic	
	IBM437	IBM 437	
	IBM851	IBM 851	
	ELOT928	ELOT 928	
	PG-DHN	Code page DHN	
	LATIN-P	Latin Polish	
	ISO-LTN	ISO Latin	
	LITHUA1	Lithuanian1	
	LITHUA2	Lithuanian2	
	MIK		
	MACEDON	Macedonian	
	PG-MAC		
	ELOT927		

NOTES:

- Underlined options are the factory defaults.
- Asterisks identify items and options that differ for the IBM XL24E and Epson ESC/P2 emulations. The notes are defined at the end of the table.

MENU1 and MENU2 Items	Options	Description
<languge></languge>	ABG	
(continued)	ABY	
	DEC GR	
	HBR-OLD	
	PG862	
	HBR-DEC	
	GREEK 11	
	ISO-TUK	ISO Turkish
	RUSCII	
	LATIN-9	
	WCP1250	Windows-1250
	WCP1251	Windows-1251
	WCP1252	Windows-1252
	(*2)	
	FRENCH	French
	ITALIAN	Italian
	SPANISH	Spanish
	DANISH1	Danish I
	DANISH2	Danish II
	FINNISH	Finnish
	NORWEGN	Norwegian

5-22 User's Manual

NOTES:

- Underlined options are the factory defaults.
- Asterisks identify items and options that differ for the IBM XL24E and Epson ESC/P2 emulations. The notes are defined at the end of the table.

MENU1 and MENU2 Items	Options	Description		
<languge></languge>				
(continued)	DANISH1	Danish I		
	ITALIAN	Italian		
	SPANSH1	Spanish I		
	SPANSH2	Spanish II		
	JAPAN	Japanese		
	NORWEGN	Norwegian		
	LATIN A	Latin American		
	FRENCH	French		
	DANISH2	Danish II		
	KOREA	Korea		
	LEGAL	Legal		
<chr-set></chr-set>	(*2)			
	SET 1	IBM character set 1		
	SET 2	IBM character set 2		
		If a downloaded (soft) font is used, the character set for that font overrides the <chr-set> setting.</chr-set>		
	(*3)			
	<u>ITALIC</u>	Italic characters are available.		
	GRAPHIC	Graphics characters (ruled lines) are available.		

NOTES:

- Underlined options are the factory defaults.
- Asterisks identify items and options that differ for the IBM XL24E and Epson ESC/P2 emulations. The notes are defined at the end of the table.

MENU1 and MENU2 Items	Options	Description	
<prf-skp></prf-skp>		For continuous forms, this option specifies whether an inch is skipped around the perforation. If you are not using software to specify a bottom margin, select SKIP when using thicker, multipart forms.	
	SKIP	One inch is skipped around the perforation.	
	NO-SKIP	The perforation is not skipped. Printing continues in the bottom margin of the page.	
<width></width>	13.6 IN	13.6-inch page width	
	11.4 IN	11.4-inch page width	
	11.0 IN	11-inch page width	
	8.0 IN	8-inch page width	
<zerofnt> (*2)</zerofnt>		Specifies whether to print the number zero with a slash. This is useful to distinguish the capital letter "O" from the number "0". Invalid for some soft fonts.	
	NO-SLSH	0	
	SLASH	ø	

5-24 User's Manual

NOTES:

- Underlined options are the factory defaults.
- Asterisks identify items and options that differ for the IBM XL24E and Epson ESC/P2 emulations. The notes are defined at the end of the table.

MENU1 and MENU2 Items	Options	Description	
<dc3-cde> (*4)</dc3-cde>	ENABLE	Enables the DC1 and DC3 codes. Any data received between DC3 and the next DC1 is ignored.	
	DISABLE	Disables the DC1 and DC3 codes. These codes are then ignored.	
<cr-code></cr-code>	<u>CR ONLY</u>	No line feed is added to a carriage return. ABCDENGE A line feed is added to each carriage return. ABCDEFGH IJKLMNOP	
	CR & LF		
<lf-code> (*2)</lf-code>	LF ONLY	No carriage return is added to a line feed. ABCDEFGH IJKLMNOP	
	LF & CR	A carriage return is added to each line feed. ABCDEFGH IJKLMNOP	

Note

The default value of <LF-CODE> changes with the selected emulations as follows.

"LF&CR" is a default value in the DPL24C+ emulations.

"LF ONLY" is a default value in the XL24E emulations.

NOTES:

- Underlined options are the factory defaults.
- Asterisks identify items and options that differ for the IBM XL24E and Epson ESC/P2 emulations. The notes are defined at the end of the table.

MENU1 and MENU2 Items	Options	Description		
<rghtend></rghtend>	WRAP	End-of-line wrap. Causes a carriage return plus a line feed. ABCD EFGH		
	OVR-PRT	Characters are overprinted at the end of a line. ABOE		
<==END==>		Indicates the end of MENU1 items. Press the ▼ button to print the first item, <emulate>. Press the ▲ button to print the previous item, <rghtend>. Press the ONLINE button to reprint the <<function>> menu.</function></rghtend></emulate>		

- *1 Unavailable in the IBM XL24E emulation
- *2 Unavailable in the Epson ESC/P2 emulations
- *3 Available only in the Epson ESC/P2 emulations
- *4 Available only in the DPL24C+ emulation

5-26 User's Manual

Resetting MENU1 and MENU2

To reset the factory defaults for both MENU1 and MENU2, select the DEFAULT/INITIAL function. For more information, see the section Resetting Defaults later in this chapter. The DEFAULT function cannot reset those options which are handled by the HARDWRE, ADJUST, CONFIG, and GAP-ADJ functions. The INITIAL function can reset those options which are handled by the HARDWRE, ADJUST, CONFIG, and GAP-ADJ functions.

CHANGING HARDWARE OPTIONS

The HARDWRE function defines the printer's hardware operating conditions. If you are using the optional RS-232C serial interface, the serial interface options must be set properly for the printer to function correctly with your system hardware.

Table 5.4 describes the HARDWRE items and options . Items are listed in the order in which they are printed. The procedure for changing the hardware options is described after Table 5.4.

Table 5.4 HARDWRE Items and Options

NOTE: Underlined options are the factory defaults.

HARDWRE Items	Options	Description	
<ppr-out></ppr-out>		Specifies how the printer responds when you run out of paper.	
	CNTONLY	The printer detects paper-out only for continuous forms. Printing stops and the PAPER OUT indicator lights red.	
	DETECT	The printer detects paper-out for both continuous forms and single sheets. Printing stops and the PAPER OUT indicator lights red.	
	IGNORE	The printer ignores paper-out for both continuous forms and single sheets. Printing continues until no more data remains. No PAPER OUT warning is displayed.	

Table 5.4 HARDWRE Items and Options (Cont.)

NOTE: Underlined options are the factory defaults.

HARDWRE Items	Options	Description			
<prt-dir></prt-dir>	<u>BI-DIR</u>	Bidirectional printing. The printer prints in either direction while seeking the next print direction for a shorter print time.			
	UNI-DIR	Unidirectional printing. Unidirectional printing is used for printing vertical lines in tables even if vertical alignment is not adjusted. Unidirectional printing is slower than bidirectional printing.			
<buzzer></buzzer>		Enables or disables	the printer status buzzer.		
	<u>ON</u>	Buzzer on (recomn	nended).		
		The printer beeps to other conditions.	o indicate paperout or		
	OFF	Buzzer off under an	ny conditions.		
<word-lg></word-lg>		To determine the required word length, refer to your computer documentation. Select 8-BIT to print bit image graphics.			
	<u>8 BIT</u>	8-bit word length (used by most computers)			
	7 BIT	7-bit word length (MSB = 0)			
<buffer></buffer>		Assigns buffer memory to input data and downloaded font data.			
		Print buffer	Download buffer		
	NONE	0 byte	128K bytes		
	256BYTE	256 bytes	127.75K bytes		
	2KBYTE	2K bytes	126K bytes		
	8KBYTE	8K bytes	120K bytes		
	24KBYTE	24K bytes	104K bytes		
	32KBYTE	32K bytes	96K bytes		
	96KBYTE	96K bytes	32K bytes		
	128KBYT	128K bytes	0K bytes		

5-28 User's Manual

Table 5.4 HARDWRE Items and Options (Cont.)

NOTE: Underlined options are the factory defaults.

HARDWRE Items	Options	Description	
<buffer> (continued)</buffer>		NOTE: • 0BYTE option is recommended only for graphics application. • With 128KB selected, the printer cannot accept any download font data.	
<intrfce></intrfce>		Selects the type of the interface to the computer.	
	PARALEL	Centronics parallel interface	
	SERIAL	RS-232C serial interface	
	USB	USB interface	
	AUTO-2S	Auto interface selection mode	
	AUTO-4S AUTO-6S	Both interfaces are ready for communication.	
	AUTO10S AUTO15S	• Specify the timing regarding the selected interface as being inactive.	
	AUTO20S	To switch the interface to the optional LAN interface, mount the LAN card with the setup mode set to "AUTO-XS" or "AUTOXXS" under "INTERFCE," which in turn is under "HARDWRE" The interface will automatically switch to the optional LAN interface.	
		To switch the interface to something other than the optional LAN interface, do either of the following:	
		To return the setup mode to "INTERFCE" under "HARDWRE," remove the LAN card.	
		To switch the interface to a fixed interface, set PARALEL,USB with the LAN card mounted, and the setup mode set to "INTERFCE" under "HARDWRE."	

Table 5.4 HARDWRE Items and Options (Cont.)

NOTE: Underlined options are the factory defaults.

HARDWRE Items	Options	Description				
<pre><duplex> item the <intrfce> same as the option</intrfce></duplex></pre>	Serial Interface or USB interface Items. The following <format> to <duplex> items are not printed when you select the PARALEL option for the <intrfce> item. Be sure that the options selected on the printer are the same as the options selected using your computer operating system or your software. Refer to the documentation provided for your computer and software.</intrfce></duplex></format>					
<format></format>		Number of data bits	of data bits			
	<u>8NONE 1</u>	8	None	1		
	8NONE 2	8 None 2				
	8EVEN 1	1 8 Odd 1				
	8ODD 1					
	7EVEN 1					
	7ODD 1 7 Odd					
	7MARK 1	7 Mark 1				
	7SPACE 1	7	Space	1		
	7EVEN 2	7	Even	2		
	7ODD 2	7	Odd	2		
			rmat also incluctal 1. The space	des a start bit. The ce is logical 0.		
<baud-rt></baud-rt>	150 300 600 1200 2400 4800 9600 19200	The baud rate is in bps (bits per second). Select the same baud rate as used by your computer or modem.				

5-30 User's Manual

Table 5.4 HARDWRE Items and Options (Cont.)

NOTE: Underlined options are the factory defaults.

HARDWRE Items	Options	Description
<protocl></protocl>		Indicates data transmission protocol.
	XON/XOF	The DC1 and DC3 codes are used.
	DTR	The Data Terminal Ready signal is used.
	REV-CHL	The Reverse Channel signal is used.
<dsr></dsr>	<u>IGNORE</u>	DSR is ignored by the printer.
	DETECT	DSR is detected by the printer.
<duplex></duplex>	FULL	Simultaneous data transmission occurs in opposite directions.
	HALF	Data transmission occurs in either direction, but not simultaneously.
<cts></cts>	IGNORE	CTS is ignored by the printer.
	<u>DETECT</u>	CTS is detected by the printer.
<cd></cd>	<u>IGNORE</u>	CD is ignored by the printer.
	DETECT	CD is detected by the printer.
<==END==>		Indicates the end of the HARDWRE item list. Press the ▼ button to print the first item, which is <ppr-out>.</ppr-out>
		Press the ▲ button to print the previous item. Press the ONLINE button to reprint the < <function>> menu.</function>

CHANGING PRINT POSITION ADJUSTMENT OPTIONS

When you print using ruled paper, you often want to adjust the print position so that the print sits properly on the ruled lines. The ADJUST function allows you to:

- Set top-of-form position
- Fine-tune top-of-form position
- Fine-tune left print start column (left margin)
- Adjust for accumlative line spacing error in a page

The top edge of your paper is the physical top of the page. The logical top of the page, as "understood" by the printer when loading paper, is called the top-of-form. Printing starts at this position. Note that printing actually starts at the position obtained by adding the following:

- Top-of-form, default = 1.8/6 inch (7.6mm)
- Top margin specified by your software
- Printer TOP-MRG (top margin setting), default = 1 line

Table 5.5 describes the ADJUST items and options. Items are listed in the order they are printed. The procedure for changing top-of-form is described after Table 5.5.

5-32 User's Manual

Table 5.5 ADJUST Items and Options

NOTE: Underlined options are the factory defaults.

HARDWRE Items	Options	Description
<fcntorg></fcntorg>	1/6 IN 1.8/6 IN : 6/6 IN : 66/6 IN	Sets the top-of-form for front continuous forms in increments of 1/6 inch (4.2 mm) from the physical top of the page. The default is recommended if your top margin is not software-specified. A setting of 1/6 inch is preferable when your top margin is software-specified.
<fcntfin></fcntfin>	0/180,, 29/180	Fine-tunes the top-of-form position for front continuous forms. Increases top-of-form in increments of 1/180 inch (0.14 mm).
<rcntorg></rcntorg>	1/6 IN 1.8/6 IN : 6/6 IN : 66/6 IN	Sets the top-of-form for rear continuous forms in increments of 1/6 inch (4.2 mm) from the physical top of the page. The default is recommended if your top margin is not software-specified. A setting of 1/6 inch is preferable when your top margin is software-specified.
<rcntfin></rcntfin>	<u>0/180</u> ,, 29/180	Fine-tunes the top-of-form position for rear continuous forms. Increases top-of-form in increments of 1/180 inch (0.14 mm).

NOTE: Underlined options are the factory defaults.

HARDWRE Items	Options	Description
<fcutorg></fcutorg>	1/6 IN 1.8/6 IN : 6/6 IN : 66/6 IN	Sets the top-of-form for front single sheets in increments of 1/6 inch (4.2 mm) from the physical top of the page. The default is recommended if your top margin is not software-specified. A setting of 1/6 inch is preferable when your top margin is software-specified.
<fcutfin></fcutfin>	<u>0/180</u> ,, 29/180	Fine-tunes the top-of-form position for front single sheets. Increases top-of-form in increments of 1/180 inch (0.14 mm).
<rcutorg></rcutorg>	1/6 IN 1.8/6 IN : 6/6 IN : 66/6 IN	Sets the top-of-form for rear single sheets in increments of 1/6 inch (4.2 mm) from the physical top of the page. The default is recommended if your top margin is not software-specified. A setting of 1/6 inch is preferable when your top margin is software-specified.
<rcutfin></rcutfin>	<u>0/180</u> ,, 29/180	Fine-tunes the top-of-form position for rear single sheets. Increases top-of-form in increments of 1/180 inch (0.14 mm).

5-34 User's Manual

NOTE: Underlined options are the factory defaults.

HARDWRE Items	Options	Description
<cnt-lft></cnt-lft>		Fine-tunes the left print start position for continuous forms.
	-10/90,, <u>0/90</u> , , 10/90	Moves the position left or right in increments of 1/90 inch (0.28 mm).
<cut-lft></cut-lft>		Fine-tunes the left print start position for single sheets.
	-10/90,, <u>0/90</u> , , 10/90	Moves the position left or right in increments of 1/90 inch (0.28 mm).
<fcntadj></fcntadj>	-14/360, -9/360, - 4/360, <u>0/360</u> 4/360, 9/360, 14/360, GRAPHIC(*1)	Compensates for the forms feed error accumulated through feeding of front continuous forms.
<rcntadj></rcntadj>	-14/360, -9/360, - 4/360, <u>0/360</u> 4/360, 9/360, 14/360, GRAPHIC(*1)	Compensates for the forms feed error accumulated through feeding of rear continuous forms.
<fcntajl></fcntajl>	-14/360, -9/360, - 4/360, <u>0/360</u> 4/360, 9/360, 14/360, GRAPHIC(*1)	Compensates for the forms feed error accumulated through feeding of front continuous forms. (Last page)

NOTE: Underlined options are the factory defaults.

HARDWRE Items	Options	Description
<rcntajl></rcntajl>	-14/360, -9/360, - 4/360, <u>0/360</u> 4/360, 9/360, 14/360, GRAPHIC(*1)	Compensates for the forms feed error accumulated through feeding of rear continuous forms. (Last page)
<cut-adj></cut-adj>	-14/360, -9/360, - 4/360, <u>0/360</u> 4/360, 9/360, 14/360, GRAPHIC(*1)	Compensates the line spacing pitch on the basis of the spacing error accumulated for feeding single sheets by 10 inches. Decreases or increases in increments of 1/360 inch in total.
<fcsfadj></fcsfadj>	-14/360, -9/360, - 4/360, <u>0/360</u> 4/360, 9/360, 14/360, GRAPHIC(*1)	Compensates the line spacing pitch on the basis of the spacing error accumulated for feeding single sheets by 10 inches. Decreases or increases in increments of 1/360 inch in total. This option is available only when paper is being loaded in the front cut sheet feeder.
<rcsfadj></rcsfadj>	-14/360, -9/360, - 4/360, <u>0/360</u> 4/360, 9/360, 14/360, GRAPHIC(*1)	Compensates the line spacing pitch on the basis of the spacing error accumulated for feeding single sheets by 10 inches. Decreases or increases in increments of 1/360 inch in total. This option is available only when paper is being loaded in the rear cut sheet feeder.

5-36 User's Manual

NOTE: Underlined options are the factory defaults.

HARDWRE Items	Options	Description
<==END==>		Indicates the end of MENU1 items. Press the ▼ button to print the first item, <fcntorg>. Press the ▲ button to print the previous item, <rcsfadj>. Press the ONLINE button to reprint the <<function>> menu.</function></rcsfadj></fcntorg>

^{*1:} When printing graphics, selecting "GRAPHIC" may result in the printing of clearer graphics.

The CONFIG function defines the printer's primary configuration. You can set the following options to ensure that the printer meets your requirements:

CHANGING CONFIGURATION OPTIONS

- Tear off for continuous forms
- Autoloading of single sheets
- Direct decoding of certain commands
- Enabling of the AREA OVER indicator

Table 5.6 describes the CONFIG items and options. Items are listed in the order they are printed. The procedure for changing the configuration options is described after Table 5.6.

Table 5.6 CONFIG Items and Options

NOTE: Underlined options are the factory defaults.

CONFIG Items	Options	Description
<tearoff></tearoff>	MANUAL	Auto or manual tearoff feed. Automatic tearoff feed is invalid, and tearoff feed must be done using the TEAR OFF button.
	AUTO	Automatic tearoff feed is valid but only for continuous forms. Tearoff feed can also be done using the TEAR OFF button.

5-38 User's Manual

NOTE: Underlined options are the factory defaults.

CONFIG Items	Options	Description
<tearpos></tearpos>		Tearoff position.
	VISIBLE	Select this option when your software positions forms to the next top-ofform after printing the last data. The printer performs tearoff feed without adding a form feed when data transfer has stopped.
	ALWAYS	Select this option when your software stops after printing the last data. The printer performs tearoff feed after adding a form feed when data transfer has stopped.
		Note: For both settings, tearoff positioning will fail if the page length setting does not match the actual perforation spacing.
The following < specified for the		is printed when TEAROFF:AUTO is em.
<tear-en></tear-en>		Tearoff enabled time (offset time).
	0 SEC 1 SEC 2 SEC 4 SEC 6 SEC	The offset time is from when data transfer stops to when the printer performs automatic tearoff feed. If the printer receives data again within the offset time, the printer does not perform automatic tearoff feed.

NOTE: Underlined options are the factory defaults.

CONFIG Items	Options	Description
<tear-en> (continued)</tear-en>		In some application programs, data
		transfer may stop temporarily due to internal processing. This setting can avoid an undesired tearoff feed by waiting for up to six seconds each time data transfer stops.
<cutload></cutload>		Single sheet autoloading.
	<u>AUTO</u>	Single sheet paper is automatically loaded a certain time after you set the paper.
	BUTTON	Single sheet paper can be loaded by pressing the LOAD button.
The following < i is specified for the		m is printed when CUTLOAD:AUTO > item.
<loadtim></loadtim>		Autoload start time.
	0.5, 1.0, <u>1.5</u> , 2.0 2.5, 3.0SEC	Autoloading starts when this amount of time passes after you set single sheet paper.
<decode></decode>		Command decode timing.
	<u>DIRECT</u>	The printer decodes certain commands immediately after receiving data.
		Example:
		ESC SUB I, ESC CR P (DPL24C+) ESC Q # (IBM XL24E)
	QUEUED	The printer decodes commands after storing all data (including commands) in the input buffer. This speeds data reception because the printer does not require decoding time during data reception.

5-40 User's Manual

NOTE: Underlined options are the factory defaults.

CONFIG Items	Options	Description
<areacnt></areacnt>		Area-over detection control.
	ENABLE	Detects the left and right edges of paper when loading the paper. The printer does not print data beyond the edges, but turns on the AREA OVER indicator.
	DISABLE	Does not detect the edges. Select this option when you are using colored or preprinted paper.
<cut-onl></cut-onl>		Printer status after loading paper in offline mode for single sheets.
	OFFLINE	Remains offline after paper loading.
	ONLINE	Goes into online after paper loading.
<cnt-onl></cnt-onl>		Printer status after loading paper in offline mode for continuous forms.
	OFFLINE	Remains offline after paper loading.
	<u>ONLINE</u>	Goes into online after paper loading.
<lock></lock>		Lock function of setup mode.
	<u>NONE</u>	Enables all buttons on the control panel.
	SETUP	Disables the setup-related buttons to keep the printer from entering setup mode during the offline state.
	ALL	Disables the setup-related buttons and the MENU button.
		Once this setting has been selected, setup mode cannot be entered from the control panel. To cancel this setting, turn the power on while simultaneously pressing the HI IMPACT, PAPER PATH, and LF/FF buttons.

NOTE: Underlined options are the factory defaults.

CONFIG Items	Options	Description
/S//		Effectiveness of the Cut Sheet Selection command (//S//).
	DISABLE	Makes the command ineffective.
	ENABLE	Makes the command effective.
		Note: The Cut Sheet Selection command (//S//) changes the paper source to the paper table and waits for manual insertion of a cut sheet.
<fcnt-pe></fcnt-pe>		Detection of end of front continuous forms.
	TRACTOR	Paper end is detected by the sensor on the tractor unit.
		Paper-end unprinted area: Continuous forms: About 101 mm
	<u>EDGE</u>	Regardless of paper end, printing continues near to the edge of paper.
		Paper-end unprinted area: About 4 mm for both continuous forms
<rcnt-pe></rcnt-pe>		Detection of end of rear continuous forms.
	TRACTOR	Paper end is detected by the sensor on the tractor unit.
		Paper-end unprinted area: Continuous forms: About 157 mm
	<u>EDGE</u>	Regardless of paper end, printing continues near to the edge of paper.
		Paper-end unprinted area: About 4 mm for both continuous forms

5-42 User's Manual

NOTE: Underlined options are the factory defaults.

CONFIG Items	Options	Description
GATHER		Setting of ribbon protective control at a line feed on continuous forms
	ENABLE	The protective control is executed.
	<u>DISABLE</u>	The protective control is not executed.
CUT-CTL		Setting of retracting control at canceling TEAR OFF of continuous forms.
	PRCISIN	The precision-prioritized retracting control is executed.
		It retracts a certain amount of paper (the top part of the paper which hangs out from the TOFS), and then moves back to the position before TEAR OFF. If TOFS detects paper end when a certain amount of paper is retracted, it executes the continuous forms save operation and then executes the paper loading operation.
	SPEED	The speed-prioritized retracting control is executed.
		It retracts the paper by the amount the paper was advanced.

NOTE: Underlined options are the factory defaults.

CONFIG Items	Options	Description
SKIP-PR		Setting of printing speed change processing (skip)
	<u>ENABLE</u>	The skip processing is executed.
		When a certain amount of blank spaces are found in a line, it changes the printing speed for the blank spaces.
	DISABLE	The skip processing is not executed.
		It does not change the printing speed for the blank spaces.
		- If the printing speed of the printing data varies before and after the blank spaces (such as LQ characters + blank space + CQ characters), it changes printing speeds regardless of this setting.
STATUS		Setting of the asynchronous status function
	ENABLE	The status information is stored in the send buffer by a nibble mode request.
	DISABLE	The status information is not stored in the send buffer by a nibble mode request.
BANDCTL		Setting of reducing backward line feeds as much as possible. Backward line feeds occur when printing vertical enlargement characters or multi-path characters which involve several printing paths for a print activation.
	ENABLE	Reduce control is performed.
	DISABLE	Reduce control is not performed.

5-44 User's Manual

NOTE: Underlined options are the factory defaults.

CONFIG Items	Options	Description
TOF-CTL		Setting of priority on TOF control to a printer driver specification or a setup specification. TOF control determines the amout of the top margin when paper is fed to the home position.
	<u>DRIVER</u>	Driver specification is given priority.
	SETUP	Setup specification is given priority.
<cutedir></cutedir>		Selection of the eject direction of cut sheets with manually feeding of cut sheets
	<u>FRONT</u>	Ejected to the front.
	REAR	Ejected to the rear.
<csfedir></csfedir>		Selection of the eject direction of cut sheets with use of a CSF
	FRONT	Ejected to the front.
	REAR	Ejected to the rear.
<cutejct></cutejct>		Selection for automatic ejection of cut sheets
	<u>AUTO</u>	Automatic ejection of cut sheets when no cut sheet is detected
	MANUAL	No automatic ejection of cut sheets when no cut sheet is detected
<fl-cent></fl-cent>		Selection of the print carrier position when paper is fed via a front path (with feeding of continuous forms paper from the front, use of a front CSF, and manual feeding of cut sheets)
	POSN1	Position 1: Column 31
	POSN2	Position 2: Column 42

NOTE: Underlined options are the factory defaults.

CONFIG Items	Options	Description
<rl-cent></rl-cent>		Selection of the print carrier position when paper is fed via a front path (with feeding of continuous forms paper from the rear and use of a rear CSF)
	POSN1	Position 1: Column 31
	POSN2	Position 2: Column 42
<skewcnt></skewcnt>		Detection of paper feed skew
	ENABLE	Enables paper feed skew detection.
	DISABLE	Disables paper feed skew detection.
<ff-code></ff-code>		Selection of the method of processing for the FF code is received in cut sheet mode or for the "LF/FF" switch
	<u>EJECT</u>	Ejects cut sheets.
	FORM-FD	Uses a page break.
<prt-cut></prt-cut>		Selection of the cut amount (margin) on both sides of continuous forms paper when AREACNT, the cut amount in continuous printing, is set to ENABLE
	71/180	Sets the cut amount for printing to 71/180 inches (about 10.0 mm).
	99/180	Sets the cut amount for printing to 99/180 inches (about 14.0 mm).
<csfbin1></csfbin1>		Selection of the CSF for bin 1 if both a front CSF and rear CSF are mounted
	FRONT	Front CSF
	REAR	Rear CSF

5-46 User's Manual

NOTE: Underlined options are the factory defaults.

CONFIG Items	Options	Description
<cnt-ld></cnt-ld>		Selection for the paper feeding of continuous forms paper
	PRCISIN	Gives a higher priority to precision.
	<u>SPEED</u>	Gives a higher priority to speed.
<csf-ld></csf-ld>		Selection of the method of feeding from the CSF
	<u>NORMAL</u>	Feeds paper directly from the CSF hopper.
	SWBACK	Feeds paper from the CSF hopper to either the cut sheet table used with a front CSF or the stacker used with a rear CSF. Then, that paper is fed again.
<csfaptc></csfaptc>		Paper thickness detection with use of a CSF
	ALWAYS	Every sheet of paper that is fed
	<u>NORMAL</u>	Sheet of paper that is fed immediately after the feed pin is switched
<lf-ctl></lf-ctl>		Selection for LF mode
	PRCISIN	Gives a higher priority to precision.
	SPEED	Gives a higher priority to speed.
<pr-mode></pr-mode>		Selection for print mode (standard/low noise)
	NORMAL	Prints in standard mode.
	QUIET	Prints in low-noise mode.
<hi-impt></hi-impt>		Selection for high impact printing mode
	DISABLE	Prints in standard impact mode.
	ENABLE	Prints in high impact printing mode.

NOTE: Underlined options are the factory defaults.

CONFIG Items	Options	Description
<dq-mode></dq-mode>		Selection for draft quality printing mode
	MODE1	Prints in 505CPS printing mode.
	MODE2	Prints in 360CPS printing mode.
<==END==>		Indicates the end of the CONFIG item list. Press the ▼ button to print the first item, which is <tearoff>.</tearoff>
		Press the ▲ button to print the previous item. Press the ONLINE button to reprint the < <function>> menu.</function>

5-48 User's Manual

HEAD GAP ADJUSTMENT ITEMS AND OPTIONS

The GAP-ADJ function adjusts the gap between the print head and the paper. The automatic paper thickness control (APTC) feature is built in this printer. If you adjust the gap manually or fix the gap, change the option of GAP-ADJ function.

For the procedure how to change the options refer to the section **Setup Mode Example** earlier in this chapter.

Table 5.7 GAP-ADJ Items and Options

NOTE: Underlined options are the factory defaults.

GAP-ADJ Items	Options	Description
<amount></amount>		Specifies the print head gap.
	<u>AUTO</u>	The print head gap is set automatically.
	MANUAL	Turn the paper thickness dial (indicator) manually.
<==END==>		Indicates the end of the GAP-ADJ item list. Press the ▼ button to print the first item, which is <amount>.</amount>
		Press the ▲ button to print the previous item. Press the ONLINE button to reprint the < <function>> menu.</function>

This section describes how to exit setup mode and save any changes you made:

EXITING AND SAVING

To exit setup mode immediately, select the SAVE & END function.

Any settings changed while in setup mode are saved as the new poweron defaults for the printer. The new defaults remain active until you change them again.

NOTE

The only way to exit setup mode without saving your changes is to turn off the printer. When you turn the printer back on, the previous default settings are used.

Procedure

To exit setup mode and save your changes using SAVE/END, proceed as follows:

1. Print the << FUNCTION>> menu.

The <<FUNCTION>> menu should be the last printed line on the page. If the menu is not printed, press the ONLINE button to print the menu. The <<FUNCTION>> menu is shown below:

<< FUNCTION >>
SAVE&END MENU1 MENU2 HARDWRE ADJUST CONFIG GAP-ADJ DEFAULT LIST SELF-TST
HEX-DUMP V-ALMNT INITIAL

2. Select the SAVE/END function.

Make sure that the cursor on the left edge of the aluminum print guide is positioned under SAVE & END. Press the ▲ button or the ▼ button to select SAVE & END. The printer exits setup mode and returns online (the ONLINE indicator lights green). Any changes you made while in setup mode are saved.

5-50 User's Manual

RESETTING DEFAULTS

This section describes how to reset the printer's power-on defaults, all of the factory defaults, or the factory defaults only for MENU1 and MENU2.

Resetting Power-On Defaults

Power-on defaults are the settings saved in the printer's permanent memory. The defaults are enabled whenever you turn the printer on.

The easiest way to reset the power-on defaults is to turn the printer off and then on again. This method is useful if you have made changes in setup mode that you do not want to save.

Resetting Factory Defaults

Factory defaults are those settings preselected at the factory. For a list of the printer's factory defaults, see the section Printing a List of Selected Options earlier in this chapter. To reset the factory defaults for all functions, proceed as follows:

- 1. Turn off the printer.
- 2. While pressing the LOAD and, TEAR OFF buttons, turn on the printer. Continue to press the two buttons until the printer beeps.

The factory defaults are now reset.

Another available method is to select INITIAL in SETUP mode. The method of making settings is the same as the method for selecting DEFAULT on the next page, except that INITIAL must be selected instead of DEFAULT.

Resetting Factory Defaults in MENU1 and MENU2

This method resets factory defaults for MENU1 and MENU2 options, listed in Table 5.3, but does not reset the printer hardware, print position adjustment, and configuration options. To reset the factory defaults in MENU1 and MENU2, proceed as follows:

1. Enter setup mode.

Press the AUTO GAP button and the HI IMPACT button simultaneously until the printer beeps. Wait for the printer to stop printing and check that the following <<FUNCTION>> menu is printed:

2. Select the DEFAULT function.

Repeatedly press the "TEAR OFF" or "LOAD" button to position the cursor on the left edge of the aluminum print guide on DEFAULT. Press the ▲ button or the ▼ button to select the DEFAULT function. The printer reprints the <<FUNCTION>> menu. The default values in MENU1 and MENU2 are now reset.

3. Do either of the following:

- Select new options for MENU1 or MENU2.
- Exit setup mode, saving the factory defaults.

See the section **MENU1** and **MENU2** Items and Options. To exit setup mode and save the new defaults, make sure that the cursor on the left edge of the aluminum print guide are positioned on SAVE & END, then press the ▲ MICRO button or the ▼ MICRO button.

USING THE DIAGNOSTIC FUNCTIONS

This section describes how to use the following diagnostic functions:

- SELF-TST
- HEX-DUMP
- V-ALMNT

These functions are used for checking print quality and diagnosing printer problems. HEX-DUMP also provides useful information for programmers.

Printing the Self-Test

The SELF-TST function prints test pages to check how the printer operates independently of your computer. The self-test does not check the interface between the computer and the printer.

The self-test prints the printer's firmware version, its resident emulations, and all of the characters available in the currently selected character set.

If the DPL24C PLUS emulation is selected for MENU1, the self-test is printed using the settings currently assigned to MENU1.

5-52 User's Manual

Procedure

This procedure assumes that you are in setup mode. To print the selftest, make sure that continuous forms paper is loaded into the printer.

Then proceed as follows:

1. Print the <<FUNCTION>> menu.

The <<FUNCTION>> menu should be the last printed line on the page. If the menu is not printed, press the ONLINE button to print the menu. If you are using the HEX-DUMP function, press the "TEAR OFF" or "LOAD" button instead of the ONLINE button to print the menu. The following <<FUNCTION>> menu is printed:

2. Select the SELF-TST function.

Repeatedly press the "TEAR OFF" or "LOAD" button to position the cursor on the left edge of the aluminum print guide on SELF-TST, and then press the "\(\Lambda \)" button or the "\(\Lambda \)" button. The printer selects SELF-TST and starts printing. A short help menu is printed at the top of the page, followed by the selftest. Note that the printer is not online during self-test printing.

3. Examine the self-test page.

A sample self-test page is shown in Chapter 2. To pause during self-test printing, press the "LOAD" button. To resume self-test printing, press the "LOAD" button again.

4. Exit the SELF-TST function.

Exit the SELF-TST function in either of the following ways:

- To exit SELF-TST and remain in setup mode, press the LF/FF button. The <<FUNCTION>> menu is then reprinted.
- To exit SELF-TST and return online, press the ONLINE button. The printer permanently saves any changes made while in setup mode and returns online.

The self-test can also be started by turning off the printer, and then pressing the LF/FF button while turning the printer back on. As described in Chapter 2, this method is useful when you first set up the printer.

Printing Hex Dumps

The HEX-DUMP function prints data and commands in hexadecimal characters and abbreviated control codes. The IBM character set 2 is used for printing (see Appendix E). The HEX-DUMP function is useful for checking whether your computer is sending the correct commands to the printer and whether the printer is executing the commands correctly. It is also useful for debugging software programs.

Procedure

To print hex dumps, make sure that continuous forms paper is loaded into the printer. Then proceed as follows:

1. Enter setup mode.

Press the AUTO GAP button and the HI IMPACT button simultaneously until the printer beeps. Wait for the printer to stop printing and check that the following <<FUNCTION>> menu is printed:

2. Select the HEX-DUMP function.

Repeatedly press the "TEAR OFF" or "LOAD" button to position the cursor on the left edge of the aluminum print guide on HEX-DUMP, then press the "▲" button or the "▼" button to select the HEX-DUMP function. The printer goes online and prints a header and a short help menu.

3. Print the hex dump.

To start hex dump printing, send your file or program to the printer. The printer goes online and prints the hex dump.

Press the "LOAD" button to pause during hex dump printing. To resume hex dump printing, press the "LOAD" button again.

NOTE

When hex dump printing stops, the printer remains online in setup mode (the ONLINE indicator is green). To print another hex dump, send another file to the printer.

5-54 User's Manual

Sample hex dump

4. Exit the HEX-DUMP function.

Exit the HEX-DUMP function in either of the following ways:

- To remain in setup mode, press the LF/FF button. The <<FUNCTION>> menu is then reprinted. For details on other functions, see other sections in this chapter.
- To return to online normal mode, press the ONLINE button. If you press the ONLINE button while the hex dump is printing, the printer immediately switches to normal online mode, but data that was sent to the printer is printed.

You can also enter hex dump mode, by turning off the printer, and then turning the printer back on while simultaneously pressing the ONLINE button and the LF/FF button until the printer beeps.

User's Manual 5-55

Checking Vertical Print Alignment (V-ALMNT)

The V-ALMNT function corrects the vertical character displacement that sometimes occurs with bidirectional printing. Characters printed from left to right are not aligned with characters printed from right to left as shown below:

```
This example shows how printing looks when characters are vertically misaligned. Note that the left margin is not straight.
```

If you notice misaligned printing, use the following procedure to check and correct the vertical print alignment.

Procedure

Make sure that continuous forms paper is loaded in the printer. If possible, use forms at least 356 mm (14 inches) wide to avoid printing on the platen. However, you can also use letter or A4 size forms if you set the WIDTH option in MENU1 to 8 inches. See the section Changing MENU1 and MENU2 Items and Options for details. Then proceed as follows to check and correct vertical print alignment:

1. Enter setup mode.

Press the AUTO GAP button and the HI IMPACT button simultaneously until the printer beeps. Wait for the printer to stop printing and check that the following <<FUNCTION>> menu is printed:

```
<< FUNCTION >>
SAVE&END MENU1 MENU2 HARDWRE ADJUST CONFIG GAP-ADJ DEFAULT LIST SELF-TST
HEX-DUMP V-ALMNT INITIAL
```


2. Select the V-ALMNT function.

Repeatedly press the "TEAR OFF" or "LOAD" button to position the cursor at V-ALMNT, then press the "▲" button or the "▼" button to select the V-ALMNT function. The printer prints the help menu then starts printing rows of parallel bars using letter quality speed.

5-56 User's Manual

3. Adjust the vertical print alignment at letter quality speed.

Examine the parallel bars. If the bars are aligned (not jagged), go to step 4. If the bars are offset to the left, repeatedly press the "V" button until the bars are aligned. If the bars are offset to the right, repeatedly press the "A" button until the bars are aligned. (In the following figure, the first line is assumed to be printed from left to right.)

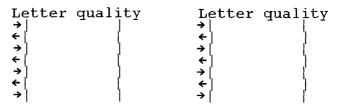

Bars offset to the left

Bars offset to the right

4. Adjust the vertical print alignment at correspondence speed.

Press the "TEAR OFF" button to switch from letter speed to correspondence speed.

Examine the parallel bars and adjust the vertical print alignment as described in step 3.

Press the HI IMPACT button to enter Hi Impact mode. Make similar adjustments.

5. Adjust the vertical print alignment at draft speed.

Press the "TEAR OFF" button to switch from correspondence speed to draft speed.

Examine the parallel bars and adjust the vertical print alignment as described in step 3.

Press the HI IMPACT button to enter Hi Impact mode. Make similar adjustments.

6. Adjust the vertical print alignment at high draft speed.

Press the "TEAR OFF" button to switch from draft speed to high draft speed.

Examine the parallel bars and adjust the vertical print alignment as desoribed in step 3.

Press the HI IMPACT button to enter Hi Impact mode. Make similar adjustments.


7. Exit the V-ALMNT function.

Press the ONLINE button to exit the V-ALMNT function and save the new vertical alignment settings. The printer exits setup mode and returns online.

NOTE

To exit the V-ALMNT function, you must exit setup mode.

User's Manual 5-57

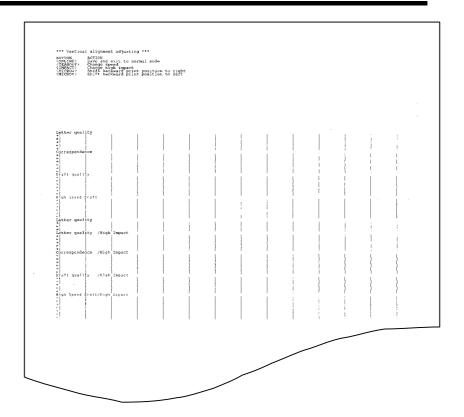


Correct vertical print alignment

SETUP MODE REFERENCE


The following flowchart shows how setup mode is organized for the Fujitsu DPL24C PLUS emulation. Differences in the IBM Proprinter XL24E and Epson ESC/P2 emulations are summarized after the flowchart.

5-58 User's Manual


DPL24C PLUS ORGANIZATION

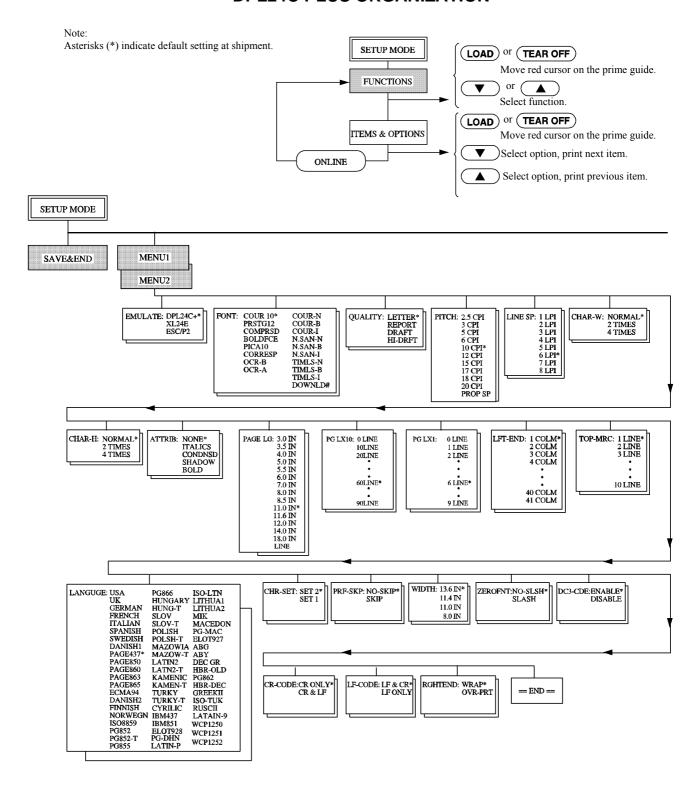

User's Manual 5-59

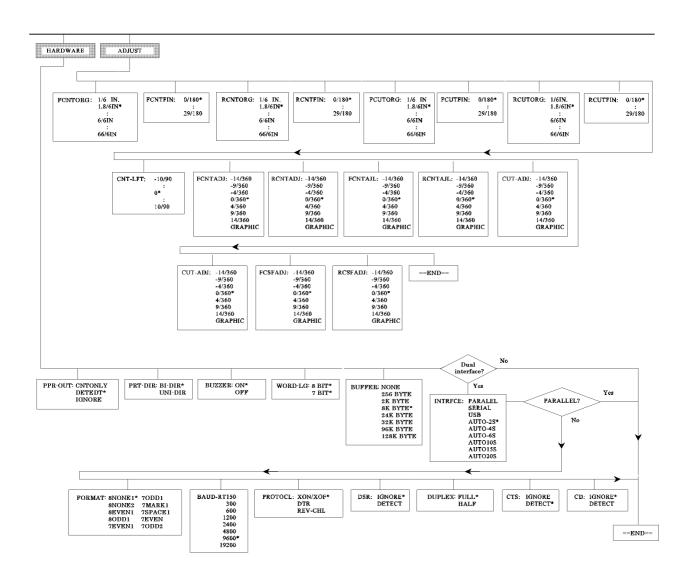

5-60 User's Manual

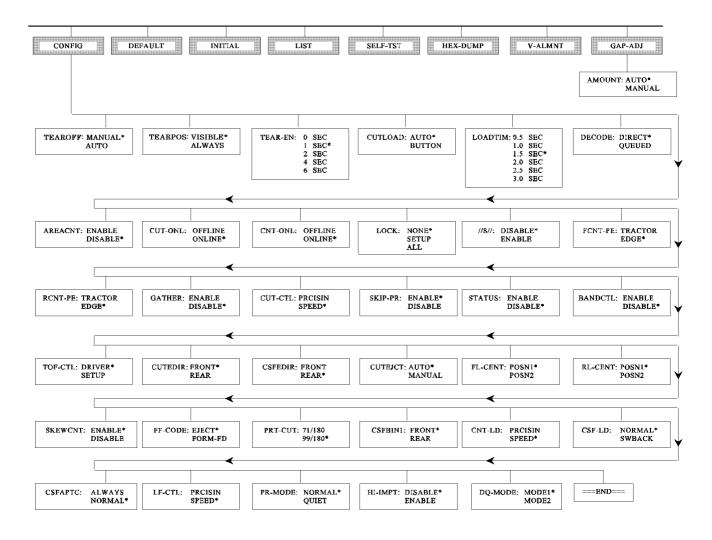

User's Manual 5-61


Differences in IBM Proprinter XL24E Emulation

In the IBM Proprinter XL24E emulation, MENU1 and MENU2 differ from the DPL24C PLUS emulation in the following ways:

The following options are different:




The AGM item is provided:

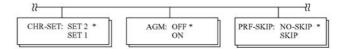

Differences in Epson ESC/P2 Emulation

In the Epson ESC/P2 emulation, MENU1 and MENU2 differ from the DPL24C PLUS emulation in the following ways:

- The ZEROFNT and LF-CODE items are not defined.
- The following options are different:

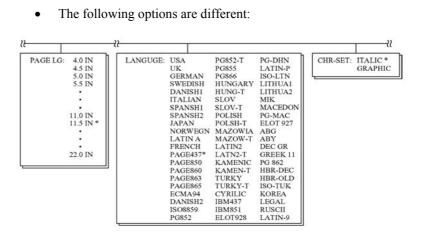

5-62 User's Manual

ONLINE SETUP MODE

The preceding sections describe offline setup mode. This section introduces online setup mode. The tedious task of setting up printer features one-by-one from the control panel and printing and checking the desired options on paper can be avoided by using online setup mode. In online setup mode, printer features are set via the computer rather than the printer control panel.

Put the printer in online setup mode, in either of the following two ways:

- Turn the printer off and then turn the printer back on while pressing the TEAR OFF button. Hold down the button until the printer beeps.
- Issue the printer command ESC e ONLINE. This command is valid in any emulation.

Send setup data from the computer in any of the following three ways:

- Enter setup data directly from the computer keyboard before starting your job. With MS-DOS, hold down the Ctrl key and type P. Data entered from the keyboard is sent directly to the printer. When data entry is complete, hold down the Ctrl key again and type P. This method is useful when just a few settings need to be changed.
- Use an editor program to prepare a setup data file and then send the file to the printer using a command before starting your job.
 With MS-DOS, use the COPY command. This method is useful when settings are used repeatedly.
- Write a program that enables interactive entry of setup data on the CRT screen. This method is the most useful of the three. This printer is provided with a floppy disk which contains this program called DLMENU. For DLMENU, see the last section of chapter 2.

To exit from online setup mode, send EXIT as the last setup data.

For details of setup data and its format, refer to the programmer's manual for each emulation.

User's Manual 5-63

5-64 User's Manual

6

MAINTENANCE

Your printer requires very little care. Occasional cleaning and replacement of the ribbon cartridge are all that is required.

Lubrication of the printer is usually not necessary.

If the print head carriage does not move smoothly back and forth, clean the printer as described in this chapter. If the problem continues, contact your dealer to determine whether lubrication might be needed.

CLEANING

The front cover, the rear stacker, and the paper table of the printer help protect against dust, dirt, and other contaminants. However, paper produces small particles that accumulate inside the printer. This section explains how to clean and vacuum the printer and how to clean the platen.

It is easier to clean the printer when the front cover and the rear stacker are removed.

Cleaning and Vacuuming the Printer



WARNING

To avoid any possibility of injury, before cleaning the printer, turn off the power to both the printer and the computer, and unplug the printer.

Use the following procedure to clean and vacuum the printer as required:


- 1. Remove any paper from the printer. Make sure that the power is off, and then disconnect the printer power cord.
- 2. Using a soft vacuum brush, vacuum the exterior of the printer. Be sure to vacuum the air vents at the front, left sides, and bottom of the printer. Also vacuum the paper table, rear stacker, and the cut sheet feeder.
- 3. Use a soft, damp cloth to wipe the exterior of the printer, including the cover, paper table, and rear stacker. A mild detergent may be used.

CAUTION

Do not use solvents, kerosene, or abrasive cleaning materials that may damage the printer.

User's Manual 6-1

4. Open the front cover of the printer and remove the ribbon cartridge. Using a soft vacuum brush, gently vacuum the platen, print head carriage, and surrounding areas. You can easily slide the print head to the left or right when the power is off. Be careful not to press too hard on the flat ribbon cable that extends from the print head carriage.

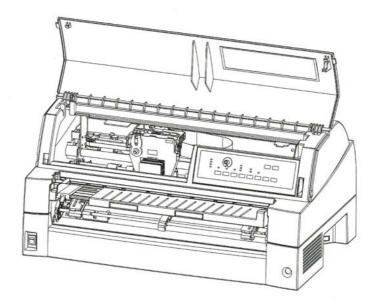

Printer interior

- 5. Re-install the ribbon cartridge. Close the front cover.
- 6. Raise the paper table and rear stacker. Vacuum the forms tractors and surrounding areas.

Cleaning the Platen

Clean the platen about once a month to remove excess ink. Use the platen cleaner recommended by your supplier and proceed as follows:

1. Apply a small amount of platen cleaner to a soft cloth. Avoid spilling platen cleaner inside the printer.

CAUTION

Do not use alcohol to clean the platen. Alcohol may cause the rubber to harden.

- 2. Place the cloth against the platen.
- 3. To dry the platen, place a dry cloth against the platen.

6-2 User's Manual

REPLACING THE RIBBON

There are two ways of replacing the ribbon. You can install a new ribbon cartridge in the printer or refill the old ribbon cartridge with new ribbon from a ribbon subcassette. Appendix A lists order numbers for ribbon cartridges and ribbon subcassettes. The following procedure is for ribbon cartridges. For ribbon subcassettes, refer to the instructions shipped with the subcassette.

To replace the ribbon cartridge:

1. Turn off the printer.

Note:

If the power is turned off during or immediately after printing, turn on the power again. Verify that the print head has moved to the ribbon replacement position, and then turn off the power again.


Open the front cover of the printer. For easy installation, slide
the print head carriage to a position for replacing the ribbon
cartridge (indicated by the triangle marking on the front of the
upper cover).



CAUTION <HOT>

The print head and metal frame is hot during printing or immediately after printing. Do not touch them until it cools down.




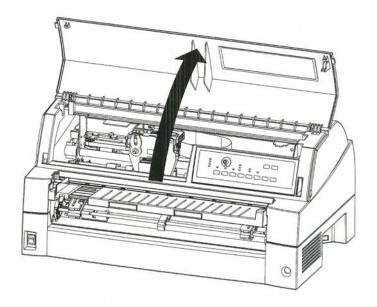

Preparing the printer to install the ribbon cartridge

User's Manual 6-3


3. To remove the ribbon cartridge, press the ribbon release levers located on either side of the cartridge and carefully lift the cartridge out of the printer.

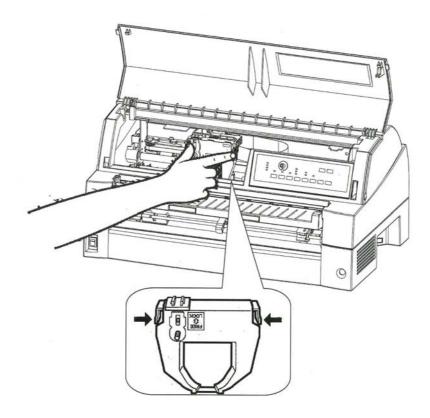

Removing the ribbon cartridge

4. Remove the new ribbon cartridge from its package. Push in the sides of the two ribbon release tabs. The tabs will snap into the cartridge and the ribbon feed mechanism will engage.


Turn the ribbon feed knob clockwise to be sure that it feeds properly.

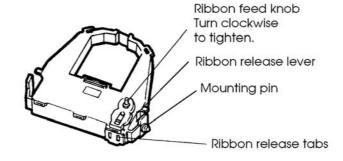

Preparing the new ribbon cartridge

6-4 User's Manual

5. Place the two mounting pins on the ribbon support brackets of the head cartridge. (The two mounting pins are located on the sides of the ribbon release levers.) Insert the ribbon so that the ribbon falls between the nose of the print head and the plastic print guide.

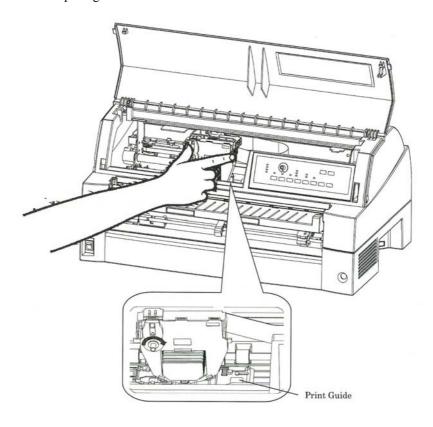

Installing the new ribbon cartridge

- 6. Press the ribbon release levers until the mounting pins snap into the holes on the ribbon support brackets. Gently pull on the cartridge to verify that the pins are securely positioned in the holes.
- 7. Turn the ribbon feed knob clockwise to tighten the ribbon.
- 8. Close the front cover of the printer.

Note:

The buzzer may sound if the print head is moved while the power supply is ON.

User's Manual 6-5

REPLACING THE PRINT HEAD

The print head is easy to replace.




(HOT)

CAUTION <HOT>

The print head and metal frame is hot during printing or immediately after printing. Do not touch them until it cools down.

To remove the print head:


- 1. Turn off the printer.
- 2. Open the front cover of the printer and remove the ribbon cartridge.
- 3. Pull the left end of the head lock wire forward to release it from the hook at the left of the print head carriage. Then release the wire from the center hook.
- 4. Release the wire (under the head) on the left side.

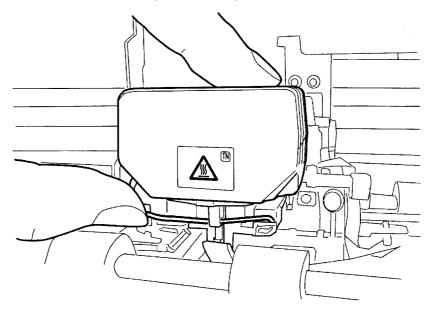

6-6 User's Manual

5. Remove the print head from the connector on the carriage, as shown in the figure below.



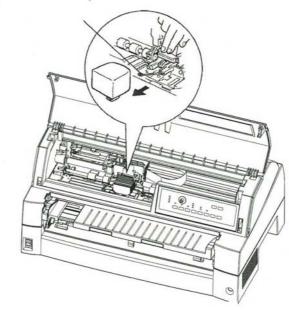

Replacing the print head


To install the print head:

- 1. Carefully fit the mounting guide grooves of the print head on the locating studs on the carriage.
- 2. Push the print head into the connector and hook the wire into place in the reverse order of removal.

User's Manual 6-7

Opening and closing the control panel


The control panel of this printer can be pulled down toward the front as necessary, such as when jammed paper must be removed.

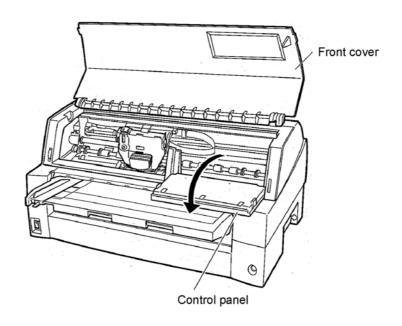

Removing the stacker unit

The stacker unit of this printer can be removed in the event that paper is jammed in it unit.


While pushing down the lock levers of the stacker guide, pull out the stacker unit from the rear.

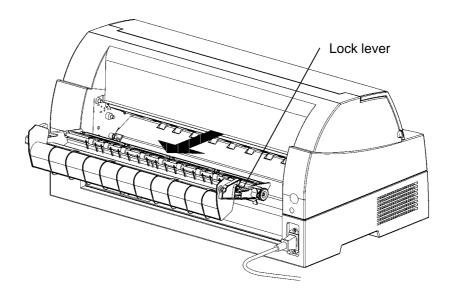

6-8 User's Manual

Mounting the stacker unit

Position groove 1 over guide pin 1 on the right and left sides of the stacker unit. Then, push in the stacker unit until guide pin 2 is hooked onto slot 2.

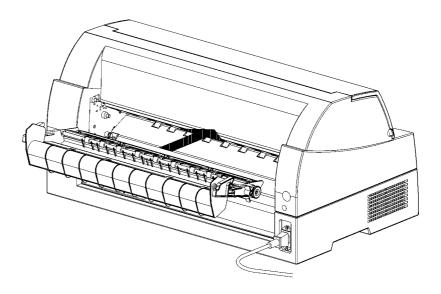

User's Manual 6-9

6-10 User's Manual

7

TROUBLE-SHOOTING

Your printer is extremely reliable, but occasional problems may occur. You can solve many of these problems yourself, using this chapter.

If you encounter problems that you cannot resolve, contact your dealer for assistance.

This chapter is organized as follows:

- Solving problems
- Diagnostic functions
- Getting help

SOLVING PROBLEMS

The tables in this section describe common printer problems and their solutions. The following types of problems are considered:

- Print quality problems
- Paper handling problems
- · Operating problems
- Printer failures

Print Quality Problems

Poor print quality or other printing problems are often caused by incorrect printer setup or incorrect software settings. A gradual decrease in print quality usually indicates a worn ribbon. Table 7.1 identifies common print quality problems and suggests solutions.

User's Manual 7-1

Table 7.1 Print Quality Problems and Solutions

Problem	Solution				
Printing is too light or too dark.	Make sure that the ribbon cartridge is properly installed and that the ribbon feeds smoothly. Check ribbon wear. Replace the ribbon if				
	necessary.				
Stains or smudges appear on the page.	Check ribbon wear. Replace the ribbon if necessary.				
	Check whether the tip of the print head is dirty. Clean the head with a soft cloth if necessary.				
The page is blank.	Make sure that the ribbon cartridge is properly installed.				
Printing is erratic or the wrong characters are	Make sure that the interface cable is securely connected to both the printer and computer.				
printed. One or more "?" characters are printed.	Make sure that the printer emulation selected in your software is the same as the emulation selected on the printer. See the section Selecting an Emulation in Chapter 2.				
	If you are using an RS-232C serial interface, make sure that the serial settings required by your software or computer are the same as the settings on the printer. See the section Hardware Items and Options in Chapter 5.				
Characters are lost at the left or right end.	If you are using the area-over print prevention function (option), make sure that paper size, paper position, and left and right margins are properly set. See the section Configuration Items and Options in Chapter 5.				
	Note that printing with paper skewed causes characters even in the printable area to be lost.				

7-2 User's Manual

Table 7.1 Print Quality Problems and Solutions (Cont.)

Problem	Solution
Printing is vertically misaligned (jagged).	Use the printer's V-ALMNT function to check the vertical print alignment. If necessary, adjust the print alignment. See the section Using the Diagnostic Functions in Chapter 5.
The top margin is wrong.	The top margin is the sum of the top-of-form setting, the software-specified top margin, and the printer's TOP-MRG setting. Proceed as follows:
	• Make sure that the top-of-form setting is correct. The factory default is 25.4 mm (1 inch). See the section Changing Top-of Form in Chapter 5.
	Check the software-specified top margin. Refer to your software documentation.
	• Check the printer's TOP-MRG setting. See the section MENU1 and MENU2 Items and Options in Chapter 5.
Lines are double	Check the line spacing setting in your software.
spaced instead of single spaced.	Change the CR-CODE setting in the printer setup mode to CR ONLY. See the section MENU1 and MENU2 Items and Options in Chapter 5.
The printer overprints on the same line.	Change the CR-CODE setting in the printer setup mode to CR & LF. See the section MENU1 and MENU2 Items and Options in Chapter 5.
The next print line starts where the previous line ended instead of at the left margin.	Change the LF-CODE setting in the printer setup mode to LF & CR. See the section MENU1 and MENU2 Items and Options in Chapter 5.

User's Manual 7-3

Paper Handling Problems

Table 7.2 describes common paper handling problems and suggests solutions. See Chapter 3 for detailed procedures on loading and using paper.

Table 7.2 Paper Handling Problems and Solutions

Problem	Solution			
Paper cannot be loaded or fed.	Make sure that the paper path indicator (FRONT TRACTOR, REAR TRACTOR, CUT SHEET) lights correctly.			
	Press the PAPER PATH button to select the paper path.			
	Make sure that the paper covers the paper- out sensor, i.e., the left paper edge is within 52 mm for single sheets or 41 mm for continuous forms from the left edge of the platen. (This problem cannot occur if you use the forms tractor unit or insert a single sheet with its left edge in contact			
	with the left paper guide.)			
	Make sure that the tractor unit is correctly installed and that the tractor shaft gear engages the platen shaft gear.			
	If you are using a cut sheet feeder, make sure that the bin lever is set to the "CLOSED" position. (The bin lever is on the left side of the feeder.)			
	If you are using a cut sheet feeder, make sure that the feeder is firmly mounted on the printer and the cable is correctly connected.			
Paper manually loaded is ejected without printing	If you are using the paper skew detection (option), adjust the paper guide on the paper table for the print start position and correctly slide the sheet along the guide.			

7-4 User's Manual

Table 7.2 Paper Handling Problems and Solutions (Cont.)

Problem	Solution						
Paper jams while loading.	Turn off the printer and remove the jammed paper. Remove any obstructions from the paper path.						
	If you are using a cut sheet feeder, make sure that the bin lever is set to the "CLOSED" position. (The bin lever is on the left side of the feeder.)						
	Make sure that the paper is not folded, creased, or torn.						
	Reload the paper.						
	Make sure that the paper table is in normal mode. Set the paper table to normal mode.						
Paper jams while printing.	Turn off the printer and remove the jammed paper. Remove any obstructions from the paper path.						
	For continuous forms, make sure that the incoming and outgoing paper stacks are correctly placed. Paper should feed straight.						
	Make sure that the paper table is in normal mode. Set the paper table to normal mode.						
	If you are using a cut sheet feeder, make sure that the bin lever is set to the "CLOSED" position. (The bin lever is on the left side of the feeder.)						
	Reload the paper.						
Paper slips off the forms tractors or the perforated holes of the paper tear during printing.	Make sure that the forms tractors are positioned correctly for the width of your paper and that the perforated holes of the paper fit directly over the tractor sprockets.						

User's Manual 7-5

Operating Problems

Table 7.3 identifies common operating problems and suggests solutions. If you cannot resolve a problem, contact your dealer.

Table 7.3 Operating Problems and Solutions

Problem	Solution					
The power does not turn on.	Make sure that the "I" on the printer power switch is depressed.					
	Make sure that the power cord is securely connected to both the printer and the outlet. Make sure that the power outlet is functional.					
	Turn the power off. Wait 100 seconds and then turn the printer on again. If the printer still has no power, contact your dealer.					
The printer is on but it	Make sure that the printer is online.					
will not print.	Make sure that the interface cable is securely connected to both the printer and the computer.					
	If the red PAPER OUT indicator is lit, load paper.					
	Run the printer self-test (see Chapter 5). If the self-test executes normally, the problem is caused by the interface, the computer, incorrect printer settings, or incorrect software settings.					
	Make sure that the printer emulation selected in your software is the same as the emulation selected on the printer. See the section Selecting an Emulation in Chapter 2.					
	Make sure that the front cover is completely closed.					
The printer is on but it will not print (continued).	If you are using an RS-232C serial interface, make sure that the serial settings required by your software or computer are the same as the settings on the printer. See the section Hardware Items and Options in Chapter 5.					
The cut sheet feeder does not operate.	Make sure that the cut sheet feeder is firmly mounted on the printer.					
	Make sure that the cable is correctly connected.					
The FRONT DIR indicator blinks.	Remove the printed sheet of paper from the paper table.					

7-6 User's Manual

Printer Failures

A user cannot generally resolve a problem involving defective printer hardware. On detecting a fatal error, the printer will:

- Stop printing
- Beep four times
- Turn the ONLINE indicator off

The control panel displays alarms. The meanings of alarms can be checked in the following table.

User's Manual 7-7

Alarm display function

This printer has a function for distinguishing between alarms by using the blinking of individual lamps on the control panel.

From the combination of blinking lamps in an alarm state, the meaning of the alarm can be determined as shown in the following table.

Lamp Alarm name	PAPER OUT	REMOVE PAPER	FRONT DIR	QUIET	AUTO GAP	HI IMPACT	TRACTOR F	TRACTOR R	CUT SHEET	MENU1	MENU2	ONLINE	Condition of occurrence
LES alarm	0	0					0						LES could not be detected during the space initial operation.
Space problem alarm	©	©						©					The shield board could not be detected normally by the LRES sensor.
Fan alarm	0	0							0				The cooling fan for the space motor was stopped.
HCPP (cut sheet or continuous forms paper switching) alarm	0		©					©					Switching between cut sheet paper and continuous forms paper was not possible.
Overload alarm	©			©			©						An overload occurred during printing, and tripartite printing was performed. However, the power source voltage was not restored.
Low voltage alarm	©			©				©					The power source voltage dropped below the specified level when no printing was in progress.
APTC gap alarm	©				©		©						During the APTC operation, paper was detected immediately after the start of approach motion, or no paper was detected.
APTC hop position sensor alarm	0				©			0					During the APTC operation, no reference position was detected.
ROM/RAM alarm	©					©	©						A sum-check error or read/write error occurred, or no CG-ROM is mounted.
Sector protect alarm	0					©		©					A sector protect check of flash ROM was performed, but no sector protect information was found.

BlinkingBlank: Off

7-8 User's Manual

Responses to alarm occurrences

Your first response to each alarm should be as described in the following table.

Problem	Solution
LES alarm	Remove any paper dust, which may cause problems in carriage operation.
APTC gap alarm	Check the paper thickness (0.04 to 0.57 mm). Check whether the paper has different thicknesses or whether the paper has filing holes.

For problems other than the above, request your printer dealer to make repairs.

The following errors cause the printer to turn off the power:

- Print head error
- Space motor error
- Line feed motor error
- +34 V overvoltage error

No error condition is displayed if any of these errors occurs.

Turn the printer off and back on, then rerun the same job to check if the error was transient. If the error recurs, contact your dealer.

DIAGNOSTIC FUNCTIONS

The printer diagnostic functions are SELF-TST, HEX-DUMP, and V-ALMNT.

- SELF-TST tells you whether the printer hardware is functioning correctly. If the printer hardware is functional, any problems you are having are probably caused by incorrect printer settings, incorrect software settings, the interface, or the computer.
- HEX-DUMP allows you to determine whether the computer is sending the correct commands to the printer, and whether the printer is executing the commands correctly. This function is useful to programmers or others who understand how to interpret hex dumps.
- V-ALMNT allows you to check and, if necessary, correct the printer's vertical print alignment.

For details on using these functions, all of which are available in the printer setup mode, see the section **Using the Diagnostic Functions** in Chapter 5.

User's Manual 7-9

GETTING HELP

If you are not able to correct a problem using this chapter, contact your dealer for assistance. Be prepared to provide the following information:

- Your printer model number, serial number, and date of manufacture. Look for this information on the rating label at the back of the printer.
- Description of the problem
- Type of interface you are using
- Names of your software packages
- List of the printer default settings. To print the default settings, see the section **Printing a List of Selected Options** in Chapter 5.

7-10 User's Manual

INSTALLING OPTIONS

8

The installaion of options allows you to expand the capabilities of your printer. Options available for the printer include:

- LAN card
- Cut sheet feeder
- Tractor unit
- Large stacker
- Large Paper Table

The LAN card is a user installable option, but can be installed only on a printer model with the parallel and USB interfaces. For information on the installation procedure, refer to the manual that comes with the LAN card

Options can be purchased from your dealer. Order numbers for options are given in Appendix A.

INSTALLING THE CUT SHEET FEEDER

This chapter describes what to do after installing cut sheet feeder.

A cut sheet feeder (SF940) allows you to automatically feed single sheets. It can be mounted on the front or the rear of the printer.

When attaching the cut sheet feeder to the front of the printer, remove the tractor

For both front and rear, the cut sheet feeder can handle a max. of 5-ply multipart media.

When installing the front and rear cut sheet feeders, the printer assigns the first bin to the front feeder. You can change the assignment using set up mode.



Electric shock

Before mounting or removing the cut sheet feeder, turn off the power switches of the personal computer and the printer and remove the power plug from the outlet. Otherwise, you may receive electric shock.

User's Manual 8-1


Installing on the front side of the printer

1. Turn off the printer power.

Confirm that the printer power is turned to the O side.


2. Removing the tractor unit

Raise the paper table and remove the tractor unit. (For details on mounting and removing the tractor unit, see "Selecting the Tractor Unit Position" on page 2-10.)

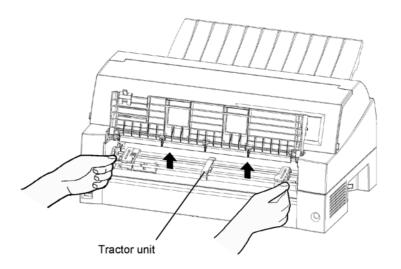


3. Installing the cut sheet feeder

Adjust the U slots made on both sides of the cut sheet feeder to the mounting pins inside the printer and lower the cut sheet feeder slowly.

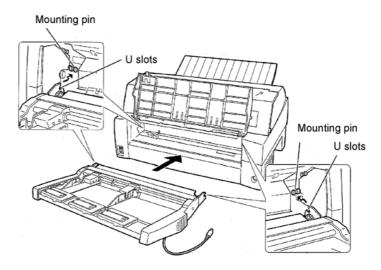

Check that the cut sheet feeder frame is correctly mounted on mounting pin 2.

8-2 User's Manual

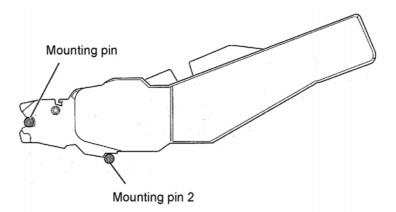


4. Replacing the paper table

Be sure to replace the paper table. (See "Setting the paper table" on page 2-5.)

If the paper table is incorrectly set, a paper jam may occur.


5. Connecting the cable

Connect the cut sheet feeder cable to the connector on the front right of the printer. Insert the cable with the connector arrow mark up.

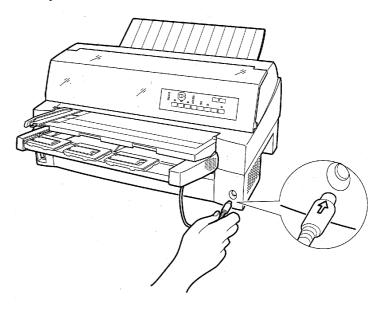

User's Manual 8-3

6. Extend the extension and extension wire in the order from (1) to (2) according to the size of the paper to be used.

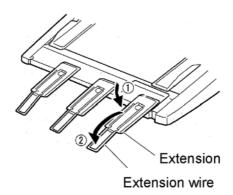

Installing on the rear side of the printer


Before mounting the cut sheet feeder, turn off the printer power.

1. Turn off the printer power.

Confirm that the printer power is turned to the O side.


2. Installing the cut sheet feeder

Open the rear stacker. Hold both sides of the cut sheet feeder and adjust the U slots made on both side of the cut sheet feeder to the mounting pins inside the printer. (Attach the slots with the letter A of the cut sheet feeder adjusted to that on the printer side.) Then, lower the cut sheet feeder like it turns in the direction of arrow B, using the mounting pins as supporting points.

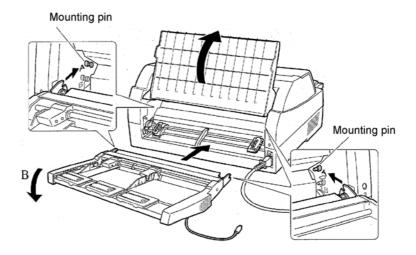


8-4 User's Manual

Check that the cut sheet feeder frame is correctly mounted on mounting pin 2.

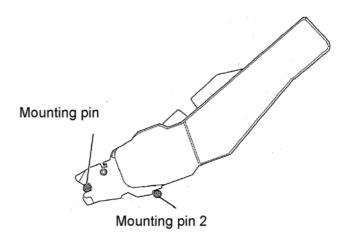


3. Close the rear stacker.

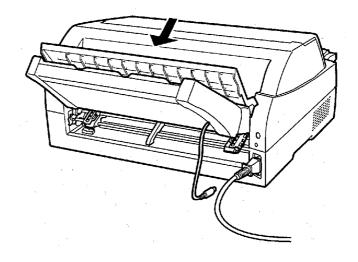


User's Manual 8-5

4. Connecting the cable

Connect the cut sheet feeder cable to the connector on the rear right of the printer. Insert the cable with the connector arrow mark up.

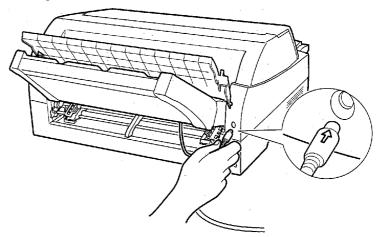

5. Extend the extension and extension wire in the order from (1) to (2) according to the size of the paper to be used

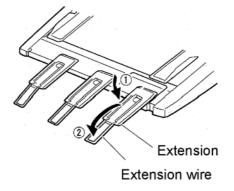

8-6 User's Manual

Removing the Cut Sheet Feeder


Before removing the cut sheet feeder, disconnect the cable.




Electric shock

Before mounting or removing the cut sheet feeder, turn off the power switches of the personal computer and the printer and remove the power plug from the outlet. Otherwise, you may receive electric shock.

When mounted on the front side of the printer

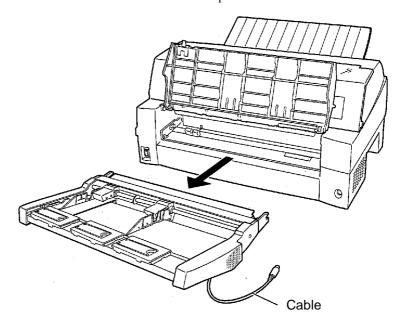

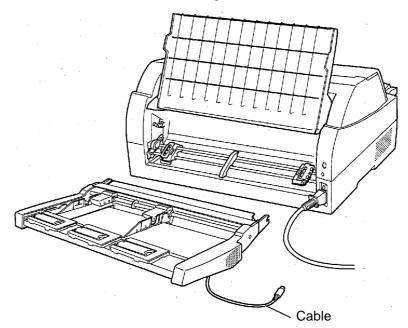

When mounted on the rear side of the printer

INSTALLING THE TRACTOR UNIT

A tractor unit is supplied as standard equipment attached to the front of the printer.

This unit may also be attached to the rear of the printer for rear feeding of continuous forms.

For details on removing and mounting the tractor unit, see "Selecting the Tractor Unit Position" on page 2-10.

8-8 User's Manual


INSTALLING THE LARGE STACKER

To continuously stack cut sheets or eject long cut sheets to the rear, mount the large stacker.

Also, if a cut sheet feeder is mounted at the rear, the stacker must be replaced with the large stacker even if cut sheets need not be continuously stacked.


1 Removing the current stacker

- 1. Lift up the current stacker in the direction indicated by the arrow.
- 2. With the stacker in the condition described in step 1, push out the right and left stacker frames to separate them from the protrusions on the stacker plate.

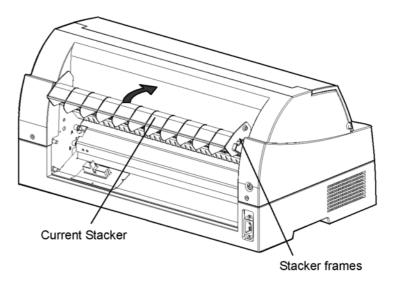

2 Mounting the rear stacker

At the rear of the printer, push the protrusions on both sides of the rear stacker into the holes inside the rear stacker guide as shown in the following figure.

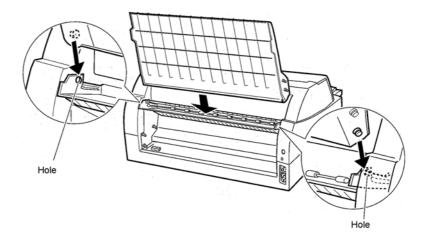


8-10 User's Manual

INSTALLING THE LARGE PAPER TABLE

To use long cut sheets, mount the large cut sheet table.

1 Removing the current paper table


After opening the paper table and adjusting it to a tilted position, remove the paper table by lifting it to separate the left and right protrusions on the paper table ends from the grooves on the cover.

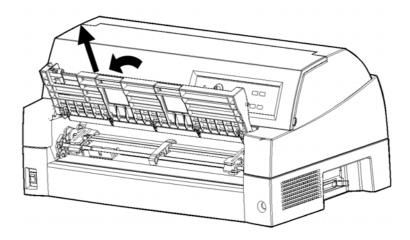

1. Installing the Large Paper Table

Insert the left and right protrusions on the paper table ends into the grooves on the cover as shown in the following figure. Set the paper table in the normal position. (See "Setting the paper table" in Chapter 2.)

The new large paper table can be opened or closed in the same way as the removed paper table.

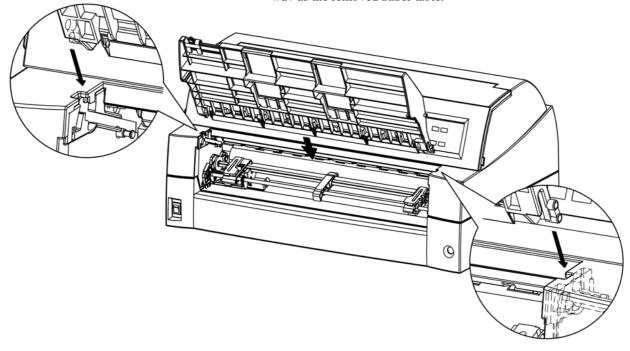

8-12 User's Manual





This appendix lists the supplies and options available for the printer.

Contact your dealer for information on ordering any of these items.

SUPPLIES

Supplies	Order Number
Ribbon cartridges	
Black ribbon	CA02374-C104
Ribbon subcassette	
Black ribbon	CA02374-C204
Print head	KA02033-E659

OPTIONS

Options	Order Number	Description
LAN card	KA02012-C103	Installable only on a printer model with the parallel and USB interfaces.
Cut sheet feeder	SF940 (KA02027-D750)	
Tractor Unit	KA02038-E650	
Large Stacker	KA02038-D160	
Large paper table	KA02038-D150	

A-2 User's Manual

PRINTER AND PAPER SPECIFICATIONS



This appendix gives the physical, functional, and performance specifications for the printer.

It also gives detailed paper specifications.

PHYSICAL SPECIFICATIONS

Dimensions

Height: 290 mm (11.4 in) Width: 600 mm (23.6 in) Depth: 350 mm (13.8 in)

Weight: 17 kg (37.4 lb)

AC power requirements

M33324A: 100 to 120 VAC ±10%; 50/60 Hz M33324B: 220 to 240 VAC ±10%; 50/60 Hz

Power consumption Average 210 VA

Maximum 360 VA

Heat generation Average 115 kcal/h

Interface - Centronics parallel and RS-232C serial

Centronics parallel and USB and LAN

(option).

Data buffer size 0, 256, 2K, 8K, 24K, 32K, 96K, or 128K

bytes

Download buffer Maximum 128K bytes

(128K minus data buffer size)

Operating environment 5 to 38°C (41 to 100°F)

30% to 80% RH (no condensation)

Wetbulb temperature, less than 29°C (84°F)

Storage environment -15 to 60°C (-4 to 140°F)

10% to 95% RH (no condensation)

Acoustic noise Average 59 dB (A)

ISO 7779 (Bystander Position-Front)

FUNCTIONAL SPECIFICATIONS

Print method Impact dot matrix with a 0.2 mm, 24-wire head

Print direction Bidirectional logic-seeking or unidirectional

seeking

Character cell Horizontal × vertical

Letter (10 cpi): 36×24 dots Letter (12 cpi): 30×24 dots

Report: 18×24 dots

Draft: $9 \times 24 \text{ dots}$ (MODE 1)

 $12 \times 24 \text{ dots}$ (MODE 2)

High-speed draft: 9×24 dots

Paper handling

Standard: Friction-feed platen (cut sheets)

Convertible bi-directional tractor on front or

rear

Paper loading by LOAD button Advancing perforations to tear-off edge by TEAR OFF

button

Parking continuous forms when using cut sheets

Optional: Cut sheet feeder

Tractor unit

Paper type 1 to 5-copies for cut sheet feeder

1 to 8-copies for tractor and paper table

Paper size

Continuous Width: 102-420 mm (4-16.5 in)

Length: 102 mm (4 in) or greater

Cut sheets (Paper table)

Width: 55-420 mm (2.16-16.5 in)

---)

Length: 70-420 mm (2.76-16.5 in)

(Cut sheet feeder)

Width: 100-420 mm (4-16.5 in)

Length: 70-420 mm for front cut sheet feeder

(2.76-16.5 in)

100-420 mm for front cut sheet feeder

(4-16.5 in)

Note:

To use cut sheets exceeding 297 mm in length, the optional large cut sheet table and large stacker are required.

B-2 User's Manual

Paper thickness Up to 0.57 mm (0.022 inch)

Paper length

By software Programmable in one line or inch

increments in all emulations

By control panel Depends upon emulations. Default is 11

inches for all emulations.

DPL24C+/XL24E: 3, 3.5, 4, 5, 5.5, 6, 7, 8, 8.5, 11, 11.6, 12,

14, or 18 inches

ESC/P2: 4, 4.5, 5, 5.5, ..., 11, 11.5, ..., 22 inches

Number of copies Up to 5, including the original (normal

mode)

Up to 8, including the original (HI

IMPACT mode)

Paper stack

Cut sheet $100 \text{ sheets } (A4 \text{ size, } 1p, 55 \text{ kg/m}^2) \text{ (The }$

stack of cut sheets may decrease, depending upon the various paper conditions such as quality, the extent of

curl, and storage environment.)

Command sets (emulations)

Resident Fujitsu DPL24C PLUS

IBM Proprinter XL24E

Epson ESC/P2

Character sets

DPL24C+/XL24E: •

• IBM PC character sets 1 and 2 (code

pages 437)

• IBM PS/2 character sets (code pages and other national character sets (57

+ 2 languages in total)

Fujitsu character sets (691

characters)

ESC/P2: • Italic character set Graphics

character sets 1 and 2

• IBM PS/2 character sets (code pages) and other national character

sets (61 + 2 languages in total)

Fonts

Resident Nineteen fonts available

Bit map: Courier 10, Pica 10, OCR-B 10, OCR-A 10,

Prestige Elite 12, Boldface PS,

Correspondence, Compressed, Draft, and

High-speed Draft.

Scalable: Courier, Timeless, and Nimbus Sans ®; each

in normal, bold, and italic styles

Downloaded Available from independent vendors

Line spacing 1, 2, 3, 4, 5, 6, 7, or 8 lines per inch.

Programmable in 1/360 inch or various

increments for image graphics.

Character pitch 2.5, 3, 5, 6, 10, 12, 15, 17.1, 18, or 20 cpi, or

proportional spacing.

Programmable in 1/360 inch or various

increments for image graphics.

Characters per line

10 cpi: 136 cpl

12 cpi: 163 cpl

15 cpi: 204 cpl

17.1 cpi: 232 cpl

18 cpi: 244 cpl

20 cpi: 272 cpl

cpi: characters per inch cpl: characters per line

B-4 User's Manual

PERFORMANCE SPECIFICATIONS

Print speed 10 cpi 12 cpi

Letter: 120 cps 144 cps

Report: 240 cps 288 cps

Correspondence: 240 cps 288 cps

Draft: 505 cps 606 cps (MODE 1)

360 cps 432 cps (MODE 2)

High-speed draft: 505 cps 606 cps

cpi: characters per inch cps: characters per second

Line feed speed 60 ms per line at 6 lines per inch

Form feed speed 6 inches per second

Ribbon life Up to 5 million characters

Certification

Safety:

Model	Regulation	Country
M33324A	UL60950-1 United States (for 100 to 120 VAC)	United States
	CSA C22.2 No. 60950-1 (for 100 to 120 VAC)	Canada
M33324B	EN 60950-1 (for 220 to 240 VAC)	Germany


RFI regulation:

Model	Regulation	Country
M33324A	Class B of FCC Part 15B (for 100 to 120 VAC)	United States

PAPER SPECIFICATIONS


Print Area

This section illustrates the recommended print area for single sheets and continuous forms.

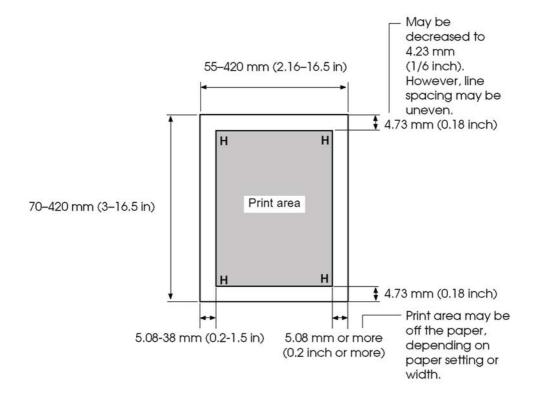

Print area for single sheets

B-6 User's Manual

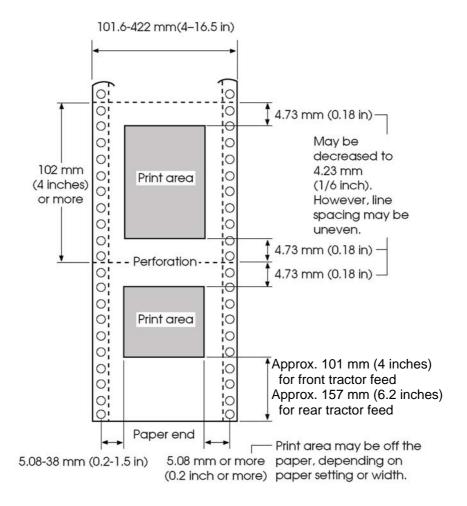

Print area for continuous forms

Paper Thickness

Paper thickness is given by the weight of the paper in either grams per square meter (g/m^2) or in pounds per bond (lbs/bond). The following table shows the allowable paper thickness for one-part paper or for each sheet of multipart paper. The total thickness must not exceed 0.57 mm (0.022 inch).

The weight of carbonless or carbon-backed paper may vary, depending upon the paper manufacturer. When using paper of borderline thickness, test the paper before running a job.

Type of Paper	Number of Parts	Thickness
One-part	Single	47-81 g/m ² (40-70 kg or 12-22 lb)
Carbonless		
2P	Тор	40-64 g/m ² (34-55 kg or 11-17 lb)
ZF I	Bottom	40-81 g/m ² (34-70 kg or 11-22 lb)
	Тор	40-50 g/m ² (34-43 kg or 11-13 lb)
3P 1	Middle	40-50 g/m ² (34-43 kg or 11-13 lb)
	Bottom	40-81 g/m ² (34-70 kg or 11-22 lb)
	Тор	40 g/m ² (34 kg or 11 lb)
4P '	Middle (2-3p)	40 g/m ² (34 kg or 11 lb)
	Bottom	40-81 g/m ² (34-70 kg or 11-22 lb)
	Тор	40 g/m ² (34 kg or 11 lb)
5P '	Middle (2-4p)	40 g/m ² (34 kg or 11 lb)
	Bottom	40-64 g/m ² (34-55 kg or 11-17 lb)
	Тор	40 g/m ² (34 kg or 11 lb)
6P	Middle (2-5p)	40 g/m ² (34 kg or 11 lb)
	Bottom	40-64 g/m ² (34-55 kg or 11-17 lb)

kg: Weight in kilograms of 1000 sheets of 788×1091 mm paper (1.16 g/m^2)

lb: Weight in pounds of 500 sheets of 17×22 inch paper (3.76 g/m²)

B-8 User's Manual

Type of Paper	Number of Parts	Thickness
Carbonless		
	Тор	40 g/m ² (34 kg or 11 lb)
7P	Middle (2-6p)	40 g/m ² (34 kg or 11 lb)
	Bottom	40-64 g/m ² (34-55 kg or 11-17 lb)
	Тор	40 g/m ² (34 kg or 11 lb)
8P'	Middle (2-7p)	40 g/m ² (34 kg or 11 lb)
<u>'</u>	Bottom	40-64 g/m ² (34-55 kg or 11-17 lb)
Carbon-backed	Do not use in hi	gh humidity environments.
	Тор	40-64 g/m ² (34-55 kg or 11-17 lb)
2P	Bottom	40-81 g/m ² (34-70 kg or 11-22 lb)
	Тор	40-52 g/m ² (34-45 kg or 11-14 lb)
3P 1	Middle	40-52 g/m ² (34-45 kg or 11-14 lb)
	Bottom	40-81 g/m ² (34-70 kg or 11-22 lb)
	Тор	40 g/m ² (34 kg or 11 lb)
4P	Middle (2-3p)	40 g/m ² (34 kg or 11 lb)
	Bottom	40-81 g/m ² (34-70 kg or 11-22 lb)
	Тор	40 g/m ² (34 kg or 11 lb)
5P	Middle (2-4p)	40 g/m ² (34 kg or 11 lb)
	Bottom	40-64 g/m ² (34-55 kg or 11-17 lb)
	Тор	40 g/m ² (34 kg or 11 lb)
6P	Middle (2-5p)	40 g/m ² (34 kg or 11 lb)
	Bottom	40-64 g/m ² (34-55 kg or 11-17 lb)

kg: Weight in kilograms of 1000 sheets of 788×1091 mm paper (1.16 g/m²)

lb: Weight in pounds of 500 sheets of 17×22 inch paper (3.76 g/m²)

Type of Paper	Number of Parts	Thickness
Carbon-backed	Do not use in high humidity environments.	
7P	Top Middle (2-6p) Bottom	40 g/m ² (34 kg or 11 lb) 40 g/m ² (34 kg or 11 lb) 40-64 g/m ² (34-55 kg or 11-17 lb)
8P	Top Middle (2-7p) Bottom	40 g/m ² (34 kg or 11 lb) 40 g/m ² (34 kg or 11 lb) 40-64 g/m ² (34-55 kg or 11-17 lb)
Carbon- interleaved	Avoid using carbon-interleaved single sheets.	
2P	Top Carbon Bottom	35-52 g/m ² (30-45 kg or 9-14 lb) Counted as one sheet 35-81 g/m ² (30-70 kg or 9-22 lb)
3P	Top Carbon Middle Carbon Bottom	35-46 g/m ² (30-40 kg or 9-12 lb) Counted as one sheet 35-46 g/m ² (30-40 kg or 9-12 lb) Counted as one sheet 35-64 g/m ² (30-55 kg or 9-17 lb)
4P	Top Carbon Middle (3,5P) Carbon (4,6P) Bottom	35-46 g/m² (30-40 kg or 9-12 lb) Counted as one sheet 35-46 g/m² (30-40 kg or 9-12 lb) Counted as one sheet 35-64 g/m² (30-55 kg or 9-17 lb)

kg: Weight in kilograms of 1000 sheets of 788×1091 mm paper (1.16 g/m^2)

lb: Weight in pounds of 500 sheets of 17×22 inch paper (3.76 g/m²)

B-10 User's Manual

COMMAND SETS

C

This appendix describes printer commands and their parameters.

This printer has three resident command sets:

- Fujitsu DPL24C PLUS (native command set for Fujitsu DL series printers)
- IBM Proprinter XL24E
- Epson ESC/P2

Separate programmer s manuals are available for these emulations. See Appendix A for order information.

Select the same emulation on the printer and in your software. If your software emulations include DPL24C PLUS, select DPL24C PLUS for optimum performance.

FUJITSU DPL24C PLUS

This section describes the printer commands for the DPL24C PLUS command set which is the native command set of this printer. See the Programmer's Manual (DPL24C PLUS) for detailed information on using these commands.

Function	Command
Print Mode Control	
Double-strike (bold) printing on	ESC G
Double-strike (bold) printing off	ESC H
Emphasized (shadow) printing on	ESC E
Emphasized (shadow) printing off	ESC F
Italic printing on	ESC 4
Italic printing off	ESC 5
Select character style and screening	ESC e S (n_1) (n_2)
n ₁ = 0:Normal	
1:Outline	
2:Shaded	
3:Outline and shaded	
4:Thin outline	
5:Thin shaded	
6:Thin outline and shaded	
n ₂ = 0:Transparent	
1:Light dot matrix	
2:Heavy dot matrix	
3:Vertical bars	
4:Horizontal bars	
5:Slants	
6:Back slants	
7:Lattice	
One-line double width characters on	SO or ESC SO
One-line double width characters off	DC 4
Double width characters on/off	ESC W (n)
(on: $n = 1$, off: $n = 0$)	

C-2 User's Manual

Function	Command
Double-height characters on/off	ESC V (n)
(on: $n = 1$, off: $n = 0$)	
This command does not adjust the line	
spacing.	
Multiwidth and height printing	ESC $u(n)(h_1)(h_2)$
n = 0: Not adjusted	$(\mathbf{v}_1)(\mathbf{v}_2)$
1: Character pitch multiplied	
2: Line spacing multiplied	
3: Character pitch and line spacing	
multiplied	
h_1 : Tens digit of horizontal multiple	
h ₂ : Units digit of horizontal multiple	
v_1 : Tens digit of vertical multiple	
v ₂ : Units digit of vertical multiple	
$(0 \le h_1 h_2 \text{ or } v_1 v_2 \le 11)$	
Condensed characters on	SI or ESC SI
Condensed characters off	DC2
Subscript or superscript printing on	ESC S (n)
(subscript: $n = 1$, superscript: $n = 0$)	
Subscript and superscript printing off	ESC T
Select underline type	ESC e U (n)
n = 0:Single line	
1:Bold single line	
2:Extremely bold single line	
3:Double line	
4:Bold double line	
5:Extremely bold double line	
Underline on/off	ESC- (n)
(on: n=1, off: n=0)	
Overline on/off	ESC e o (n)
(on: n=1, off: n=0)	

Function	Command
Select printing style	ESC!(n)
This command allows you to combine	
various printing styles. The value of n is	
the sum of the values of the styles you	
want to combine.	
n= 0:Pica pitch	
1:Elite pitch	
4:Condensed	
8:Shadow	
16:Bold	
32:Double width	
64:Proportional	
Select image overlay type	ESC e I (n)
This command allows you to overlay a	
pattern on characters.	
n= 1:Light dot matrix	
2:Heavy dot matrix	
3:Vertical bars	
4:Horizontal bars	
5:Slants	
6:Back slants	
7:Lattice	
Image overlay printing on/off	ESC e L (n)
(on:n=1, off: n=0)	
Horizontal Control	
Space	SP
Backspace	BS
Carriage return	CR
Elite pitch (12 cpi)	ESC M
Pica pitch (10 cpi)	ESC P
Proportionally spaced characters on/off	ESC p (n)
(on:n=1, off: n=0)	
Set character pitch to (n-1)/120 inch	ESC US (n)
$(1 \le n \le 127)$	
Set character pitch to n/180 inch	ESC h (n)
$(0 \le n \le 255)$	

C-4 User's Manual

Function	Command
Set character offset to n/120 inch	ESC DC1 (n)
Cancelled by CR or ESC x.	
$(0 \le n \le 63) (64 \le n \le 127)$	
Set character pitch to n/360 inch	ESC e H
$(0 \le n_1 n_2 n_3 \le 999)$	$\left(n_{1}\right)\left(n_{2}\right)\left(n_{3}\right)$
n_1 , n_2 , and n_3 are the hundreds, tens, and	
units digits.	
Vertical Control	
Line feed	LF
Reverse line feed	LF ESC
Form feed	FF
Advance paper n/180 inch $(0 \le n \le 255)$	ESC J (n)
Reverse paper n/180 inch $(0 \le n \le 255)$	ESC j (n)
Advance paper n/360 inch	ESC e J
$(0 \le n_1 n_2 n_3 \le 999)$	$\left(n_{1}\right)\left(n_{2}\right)\left(n_{3}\right)$
n_1 , n_2 , and n_3 are the hundreds, tens, and	
units digits.	
Reverse paper n/360 inch	ESC e j
$(0 \le n_1 n_2 n_3 \le 999)$	$(n_1)(n_2)(n_3)$
n_1 , n_2 , and n_3 are the hundreds, tens, and	
units digits.	
Set line spacing to 1/8 inch (8 lpi)	ESC 0
Set line spacing to n/180 inch	ESC 3 (n)
$(0 \le n \le 255)$	
Set line spacing to 7/60 inch	ESC 1
Set line spacing to n/60 inch	ESC A (n)
$(0 \le n \le 127)$	
Set line spacing to 1/6 inch (6 lpi) or to the value set with the ESC A command.	ESC 2
The preset line spacing command is	
ESC A (n).	
Set line spacing to n/360 inch	ESC e V
$(0 \le n_1 n_2 n_3 \le 999)$	$\left(n_{1}\right)\left(n_{2}\right)\left(n_{3}\right)$
n ₁ , n ₂ , and n ₃ are the hundreds, tens, and	
units digits.	
Set line spacing to n/360 inch	FS 3 (n)
$(1 \le n \le 255)$	

Function	Command
Tabulation	
Horizontal tab execution	НТ
Set horizontal tabs	ESC D (n_1) (n_k)
The values of n_1 to n_k in this command	NUL
are the ASCII values of the print	
columns (at the current character width)	
at which tabs are to be set.	
$(1 \le n \le 255) (1 \le k \le 255)$	
Move to print column n $(1 \le n \le 255)$	ESC HT (n)
Move dot column n/360 inch	ESC (n_1) (n_2)
$(n = n_1 + n_2 \times 256)$	
The value below is for 136-column printers.	
$(0 \le n_1 \le 255) (0 \le n_2 \le 19)$	
$(0 \le n_2 \times 256 + n_1 \le 4895)$	
Horizontal relative move by n/360 inch	ESC e R (s)
$(-999 \le n_1 n_2 n_3 \le +999)$	$\left(n_{1}\right)\left(n_{2}\right)\left(n_{3}\right)$
n_1 , n_2 , and n_3 are the hundreds, tens, and	
units digits of the distance.s is a plus	
or minus (+ or -) sign.	
Vertical tab execution	VT
Set vertical tabs	ESC B (n_1) (n_k)
The values of n_1 to n_k in this command	NUL
are the ASCII values of the lines (at the	
current line spacing) at which tabs are	
to be set.	
$(1 \le n \le 255) (1 \le k \le 64)$	
Move to line n $(1 \le n \le 255)$	ESC VT (n)
Page Formatting	
Set right margin $(0 \le n \le 255)$	ESC Q (n)
Set left margin $(0 \le n \le 255)$	ESC 1 (n)
Set perforation skip by n lines	ESC N (n)
$(1 \le n \le 127)$	
Perforation skip off	ESC O
Set page length to n lines	ESC C (n) or
$(1 \le n \le 127)$	ESC FF (n)

C-6 User's Manual

Function	Command
Set page length to n inches	ESC C NUL (n) or
$(1 \le n \le 22)$	ESC e C NUL (n) or
	ESC FF NUL (n)
Set page length to n/360 inch	ESC e f (n_1) (n_2)
$(n = n_1 \times 256 + n_2)$	
$(0 \le n_1 \ n_2 \le 255)$	
$(1 \le n_1 \le 256 + n_2 \le 7920)$	
Character Set Control	
Select character set 1	ESC 7
Appendix E gives the character sets	
Select character set 2	ESC 6
Appendix E gives the character sets.	
Select international character set	ESC R (n)
n = 0:USA	
1:France	
2:Germany	
3:United Kingdom	
4:Denmark 1/Norway	
5:Sweden/Finland	
6:Italy	
7:Spain	
8:Denmark 2	
Clear print buffer	CAN
Select printer	DC1
Deselect printer (ignore input)	DC3
Force most significant bit to 1	ESC >
Force most significant bit to 0	ESC =
Cancel control over most significant bit	ESC#

		Function	Command
Select co	de table	ESC e C (n)	
n = 0	Code p		
1	:Code pa	age 850	
2	2:Code pa	age 860	
3	:Code pa	age 863	
۷	:Code p	age 865	
5	5:ISO 88	59-1/ECMA 94	
Select ex	tended cl	naracter by character	ESC e E
number			$(n_1)(n_2)(n_3)$
$(0 \leq n_1)$	$n_2 n_3 \leq \epsilon$	664)	
$n_1, n_2,$	and n ₃ ar	re the hundreds, tens, and	
units d	igits.		
Word Pro	cessing		
Line justi	fication	on	ESC m
Automati	cally cen	ter printing	ESC c
Reset wo	rd proces	ssing features	ESC x
Font Sele	ction and	d Downloading	
Select for		ESC % (m) (n)	
• m (bits			
Bit 1	Bit 0	Selection of font	
0	0	Resident font	
0	1	Downloaded font	
1	0	Resident font	
• m (bits	2 and 3:		
Bit 3	Bit 2		
0	0		
0	1	Letter quality (360 dpi) Correspondence	
1	0		
1	1	Draft quality (120 dpi)	

C-8 User's Manual

		Functi	on	Command
H	- (bi		Committee	
	,	it 0 to 2: Specificatio	n of tont number)	
(1) Ke	sident fonts		
	n	m (bit 1, 0) = 0, 0	m (bit 1, 0) = 1, 0	
	0	Courier 10	OCR-B	
	1	Prestige elite 12	OCR-A	
	2	Draft		
	3	Compressed		
	4 5	Boldface PS Pica 10		
	6	Correspondence		
	7	High-speed draft		
	,	Then opera man		
(2) Do	ownloaded fonts		
	n:	= 0: Downloaded fo	nt 0	
		1: Downloaded fo		
Se	elect	print quality (font at	tributes)	ESC e q (n)
	n:	$= 0: Letter (360 \times 18)$	0 dpi)	
		1:Correspondence	$(180 \times 180 \text{ dpi})$	
		2:Draft (120 \times 180) dpi)	
		3:High-speed Dra	ft $(90 \times 180 \text{ dpi})$	
Se	elect	spacing mode (font	attributes)	ESC e s (n)
	n:	= 0:Fixed pitch font		
		1:Proportional spa	icing font	
		character pitch (n/36	50 inch, font	ESC e p (n_1) (n_2)
at	tribu	,		
	(0	$\leq n_1 \leq 255$) $(1 \leq n_2 \leq n_3)$	≤ 255)	
	,	$= n_1 \times 256 + n_2)$		
	Ez	x.n = 36: 10 pitch		
		30: 12 pitch		
		24: 15 pitch		
	21: 17 pitch			
Condense/enlarge vertically (font attributes)			ESC e A (n)	
	n :	= 1:Executed		
	0:Not executed			
Se	Select point size (n/1200 inch, font attributes)			ESC $e v (n_1) (n_2)$
		$\leq n_1 \leq 255$) $(0 \leq n_2 \leq n_3)$		
	`	$= n_1 \times 256 + n_2)$		
i	Ez	x. n = 166: 10 point		

Function	Command
Select character style (font attributes)	ESC e i (n)
n = 0:Upright	
1:Italic	
Select stroke weight (font attributes)	ESC e w (n)
n = 249:-7 (reserved)	
251:-5 (reserved)	
253:-3 (light)	
0:0 (medium)	
3:3 (bold)	
5:5 (black)	
7:7 (ultrablack)	
Select typeface (font attributes)	ESC e t (n)
n = 1:Pica	
3:Courier (bitmap)	
4:Nimbus Sans	
5:Timeless	
6:Gothic	
8:Prestige	
23:Boldface	
130:OCR-A	
131:OCR-B	
134:Courier (scalable)	
Select font by I.D. (font attributes)	ESC e F (n)

n	Quality	Spacing	Pitch	Point	Typeface
1	LQ	Fixed	10 cpi	12 pt	Courier (bitmap)
2	LQ	Fixed	12 cpi	10 pt	Prestige
3	LQ	PS	-	12 pt	Boldface
4	LQ	Fixed	10 cpi	12 pt	Pica
9	LQ	Fixed	10 cpi	12 pt	OCR-A
10	LQ	Fixed	10 cpi		OCR-B
32	LQ	Fixed	10 cpi	12 pt	Courier (bitmap)
34	LQ	Fixed	12 cpi	12 pt	Gothic
128	LQ	PS	-	11pt	Timeless
129	LQ	PS	-	10 pt	Timeless Italic
130	LQ	PS	-	10 pt	Timeless Bold
132	LQ	PS	-	10 pt	Nimbus Sans ®
133	LQ	PS	-	10 pt	Nimbus Sans ® Italic
134	LQ	PS	-	10 pt	Nimbus Sans ® Bold
140	LQ	Fixed	10 cpi	10 pt	Courier (scalable)
141	LQ	Fixed	10 cpi	10 pt	Courier Bold (scalable)
142	LQ	Fixed	10 cpi	10 pt	Courier Italic (scalable)

C-10 User's Manual

Copy resident font to download area ESC: NUL (m	n) (n)				
m = 0:Courier 10					
1:Prestige Elite 12					
2:Draft					
3:Compressed					
4:Boldface PS					
5:Pica 10					
6:Correspondence					
7:High-speed Draft n = 0:Downloaded font 0					
1:Downloaded font 1					
Create download font ESC & (m) (C	a)				
• m (bits 4 and 5: Specifies the quality of (Ce) (data)	5)				
characters to be registered)					
Bit 5 Bit 4 Font quality selection					
0 1 Letter (360 dpi)					
1 0 Correspondence (180 dpi)					
1 1 Draft (120 dpi)					
• m (bit 0: Specifies external font number					
to be registered)					
Bit 0 Font number selection Remarks					
Downloaded font 0 At power on, resident font 0 automatically downloaded.) is				
1 Downloaded font 1 At power on, resident font 1 automatically downloaded.	is				
 m (bits 1, 2, 3, 6, 7) Not used (don't care) Cs (Download start character, ASCII code) Ce (Download end character, ASCII code) 					
Decimal $00 \le Cs$, $Ce < 255$					
Hex $00 \le Cs, Ce \le FF$					
Precaut ion: Ce ≥ Cs					
• data (More than one byte of data					
containing bit map data)					
(Reserved) ESC e D (data));				

Function	Command
Bit Image Graphics	
Graphics type m graphics	ESC * (m)
	$(n_1)(n_2)$ (data)
Graphics type m graphics	ESC e b (m)
	$(n_1) (n_2) (data)$ or
	ESC e B (m)
	$(n_1)(n_2)$ (data)
Single-density graphics	ESC K (n_1) (n_2) (data)
Double-density graphics	ESC L (n_1) (n_2) (data)
High-speed double-density graphics	ESC Y (n_1) (n_2) (data)
Quadruple-density graphics	ESC $Z(n_1)(n_2)$ (data)
360 dot per inch 24-pin graphics	$FS Z (n_1) (n_2) (data)$
Cut Sheet Feeder Control	
Feed a sheet from bin 1	ESC EM 1
Feed a sheet from bin 2	ESC EM 2
Feed a sheet from bin 3	ESC EM E
Eject a page from the printer	ESC EM R
Select bin 1 for following pages	//1//
Select bin 2 for following pages	//2//
Select bin 3 for following pages	//E//
Initialize Printer	
Reset printer	ESC @
Reset printer	ESC CR P
Initialize printer	ESC SUB I

C-12 User's Manual

Function	Command
Bar Code Printing	
Print bar code	ESC DC4 (b) R
b: Total number of parametersR: (fixed)c: Type of bar code	(c) (w) (h) (a) $(ch_1) (ch_n)$

ASCII	Decimal	Hex	Туре
1	49	31	Codabar (nw-7)
2	50	32	EAN 13
3	51	33	EAN 8
4	52	34	Code 3 of 9
5	53	35	Industrial 2 of 5
6	54	36	Interleaved 2 of 5
7	55	37	Matrix 2 of 5
A	65	41	UPC type A
В	66	42	Code 128
a	97	61	UPC type A with checkdigit printing

w: Width of narrow bar in 1/1440-inch units

h: Height of bar code

a: Defines check characters and OCR characters

ch₁ ... ch_n: Bar code characters

NOTE

When EAN13, UPC type A, or UPC type A with checkdigit printing is selected as the type of barcode, printing the barcode from the left (from the first dot) will cause the omission of a flag character that should by printed on the lower left or middle left of it. Therefore, when printing these types of barcode, leave two or more spaces open from the left.

See the next page for details of the Bar Code Command.

Bar Code Printing Control

ASCII : ESC + DC4 + b + R + c + w + a + ch1 ... + chn Hexadecimal : 1B + 14 + b + 52 + c + w + a + ch1 ... + chn Decimal : 27 + 20 + b + 82 + c + w + a + ch1 ... + chn

- (1) Function
 - (a) Instructs the printing of bar codes according to the different specifications of this command.
- (2) Valid range of parameters
 - (a) **b** (Specification of number of bytes) = Actual number of data + 6
 - (b) **R** (Fixed)

ASCII : R Hexadecimal : 82 Decimal : 52

(c) C (Specifies the type of bar code to be printed. No printing is done if any value other than the following is specified.)

	C	Type of bar code	
ASCII	Decimal	Hexadecimal	Type of bar code
1	49	31	Codabar (nw-7)
2	50	32	EAN 13
3	51	33	EAN 8
4	52	34	Code 3 of 9
5	53	35	Industrial 2 of 5
6	54	36	Interleaved 2 of 5
7	55	37	Matrix 2 of 5
A	65	41	UPC type A
В	66	42	CODE 128
a	97	61	UPC type A with check character

C-14 User's Manual

(d) **w** (Specify the width of the narrow bar of the bar code to be printed in units of 1/1440.)

Specify the "Logical value" to be printed (in units of 1/1440). Actual printing: The printer prints with the width given in the following table in units of 1/180 inches.

w	Width of narrow bar
1 ~ 19	2 Dots (2/180 inches)
20 ~ 27	3 Dots (3/180 inches)
28 ~	4 Dots (4/180 inches)

(e) **h** (Specify the height of the bar code to be printed in units of 1/1440 taking the narrow bar width as the reference.)

Height of bar code \doteq (parameter w) × (parameter h) [in units

of 1/1440]

Height of bar code ≤ 11 Inches

Actual printing: The printing is done with the following initial

values if the bar code height is less than or equal to 24 dots taking 1 dot equal to 1/180 inches of the printing unit of the printer.

The following values are the standard heights for the respective bar code standards. Enter the value so that the height is \leq 23/180 if the standard is correct.

Narrow bar width	EAN 13/UCP-A	EAN 8	Others
2 Dots (16/1440)	162 Dots	130 Dots	108 Dots
	(1296/1440)	(1040/1040)	(864/1440)
3 Dots (24/1440)	234 Dots	187 Dots	135 Dots
	(1872/1440)	(1496/1040)	(1080/1440)
4 Dots (32/1440)	312 Dots	249 Dots	162 Dots
	(2496/1440)	(1992/1040)	(1296/1440)

Figures in parentheses () are values converted to units of 1/1440.

(f) **a** (Bits 2~0: Specifications related to the check and OCR characters.)

Bit	Content of specification	value	Content of setting
0	Check character Additional specification * 1	0	Added
		1	Not added
1	Specification of OCR character printing (OCR-B is taken as the standard)	0	Printed
		1	Not printed
2	Printing position of EAN, UPC flag character	0	To the left of the bar code
		1	To the bottom left of the bar code

*1: The specification becomes invalid for the following bar codes:

Codabar ... Always the non-additional code is set. EAN, UPC ... Always the additional code is set.

*2: The flag character is printed when Bit 1 = 0.

C-16 User's Manual

(g) (ch1) ... (chn)

The data and the printable character set are listed below.

Type of bar code	Usable character set	Data count	
Codabar	Numerals: 0 ~ 9 Symbols; + -, \$/: Start, Stop: A,a,B,b,C,c,D,d, T,t,N,n,*,E,e	$1 \le n \le 64$ Includes Start and Stop	
EAN 13	Numerals: 0 ~ 9	Fixed at n=12	
EAN 8	Numerals: 0 ~ 9	Fixed at n=7	
Code 3 of 9	Numerals: 0 ~ 9 Alphabets: A ~ Z: Symbols: +-,\$/%SPACE Start, Stop:*	Check character Additional code $1 \le n \le 63$	
Industrial 2 of 5	Numerals: 0 ~ 9	Check character	
Interleaved 2 of 5	Numerals: 0 ~ 9	Non-additional code $1 \le n \le 64$	
Matrix 2 of 5	Numerals: 0 ~ 9		
UPC Type A	Numerals: 0 ~ 9	Fixed at n=11	
UPC Type A with check character	Numerals: 0 ~ 9	Fixed at n=11	
Code 128	ASCII Code Start code: A, B, C Code set C: 0 ~ 9	Check character Additional code $1 \le n \le 63$ Check character Non-additional code $1 \le n \le 64$ Code set C: 2n	

Function	Command	
Print Option Control		
Friction feed selection	//F//	
Rear tractor feed selection	//T//	
Front tractor feed selection	//M//	
Cut sheet feed selection	//S//	
Host controlled paper path control	ESC e T (n)	
n = "F" :Friction "T" :Rear Tractor "M": Front Tractor		
Automatic paper thickness control	ESC e P $(n_1) (n_2) (n_3) (n_4)$	
Miscellaneous		
Sound bell	BEL	
Enable paper-out sensor	ESC 9	
Ignore paper-out sensor	ESC 8	
Typewriter mode on/off	ESC i (n)	
(on:n=1, off: n=0)		
Move print head to home position	ESC <	
Unidirectional printing on/off	ESC U (n)	
(on:n=1, off: n=0)		
Select CR code definition	ESC e r (n)	
n = 0:CR = CR only		
1:CR = CR + LF		
Select LF code definition	ESC e l (n)	
n = 0:LF = LF only		
1:LF = LF + CR		
Enter online setup mode	ESC e ONLINE (data)	
Move print head (unit: 1/180 inch)	ESC e h (n ₁) (n ₂)	
$(0 < n_1 < 255) (0 < n_2 < 255)$		

C-18 User's Manual

Factory Default Settings

The following table describes the printer commands used to control options of the items that can be selected in printer setup mode. Command parameters are omitted

Item	Selectable options in setup mode	Command
Emulate	DPL24C+, XL24E, ESC/P2	Controllable in online setup mode
Font	COUR 10, PRSTG 12, COMPRSD, BOLDFCE, PICA 10, CORRESP, COUR-N, COUR-B, COUR-I, TIMLS-N, TIMLS-B, TIMLS-I, N.SAN-N, N.SAN-B, N.SAN-I. OCR-B, OCR-A, DOWNLD 0, DOWNLD 1	ESC e t ESC e F ESC %
Quality	<u>LETTER</u> , REPORT, DRAFT, HI- DRFT	ESC e q
Pitch	2.5, 3, 5, 6, <u>10</u> , 12, 15, 17, 18, 20 CPI or PROP SP	ESC e p ESC e H ESC h ESC US ESC M ESC P ESC p ESC i ESC e s
Line space	1, 2, 3, 4, 5, <u>6</u> , 7, 8, LPI	ESC e V ESC 0 ESC 1 ESC 2 ESC 3 ESC A
Character width	NORMAL, 2 TIMES, 4 TIMES	ESC W SO or ESC SO (DC4) ESC u ESC!
Character height	NORMAL, 2 TIMES, 4 TIMES	ESC V ESC u

Underline: Factory default

(): Cancel command

Item	Selectable options in setup mode	Command
Attributes	NONE, ITALICS, CONDNSD, SHADOW, BOLD	ESC 4 (ESC 5) SI or ESC SI (DC2) ESC E (ESC F) ESC G (ESC H) ESC e i ESC!
Page length	3.0, 3.5, 4.0, 5.0, 5.5, 6.0, 7.0, 8.0, 8.5, <u>11.0</u> , 11.6, 12.0, 14.0, 18.0 IN	ESC C NUL ESC e C NUL ESC FF NUL ESC C ESC e C ESC FF
Left end	<u>1</u> , 2, 3,, 41 COLM	Controllable in online setup mode
Top margin	1, 2, 3,, 10 LINE	Controllable in online setup mode
Language	USA, UK, GERMAN, FRENCH, ITALIAN, SPANISH, SWEDISH, FINNISH, DANISH1, DANISH2, NORWEGN, <u>PAGE437</u> , PAGE850, PAGE860, PAGE863, PAGE865 ISO8859, ECMA94	ESC R ESC e C
	PG852, PG852-T, PG855, PG866, HUNGARY, HUNG-T, SOLV, SOLV-T, POLISH, POLSH-T, MAZOWIA, MAZOW-T, LATIN7, LATIN2, LATN2-T, KAMENIC, KAMEN-T, TURKY, TURKY-T, CYRILIC, IBM437, IBM851, ELOT928, PG-DHN, LATIN-P, ISO-LTN, LITHUA1, LITHUA2, MIK, MACEDON, ABG, ABY, PG-MAC, ELOT927, DEC-GR, GREEK 11, PG862, HBR-OLD, HBR-DEC, ISO-TUK, RUSCII, LATIN-9, WCP1250, WCP1251, WCP1252	Uncontrollable by commands but controllable in online setup mode

Underline: Factory default

(): Cancel command

C-20 User's Manual

Item	Selectable options in setup mode	Command
Character set	SET 1, <u>SET2</u>	ESC7 ESC6
Perfora- tion skip	SKIP, <u>NO-SKIP</u>	ESC N (ESC O)
Paper width	8.0 IN, 11.0 IN, 11.4 IN, <u>13.6IN</u> , (8.0 IN is default for 80-column printer, and 13.6 IN is default for 136-column printer)	Controllable in online setup mode
Zero font	NO-SLSH, SLASH	Controllable in online setup mode
DC3	ENABLE, DISABLE	Controllable in online setup mode
CR code	<u>CR-ONLY</u> , CR & LF	ESC e r
LF code	LF-ONLY, <u>LF & CR</u>	ESC e l
Right end wrap	<u>WRAP</u> , OVR-PRT	Controllable in online setup mode
Paper-out	CNTONLY, DETECT, IGNORE	ESC 9 (ESC 8)
Print direction	<u>BI-DIR</u> , UNI-DIR	ESC U
Print mode	NORMAL, QUIET	Controllable in online setup mode
High Impact	<u>DISABLE</u> , ENABLE	Controllable in online setup mode

Underline: Factory default

(): Cancel command

IBM PROPRINTER XL24E EMULATION

This section describes the printer commands for the IBM Proprinter XL24E emulation. Asterisks in the "Function" column indicate extended commands that are not supported by the original printer.

Print Mode Control Double-strike (bold) printing on Double-strike (bold) printing off Emphasized (shadow) printing on Emphasized (shadow) printing off Emphasized (shadow) printing off One-line double-width characters on One-line double-width characters off Double-width characters on/off (on: n = 1, off: n = 0) Double-height/double-width characters n ₁ = 4, n ₂ = 0, m ₁ = 0, m ₂ = 0 m ₃ controls character height and line spacing: Maj			Funct	ion		Command
Double-strike (bold) printing off Emphasized (shadow) printing on Emphasized (shadow) printing off One-line double-width characters on One-line double-width characters off Double-width characters off One-line double-width characters off Double-width characters on/off (on: n = 1, off: n = 0) Double-height/double-width characters n ₁ = 4, n ₂ = 0, m ₁ = 0, m ₂ = 0 m ₃ controls character height and line spacing: May	Print	Print Mode Control				
Emphasized (shadow) printing on Emphasized (shadow) printing off One-line double-width characters on One-line double-width characters off Double-width characters on/off (on: n = 1, off: n = 0) Double-height/double-width characters n ₁ = 4, n ₂ = 0, m ₁ = 0, m ₂ = 0 m ₃ controls character height and line spacing: May	Dou	ble-stri	ke (bold) print	ing on		ESC G
Emphasized (shadow) printing off One-line double-width characters on One-line double-width characters off Double-width characters on/off (on: n = 1, off: n = 0) Double-height/double-width characters n ₁ = 4, n ₂ = 0, m ₁ = 0, m ₂ = 0 m ₃ controls character height and line spacing: Mathematical Processing	Dou	ble-stri	ke (bold) print	ing off		ESC H
Emphasized (shadow) printing off One-line double-width characters on One-line double-width characters off Double-width characters off Double-width characters on/off (on: $n = 1$, off: $n = 0$) Double-height/double-width characters $n_1 = 4$, $n_2 = 0$, $m_1 = 0$, $m_2 = 0$ m_3 controls character height and line spacing:	Emp	hasized	d (shadow) pri	nting on		ESC E
One-line double-width characters on One-line double-width characters off DC4 Double-width characters on/off $(on: n = 1, off: n = 0)$ Double-height/double-width characters $n_1 = 4, n_2 = 0, m_1 = 0, m_2 = 0$ $m_3 = $			`	•		ESC F
One-line double-width characters off Double-width characters on/off (on: $n = 1$, off: $n = 0$) Double-height/double-width characters $n_1 = 4$, $n_2 = 0$, $m_1 = 0$, $m_2 = 0$ m_3 controls character height and line spacing:			`	•		SO or ESC SO
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$						
$(on: \ n=1, off: \ n=0)$ $Double-height/double-width characters$ $n_1=4, n_2=0, m_1=0, m_2=0$ $m_3 Height Spacing$ $\hline{0} Unchanged Unchanged$ $1 Normal Unchanged$ $2 Double Unchanged$ $16 Unchanged Single$ $17 Normal Single$ $18 Double Single$ $18 Double Single$ $32 Unchanged Double$ $33 Normal Double$ $34 Double Double$ $m_4 controls character width:$ $\hline{m_3 Height}$ $\hline{0} Unchanged$ $1 Normal$						
$\begin{array}{c ccccccccccccccccccccccccccccccccccc$				J11/ U11		LSC W (II)
m ₁ = 4, n ₂ = 0, m ₁ = 0, m ₂ = 0 m ₃ controls character height and line spacing: m ₃ Height Spacing 0 Unchanged Unchanged 1 Normal Unchanged 2 Double Unchanged 16 Unchanged Single 17 Normal Single 18 Double Single 32 Unchanged Double 33 Normal Double 34 Double Double m ₄ controls character width: m ₃ Height 0 Unchanged 1 Normal	,			1.1 1 .		Eggs O ()()
m ₃ Controls character height and line spacing: m ₃ Height Spacing			_			
m3 Height Spacing 0 Unchanged Unchanged 1 Normal Unchanged 2 Double Unchanged 16 Unchanged Single 17 Normal Single 18 Double Single 32 Unchanged Double 33 Normal Double 34 Double Double m4 controls character width: m3 Height 0 Unchanged 1 Normal	n_1	$n_1 = 4, n_2 = 0, m_1 = 0, m_2 = 0$		$(m_1) \dots (m_4)$		
0 Unchanged Unchanged 1 Normal Unchanged 2 Double Unchanged 16 Unchanged Single 17 Normal Single 18 Double Single 32 Unchanged Double 33 Normal Double 34 Double Double m ₄ controls character width: m ₃ Height 0 Unchanged 1 Normal	m_3	contro	ls character he	ight and line sp	acing:	
1 Normal Unchanged 2 Double Unchanged 16 Unchanged Single 17 Normal Single 18 Double Single 32 Unchanged Double 33 Normal Double 34 Double Double m ₄ controls character width: m ₃ Height 0 Unchanged 1 Normal		m_3	Height	Spacing		
2 Double Unchanged 16 Unchanged Single 17 Normal Single 18 Double Single 32 Unchanged Double 33 Normal Double 34 Double Double m ₄ controls character width: m ₃ Height 0 Unchanged 1 Normal		0	Unchanged	Unchanged		
16 Unchanged Single 17 Normal Single 18 Double Single 32 Unchanged Double 33 Normal Double 34 Double Double m ₄ controls character width: m ₃ Height 0 Unchanged 1 Normal		1	Normal	Unchanged		
17 Normal Single 18 Double Single 32 Unchanged Double 33 Normal Double 34 Double Double m ₄ controls character width: m ₃ Height 0 Unchanged 1 Normal		2	Double	Unchanged		
18 Double Single 32 Unchanged Double 33 Normal Double 34 Double Double m ₄ controls character width: m ₃ Height 0 Unchanged 1 Normal		16	Unchanged	_		
32 Unchanged Double 33 Normal Double 34 Double Double m ₄ controls character width: m ₃ Height 0 Unchanged 1 Normal		17		_		
33 Normal Double 34 Double Double m ₄ controls character width: m ₃ Height 0 Unchanged 1 Normal		_		_		
34 Double Double m ₄ controls character width: m ₃ Height 0 Unchanged 1 Normal		_	_			
m ₄ controls character width: m ₃ Height 0 Unchanged 1 Normal						
m ₃ Height 0 Unchanged 1 Normal		34	Double	Double		
m ₃ Height 0 Unchanged 1 Normal						
0 Unchanged 1 Normal	m_4	contro	ls character wi	dth:		
1 Normal		m ₃	Height			
		0	Unchanged			
2 Double		1	Normal			
		2	Double			
				•		

C-22 User's Manual

Function	Command
Condensed characters on	SI or ESC SI
Condensed and elite characters off	DC2
Subscript or superscript printing on	ESC S (n)
(subscript: $n = 1$, superscript: $n = 0$)	
Subscript and superscript printing off	ESC T
Underline on/off (on: $n = 1$, off: $n = 0$)	ESC - (n)
Overline on/off (on: $n = 1$, off: $n = 0$)	ESC_(n)
Horizontal Control	
Space	SP
Backspace	BS
Carriage return	CR
Elite characters on	ESC:
Proportionally spaced characters on/off	ESC P (n)
(on:n= 1, off: n= 0)	
Vertical Control	
Line feed	LF
Form feed	FF
Advance papern/216 inch $(1 \le n \le 255)$	ESC J (n)
Advance papern/180 inch (in AG mode)	ESC J (n)
$(1 \le n \le 255)$	
Set line spacing to 1/8 lines	ESC 0
Set line spacing to 7/72 inch	ESC 1
Set line spacing to n/216 inch	ESC 3 (n)
$(0 \le n \le 255)$	
Set line spacing to n/180 inch (in AG mode)	ESC 3 (n)
$(0 \le n \le 255)$	
Preset line spacing to n/72 inch	ESC A (n)
$(1 \le n \le 255)$	
Preset line spacing to n/60 inch (in AG mode)	ESC A (n)
$(1 \le n \le 255)$	
Set line spacing to 1/6 inch or to the value	ESC 2
preset by line spacing command ESC A (n)	

Function	Command
Change graphics line spacing base to	ESC [\setminus (m ₁) (m ₂)
1/216 or 1/180 inch (for ESC J and ESC 3)	$(t_1) \dots (t_4)$
$m_1 = 4, m_2 = 0$	
$0 \le t_1 \le 255, \ 0 \le t_2 \le 255, \ t_3 = 0$	
$t_4 = 180 \text{ or } 216$	
Tabulation	
Horizontal tab execution	HT
Set horizontal tabs	ESC D (n ₁)
The values of n_1 to n_k in this command	(n _k) NUL
are the ASCII values of the print columns	
(at the current character width) at which	
tabs are to be set. $(1 \le n \le 255) (1 \le k \le 28)$	
Clear all horizontal tabs	ESC D NUL
Move print position right by n/120 inch	ESC d $(n_1)(n_2)$
$(0 \le n_1, n_2 \le 255) (n = n_1 + n_2 \times 256)$	
Vertical tab execution	VT
Set vertical tabs	ESC B (n ₁)
The values of n_1 to n_k in this command	(n _k) NUL
are the ASCII values of the lines (at the	
current line spacing) at which tabs are to be	
set. $(1 \le n \le 255) (1 \le k \le 64)$	
Clear all vertical tabs	ESC B NUL
Reset tabs to default values	ESC R
Page Formatting	
Set left margin at column n and right	ESC X (n) (m)
margin at column m $(0 \le n, m \le 255)$	
Set perforation skip by n lines	ESC N (n)
$(1 \le n \le 255)$	
Perforation skip off	ESC O
Set page length to n lines $(1 \le n \le 255)$	ESC C (n)
Set page length to n inches $(1 \le n \le 22)$	ESC C NUL (n)
Set top of form	ESC 4

C-24 User's Manual

	Function			Command	
Ch	aracte	er Set	Control		
Se	lect cl	haracte	er set 1		ESC 7
Se	lect cl	haracte	er set 2		ESC 6
Pri	nt n ₁ -	$+$ $n_2 \times$	256 characters from all-		$ESC \setminus (n_1)(n_2)$
(charac	eter set	t		(chars.)
(chars	.: cod	es of characters to print	,	
() <u><</u> ch	ars. <u><</u>	255)		
Pri	int a c	haract	er from all-character set		ESC ^(char.)
(char.	a co	de of character to print,		
() <u><</u> ch	ar. <u>≤</u> 2	255)		
Se	lect c	ode pa	ge table n		ESC [$T(n_1)(n_2)$
(0 ≤ n	₁ , n ₂ ≤	255) (n = $n_1 + n_2 \times 256$)	ı	$0\ 0\ (c_1)(c_2)$
	c_1	c_2	Code page ID		
	0	0	Ignore command		
	1	181	Code page 437		
	3	82	Code page 850		
	3	92	Code page 860		
	3	95	Code page 863		
	3	97	Code page 865		
					CAN
Clear input buffer			ffer	DC1	
Se	Select printer			ESC Q #	
De	selec	t printe	er (ignore input)		ESC Q #

Function	Command
Downloading	
Select resident or downloaded font	ESC I (n)
Ex.n = 0:Resident Draft	
2:Resident Courier	
4:Downloaded Draft	
6:Downloaded Courier	$ESC = (n_1) (n_2)$
Create download font	ID (m ₁) (m ₂) (data)
Bit Image Graphics	
Single-density graphics	ESC K $(n_1)(n_2)$ (data)
Double-density graphics	ESC L $(n_1)(n_2)$ (data)
High-speed double-density graphics	ESC Y $(n_1)(n_2)$ (data)
Quadruple-density graphics	ESC $Z(n_1)(n_2)$ (data)
High-resolution graphics	ESC [g (n ₁)(n ₂)
	(m) (data)
Select graphics mode (in AG mode only)	ESC * $(m) (c_1) (c_2)$
	(data)
Cut Sheet Feeder Control	
Feed a sheet from bin 1	ESC EM 1
Feed a sheet from bin 2	ESC EM 2
Feed a sheet from bin 3	ESC EM E
Eject a page from the printer	ESC EM R
Select bin 1 for following pages	//1//
Select bin 2 for following pages	//2//
Select bin 3 for following pages	//E//
Change bins at next page	//C//
Print Option Control	
Friction feed selection	//F//
Rear tractor feed selection	//T//
Front tractor feed selection	// M //
Cut sheet feed selection	//S//
Miscellaneous	
Sound the bell	BEL
Unidirectional printing on/off	ESC U (n)
(on:n=1, off:n=0)	
Add a carriage return to all line feeds	ESC 5 (n)
(on:n=1, off:n=0)	
Printer offline	ESC j
Enter online setup mode	ESC e ONLINE (data)
Select default settings	ESC [K (n ₁)(n ₂)
	(i) (ID) $(p_1)(p_2)$

C-26 User's Manual

EPSON ESC/P2 EMULATION

This section describes the printer commands for the Epson ESC/P2 emulation. Asterisks in the "Function" column indicate extended commands that are not supported by the original printer.

Function	Command
Print Mode Control	
Double-strike (bold) printing on	ESC G
Double-strike (bold) printing off	ESC H
Emphasized (shadow) printing on	ESC E
Emphasized (shadow) printing off	ESC F
Italic printing on	ESC 4
Italic printing off	ESC 5
Select character style	ESC q (n)
n =0: Normal	
1: Outlined	
2: Shaded	
3: Outlined and shadowed	
One-line double-width characters on	SO or ESC SO
One-line double-width characters off	DC4
Double-width characters on/off	ESC W (n)
(on: n= 1, off: n= 0)	
Double-height characters on/off	ESC w (n)
(on: n= 1, off: n= 0)	
Condensed characters on	SI or ESC SI
Condensed characters off	DC2
Subscript or superscript printing on	ESC S (n)
(subscript: n= 1, superscript: n= 0)	
Subscript and superscript printing off	ESC T
Underline on/off	ESC - (n)
(on: n= 1, off: n= 0)	

T	G 1
Function	Command
Select line	ESC $(-(n_1)(n_2)$
$n_1 = 3, n_2 = 0, d_1 = 1$	$\left(d_{1}\right)\left(d_{2}\right)\left(d_{3}\right)$
d_2 = 0:Ignore command	
1:Underline	
2:Strike through	
3:Overscore	
$d_3 = 0$ or 4:Cancel line selection	
1:Single line	
2 or 3:Double line	
5:Single-dotted line	
6 or 7:Double-dotted line	
Select printing style	ESC!(n)
This command allows you to combine	
various printing styles. The value	
of n is the sum of the values of the	
styles you want to combine.	
n = 0:Pica pitch	
1:Elite pitch	
2:Proportional spacing	
4:Condensed	
8:Shadow	
16:Bold	
32:Double-width	
64:Italics	
128:Underline	
Horizontal Control	
Space	SP
Backspace	BS
Carriage return	CR
Set elite pitch	ESC M
Set pica pitch	ESC P
Set 15 CPI	ESC g
Proportionally spaced characters on/off	ESC p (n)
(on: $n = 1$, off: $n = 0$)	
Set inter-character space to n/120 inch (for	ESC SP (n)
draft) or n/180 inch (for letter and	
proportional) $(0 \le n \le 127)$	

C-28 User's Manual

Function	Command
Set character pitch to $(n_1 + n_2 \times 256)/360$ inch	ESC $c(n_1)(n_2)$
$(0 \le n_1 \le 255) \ (0 \le n_2 \le 4)$	
Select character pitch (specify unit of pitch)	ESC ($U(n_1)(n_2)(d)$
$n_1 = 1, n_2 = 0$	
d = 10 to 19: $10/3600 inch = 1/360 inch$	
d = 20 to 29: $20/3600 inch = 1/180 inch$	
d = 30 to 39: $30/3600 inch = 1/120 inch$	
d = 40 to 49: $40/3600 inch = 1/90 inch$	
d = 50 to 59: $50/3600 inch = 1/72 inch$	
d = 60 to 69: $60/3600 inch = 1/60 inch$	
Vertical Control	
Line feed	LF
Form feed	FF
Advance paper n/180 inch $(1 \le n \le 255)$	ESC J (n)
Set line spacing to 1/8 inch	ESC 0
Set line spacing to n/180 inch $(0 \le n \le 255)$	ESC 3 (n)
Set line spacing to n/60 inch $(0 \le n \le 127)$	ESC A (n)
Set line spacing to 1/6 inch	ESC 2
Set line spacing to n/360 inch $(0 \le n \le 255)$	ESC + (n)
Tabulation	
Horizontal tab execution	HT
Set horizontal tabs	ESC D
The values of n_1 to n_k in this	$(n_1)(n_k) NUL$
command are the ASCII values of the	
print columns (at the current character	
width) at which tabs are to be set.	
$(1 \le n \le 255) \ (1 \le k \le 32)$	
Move print position n/120 inch (for draft) ^(*1)	ESC $(n_1)(n_2)$
or n/180 inch (for letter) ^(*1) right from	
left margin (n = $n_1 + n_2 \times 256$)	
Move print position n/120 ^(*1) inch (for draft)	ESC \setminus (n ₁)(n ₂)
Or n/180 ^(*1) inch (for letter) left or right	
from the current position	
$(n = n_1 + n_2 \times 256)$	
Vertical tab execution	VT

$ \begin{array}{c} \text{Set vertical tabs} \\ \text{The values of } n_1 \text{ to } n_k \text{ in this} \\ \text{command are the ASCII values of the} \\ \text{lines (at the current line spacing)} \\ \text{at which tabs are to be set.} \\ (1 \leq n \leq 255) \ (1 \leq k \leq 16) \\ \text{Move to dot line } (d_1 + d_2 \times 256)/360^{(*1)} \text{ inch} \\ n_1 = 2, n_2 = 0 \\ (0 \leq d_1 \leq 255) \ (0 \leq d_2 \leq 127) \\ \text{Vertical relative move by } (d_1 + d_2 \times 256)/360^{(*1)} \text{ inch} \\ n_1 = 2, n_2 = 0 \\ (0 \leq d_1 \leq 255) \ (0 \leq d_2 \leq 127) \\ -32768 \leq d_1 + d_2 \ 256 \times 32768 \\ \text{Page Formatting} \\ \text{Set right margin to column n} \\ (1 \leq n \leq 255) \\ \text{Set left margin to column n} \\ (0 \leq n_1 \leq 255) \\ \text{Set top and bottom margins from top of page} \\ n_1 = 4, n_2 = 0 \\ \bullet \text{ Top margin} = (t_1 + t_2 \times 256)/360^{(*1)} \text{ inch} \\ (0 \leq t_1 \leq 255) \ (0 \leq t_2 \leq 127) \\ \bullet \text{ Bottom margin} = (b_1 + b_2 \times 256)/360^{(*1)} \text{ inch} \\ (0 \leq b_1 \leq 255) \\ (0 \leq b_2 \leq 127) \\ \text{Set perforation skip by n lines} \\ (1 \leq n \leq 127) \\ \text{Perforation skip off} \\ \text{Set page length to n lines } (1 \leq n \leq 127) \\ \text{Set page length to n inches } (1 \leq n \leq 22) \\ \text{Set page length to } (d_1 + d_2 \times 256)/360^{(*1)} \text{ inch} \\ n_1 = 2, n_2 = 0 \\ \text{Set page length to } (d_1 + d_2 \times 256)/360^{(*1)} \text{ inch} \\ n_1 = 2, n_2 = 0 \\ \text{Set page length to } (d_1 + d_2 \times 256)/360^{(*1)} \text{ inch} \\ n_1 = 2, n_2 = 0 \\ \text{Set page length to } (d_1 + d_2 \times 256)/360^{(*1)} \text{ inch} \\ n_1 = 2, n_2 = 0 \\ \text{Set page length to } (d_1 + d_2 \times 256)/360^{(*1)} \text{ inch} \\ n_1 = 2, n_2 = 0 \\ \text{Set page length to } (d_1 + d_2 \times 256)/360^{(*1)} \text{ inch} \\ n_1 = 2, n_2 = 0 \\ \text{Set page length to } (d_1 + d_2 \times 256)/360^{(*1)} \text{ inch} \\ n_1 = 2, n_2 = 0 \\ \text{Set page length to } (d_1 + d_2 \times 256)/360^{(*1)} \text{ inch} \\ n_1 = 2, n_2 = 0 \\ \text{Set page length to } (d_1 + d_2 \times 256)/360^{(*1)} \text{ inch} \\ \text{Set page length to } (d_1 + d_2 \times 256)/360^{(*1)} \text{ inch} \\ \text{Set page length to } (d_1 + d_2 \times 256)/360^{(*1)} \text{ inch} \\ \text{Set page length to } (d_1 + d_2 \times 256)/360^{(*1)} \text{ inch} \\ \text{Set page length } (d_1 + d_2 \times 256)/360^{(*1)} \text{ inch} \\ \text{Set page length } $	Function	Command
The values of n_1 to n_k in this command are the ASCII values of the lines (at the current line spacing) at which tabs are to be set. $(1 \le n \le 255) \ (1 \le k \le 16)$ Move to dot line $(d_1 + d_2 \times 256)/360^{(*1)}$ inch $n_1 = 2, n_2 = 0$ $(0 \le d_1 \le 255) \ (0 \le d_2 \le 127)$ Vertical relative move by $(d_1 + d_2 \times 256)/360^{(*1)}$ Inch $n_1 = 2, n_2 = 0$ $(0 \le d_1 \le 255) \ (0 \le d_2 \le 127)$ $-32768 \le d_1 + d_2 \ 256 \times 32768$ Page Formatting Set right margin to column n $(1 \le n \le 255)$ Set left margin to column n $(0 \le n \le 255)$ Set top and bottom margins from top of page $n_1 = 4, n_2 = 0$ • Top margin = $(t_1 + t_2 \times 256)/360^{(*1)}$ inch $(0 \le t_1 \le 255) \ (0 \le t_2 \le 127)$ • Bottom margin = $(b_1 + b_2 \times 256)/360^{(*1)}$ inch $(0 \le b_1 \le 255) \ (0 \le b_2 \le 127)$ Set perforation skip by n lines $(1 \le n \le 127)$ Perforation skip off Set page length to n lines $(1 \le n \le 127)$ ESC C (n) Set page length to $(d_1 + d_2 \times 256)/360^{(*1)}$ inch $(1 \le n \le 127)$ Perforation skip off Set page length to n lines $(1 \le n \le 127)$ ESC C (n) Set page length to $(d_1 + d_2 \times 256)/360^{(*1)}$ inch $(1 \le n \le 127)$ Perforation skip off Set page length to $(d_1 + d_2 \times 256)/360^{(*1)}$ inch $(1 \le n \le 127)$ Set page length to $(d_1 + d_2 \times 256)/360^{(*1)}$ inch $(1 \le n \le 127)$ ESC C (n) ESC C (n) Set page length to $(d_1 + d_2 \times 256)/360^{(*1)}$ inch $(1 \le n \le 127)$ ESC C (n) ESC C (n) Set page length to $(d_1 + d_2 \times 256)/360^{(*1)}$ inch $(1 \le n \le 127)$ ESC C (n) ESC C (n) Set page length to $(d_1 + d_2 \times 256)/360^{(*1)}$ inch $(1 \le n \le 127)$ ESC C (n) (n) (n) (d) (d) (d) (d)		
command are the ASCII values of the lines (at the current line spacing) at which tabs are to be set. $ (1 \leq n \leq 255) \ (1 \leq k \leq 16) $ Move to dot line $(d_1 + d_2 \times 256)/360^{(*1)}$ inch $ n_1 = 2, n_2 = 0 $ $ (0 \leq d_1 \leq 255) \ (0 \leq d_2 \leq 127) $ Vertical relative move by $(d_1 + d_2 \times 256)/360^{(*1)}$ Inch $ n_1 = 2, n_2 = 0 $ $ (0 \leq d_1 \leq 255) \ (0 \leq d_2 \leq 127) $ $ -32768 \leq d_1 + d_2 \ 256 \times 32768 $ ESC $(v (n_1) (n_2) \ (d_1) (d_2) $ ESC $(v (n_1) (n_2) \ (v_1) (v_2) (v_1) (v_2) $ ESC $(v (n_1) (v_2) \ (v_1) (v_2) (v_1) (v_2) (v_1) (v_2) $ ESC $(v (n_1) (v_2) \ (v_1) (v_2) (v_1) (v_2) (v_1) (v_2) $ ESC $(v (n_1) (v_2) \ (v_1) (v_2) (v_1) (v_2) (v_1) (v_2) (v_1) (v_2) $ ESC $(v (n_1) (v_2) \ (v_1) (v_2) (v_2) (v_1) (v_2) (v_1) (v_2) (v_2) (v_1) (v_2) (v_1) (v_2) (v_2) (v_1) (v_2) (v_2) (v_1) (v_2) (v_2) (v_2) (v_1) (v_2) (v_2) (v_1) (v_2) (v_2) (v_2) (v_1) (v_2) (v_2) (v_2) (v_2) (v_2) (v_1) (v_2) (v_2)$, -7
$\begin{array}{llllllllllllllllllllllllllllllllllll$		(n_k) NUL
at which tabs are to be set. $(1 \le n \le 255)$ $(1 \le k \le 16)$ Move to dot line $(d_1 + d_2 \times 256)/360^{(*1)}$ inch $n_1 = 2, n_2 = 0$ $(0 \le d_1 \le 255)$ $(0 \le d_2 \le 127)$ Vertical relative move by $(d_1 + d_2 \times 256)/360^{(*1)}$ Inch $n_1 = 2, n_2 = 0$ $(0 \le d_1 \le 255)$ $(0 \le d_2 \le 127)$ Use Formatting Set right margin to column n $(0 \le d_1 \le 255)$ Set left margin to column n $(1 \le n \le 255)$ Set left margin to column n $(0 \le n \le 255)$ Set top and bottom margins from top of page $n_1 = 4, n_2 = 0$ $n_1 = 4, n_2 = 0$ ESC (n_1) (n_2) (n_1) (n_2) (n_1) (n_2) (n_2) (n_1) (n_2) (n_2) (n_2) (n_3) ESC (n_3) Set perforation skip by n_3 lines $(1 \le n \le 127)$ Set page length to n_3 lines $(1 \le n \le 127)$ Set page length to n_3 lines $(1 \le n \le 127)$ Set page length to (n_3) (n_1) (n_2) (n_3) (n_4) (n_5) Set page length to (n_5) $($		
$ \begin{array}{llllllllllllllllllllllllllllllllllll$		
$\begin{array}{llllllllllllllllllllllllllllllllllll$		
$\begin{array}{llllllllllllllllllllllllllllllllllll$		ESC (M(n)(n)
$ \begin{array}{llllllllllllllllllllllllllllllllllll$		
$\begin{array}{llllllllllllllllllllllllllllllllllll$		$(\mathbf{u}_1)(\mathbf{u}_2)$
$\begin{array}{llllllllllllllllllllllllllllllllllll$		ESC(y(n)(n)
$\begin{array}{llllllllllllllllllllllllllllllllllll$	- 1	
$\begin{array}{lll} & (0 \leq d_1 \leq 255) \ (0 \leq d_2 \leq 127) \\ -32768 \leq d_1 + d_2 \ 256 \times 32768 \end{array} \\ \hline Page Formatting \\ Set right margin to column n \\ & (1 \leq n \leq 255) \\ Set left margin to column n \\ & (0 \leq n \leq 255) \\ Set top and bottom margins from top of page \\ & n_1 = 4, n_2 = 0 \\ & \bullet \ Top \ margin = (t_1 + t_2 \times 256)/360^{(*1)} \ inch \\ & (0 \leq t_1 \leq 255) \ (0 \leq t_2 \leq 127) \\ & \bullet \ Bottom \ margin = (b_1 + b_2 \times 256)/360^{(*1)} \ inch \\ & (0 \leq b_1 \leq 255) \\ & (0 \leq b_2 \leq 127) \\ \hline Set \ perforation \ skip \ by \ n \ lines \\ & (1 \leq n \leq 127) \\ \hline Perforation \ skip \ off \\ Set \ page \ length \ to \ n \ lines \ (1 \leq n \leq 127) \\ Set \ page \ length \ to \ n \ inches \ (1 \leq n \leq 22) \\ Set \ page \ length \ to \ n \ inches \ (1 \leq n \leq 22) \\ Set \ page \ length \ to \ (d_1 + d_2 \times 256)/360^{(*1)} \ inch \\ & n_1 = 2, n_2 = 0 \\ \hline \end{array} \begin{array}{l} ESC \ C \ (n_1) \ (n_2) \\ ESC \ C \ (n_1) \ (n_2) \\ (d_1) \ (d_2) \\ \hline \end{array}$		$(\mathbf{u}_1)(\mathbf{u}_2)$
$\begin{array}{llllllllllllllllllllllllllllllllllll$. , 2	
Page Formatting Set right margin to column n $ (1 \le n \le 255) $ Set left margin to column n $ (0 \le n \le 255) $ Set top and bottom margins from top of page $ n_1 = 4, n_2 = 0 $ ESC (c (n_1) (n_2) (n_1) (n_2) (n_1) (n_2) (n_2) (n_3) (n_4) (n_4) (n_5)		
$\begin{array}{llllllllllllllllllllllllllllllllllll$		
$(1 \leq n \leq 255)$ Set left margin to column n $(0 \leq n \leq 255)$ Set top and bottom margins from top of page $n_1 = 4, n_2 = 0$ $\bullet \text{ Top margin} = (t_1 + t_2 \times 256)/360^{(*1)} \text{ inch}$ $(0 \leq t_1 \leq 255) \ (0 \leq t_2 \leq 127)$ $\bullet \text{ Bottom margin} = (b_1 + b_2 \times 256)/360^{(*1)} \text{ inch}$ $(0 \leq b_1 \leq 255)$ $(0 \leq b_2 \leq 127)$ Set perforation skip by n lines $(1 \leq n \leq 127)$ Perforation skip off Set page length to n lines $(1 \leq n \leq 127)$ Set page length to n inches $(1 \leq n \leq 25)$ ESC C (n) Set page length to $(1 \leq n \leq 22)$ ESC C NUL (n) Set page length to $(1 \leq n \leq 25)/360^{(*1)} \text{ inch}$ $(1 \leq n \leq 22)$ ESC C (n) Set page length to $(1 \leq n \leq 22)$ ESC C (n) (d ₁) (d ₂)		EGG O ()
$\begin{array}{llllllllllllllllllllllllllllllllllll$		ESC Q (n)
$(0 \leq n \leq 255)$ Set top and bottom margins from top of page $n_1 = 4, n_2 = 0$ $\bullet \text{ Top margin} = (t_1 + t_2 \times 256)/360^{(*1)} \text{ inch}$ $(0 \leq t_1 \leq 255) (0 \leq t_2 \leq 127)$ $\bullet \text{ Bottom margin} = (b_1 + b_2 \times 256)/360^{(*1)} \text{ inch}$ $(0 \leq b_1 \leq 255)$ $(0 \leq b_2 \leq 127)$ Set perforation skip by n lines $(1 \leq n \leq 127)$ Perforation skip off Set page length to n lines $(1 \leq n \leq 127)$ Set page length to n inches $(1 \leq n \leq 22)$ Set page length to $(1 \leq n \leq 22)$		EGG 1()
Set top and bottom margins from top of page $n_1 = 4, n_2 = 0$ • Top margin = $(t_1 + t_2 \times 256)/360^{(*1)}$ inch $(0 \le t_1 \le 255) (0 \le t_2 \le 127)$ • Bottom margin = $(b_1 + b_2 \times 256)/360^{(*1)}$ inch $(0 \le b_1 \le 255)$ $(0 \le b_2 \le 127)$ Set perforation skip by n lines $(1 \le n \le 127)$ Perforation skip off Set page length to n lines $(1 \le n \le 127)$ Set page length to n inches $(1 \le n \le 22)$ Set page length to $(d_1 + d_2 \times 256)/360^{(*1)}$ inch $(d_1 + d_2 \times 256)/360^{(*1)}$ inch $(d_1)(d_2)$	_	ESC I (n)
$\begin{array}{lll} n_1 = 4, n_2 = 0 & & & & & \\ \bullet \ \text{Top margin} = (t_1 + t_2 \times 256)/360^{(*1)} \ \text{inch} & & & & & \\ & (0 \leq t_1 \leq 255) \ (0 \leq t_2 \leq 127) & & & \\ \bullet \ \text{Bottom margin} = (b_1 + b_2 \times 256)/360^{(*1)} \ \text{inch} & & & \\ & (0 \leq b_1 \leq 255) & & & \\ & (0 \leq b_2 \leq 127) & & & \\ \text{Set perforation skip by n lines} & & & & \\ & (1 \leq n \leq 127) & & & & \\ \text{Set page length to n lines} \ (1 \leq n \leq 127) & & & \\ \text{Set page length to n inches} \ (1 \leq n \leq 127) & & & \\ \text{Set page length to n inches} \ (1 \leq n \leq 22) & & \\ \text{Set page length to} \ (d_1 + d_2 \times 256)/360^{(*1)} \ \text{inch} & \\ & n_1 = 2, n_2 = 0 & & \\ \end{array} \qquad \begin{array}{l} \text{(t_1) } \ (t_2) \ (b_1) \ (b_2) \\ \\ \text{(t_1)} \ (t_2) \ (b_1) \ (b_2) \\ \\ \text{ESC N (n)} \\ \\ \text{ESC N (n)} \\ \\ \text{ESC C (n)} \\ \\ \text{ESC C (n)} \\ \\ \text{ESC C (n_1) } \ (n_2) \\ \\ \text{(d_1) } \ (d_2) \\ \end{array}$		ECC (- (-) (-)
• Top margin = $(t_1 + t_2 \times 256)/360^{(*1)}$ inch $(0 \le t_1 \le 255)$ $(0 \le t_2 \le 127)$ • Bottom margin = $(b_1 + b_2 \times 256)/360^{(*1)}$ inch $(0 \le b_1 \le 255)$ $(0 \le b_2 \le 127)$ Set perforation skip by n lines $(1 \le n \le 127)$ Perforation skip off Set page length to n lines $(1 \le n \le 127)$ Set page length to n inches $(1 \le n \le 127)$ Set page length to $(1 \le n \le 127)$ Set page length to $(1 \le n \le 127)$ ESC C (n) ESC C NUL (n) Set page length to $(1 \le n \le 127)$ ESC C (C (n ₁) (n ₂) $(1 \le n \le 127)$ ESC C (C (n ₁) (n ₂) $(1 \le n \le 127)$ ESC C (C (n ₁) (n ₂)		
$(0 \le t_1 \le 255) \ (0 \le t_2 \le 127)$ • Bottom margin = $(b_1 + b_2 \times 256)/360^{(*1)}$ inch $(0 \le b_1 \le 255)$ $(0 \le b_2 \le 127)$ Set perforation skip by n lines $(1 \le n \le 127)$ Perforation skip off Set page length to n lines $(1 \le n \le 127)$ ESC C (n) Set page length to n inches $(1 \le n \le 22)$ ESC C NUL (n) Set page length to $(d_1 + d_2 \times 256)/360^{(*1)}$ inch $(d_1)(d_2)$		$(\iota_1)(\iota_2)(\upsilon_1)(\upsilon_2)$
$(0 \leq b_1 \leq 255)$ $(0 \leq b_2 \leq 127)$ Set perforation skip by n lines $(1 \leq n \leq 127)$ Perforation skip off Set page length to n lines $(1 \leq n \leq 127)$ Set page length to n inches $(1 \leq n \leq 127)$ Set page length to $(1 \leq n \leq 127)$ Set page length to $(1 \leq n \leq 22)$ ESC C (n) Set page length to $(1 \leq n \leq 22)$ ESC C NUL (n) Set page length to $(1 \leq n \leq 22)$ Set page length to $(1 \leq n \leq 22)$ ESC C NUL (n) $(1 \leq n \leq 127)$ ESC C (n) $(1 \leq n \leq 127)$ ESC C (n) $(1 \leq n \leq 127)$ ESC C (n) $(1 \leq n \leq 127)$ Set page length to $(1 \leq n \leq 127)$ ESC C (n) $(1 \leq n \leq 127)$ Set page length to $(1 \leq n \leq 127)$ ESC C (n) $(1 \leq n \leq 127)$		
$(0 \leq b_2 \leq 127)$ Set perforation skip by n lines $(1 \leq n \leq 127)$ Perforation skip off $ESC \ O$ Set page length to n lines $(1 \leq n \leq 127)$ Set page length to n inches $(1 \leq n \leq 22)$ Set page length to $(d_1 + d_2 \times 256)/360^{(*1)}$ inch $(d_1) (d_2)$ $ESC \ C \ (n)$ $ESC \ (n)$		
$ \begin{array}{lll} \text{Set perforation skip by n lines} & & \text{ESC N (n)} \\ & & (1 \leq n \leq 127) & & & \\ & \text{Perforation skip off} & & \text{ESC O} \\ & \text{Set page length to n lines } (1 \leq n \leq 127) & & \text{ESC C (n)} \\ & \text{Set page length to n inches } (1 \leq n \leq 22) & & \text{ESC C NUL (n)} \\ & \text{Set page length to } (d_1 + d_2 \times 256)/360^{(*1)} \text{ inch} & & \text{ESC (C (n_1) (n_2)} \\ & & n_1 = 2, n_2 = 0 & & \text{(d_1) (d_2)} \\ \end{array} $	` '	
$(1 \le n \le 127)$ Perforation skip off Set page length to n lines $(1 \le n \le 127)$ Set page length to n inches $(1 \le n \le 127)$ Set page length to $(1 \le n \le 12$		ESC N (n)
Perforation skip off Set page length to n lines $(1 \le n \le 127)$ Set page length to n inches $(1 \le n \le 22)$ Set page length to $(d_1 + d_2 \times 256)/360^{(*1)}$ inch $(d_1)(d_2)$ ESC C (n) ESC C NUL (n) ESC C (C (n ₁) (n ₂) (d ₁) (d ₂)		ESC N (II)
Set page length to n lines $(1 \le n \le 127)$ ESC C (n) Set page length to n inches $(1 \le n \le 22)$ ESC C NUL (n) Set page length to $(d_1 + d_2 \times 256)/360^{(*1)}$ inch $(d_1)(d_2)$ ESC C (n)		ESC O
Set page length to n inches $(1 \le n \le 22)$ ESC C NUL (n) Set page length to $(d_1 + d_2 \times 256)/360^{(*1)}$ inch $(d_1) (d_2)$ ESC C (n) $(d_1) (d_2)$	<u>-</u>	
Set page length to $(d_1 + d_2 \times 256)/360^{(*1)}$ inch $(d_1 + d_2 \times 256)/360^{(*1)}$ inch $(d_1) (d_2)$		` '
$n_1 = 2, n_2 = 0$ $(d_1)(d_2)$, /	` ´
$(0 > u_1 > 233)(0 > u_2 > 127)$	$(0 \le d_1 \le 255) (0 \le d_2 \le 127)$	(1) (-2)

The value depends on the pitch set by the ESC (U command. The default is 1/360 inch.

C-30 User's Manual

Function	Command
Character Set Control	
Select character set 1	ESC 7
Select character set 2	ESC 6
Select character set table	ESC t (n)
n = 0:Italics character set	
1:Graphics character set	
2:Downloaded character set	
3:Graphics character set	
Select international character set	ESC R (n)
n = 0:USA	
1:France	
2:Germany	
3:United Kingdom	
4:Denmark 1	
5:Sweden	
6:Italy	
7:Spanish 1	
8:Japan	
9:Norway	
10:Denmark 2	
11:Spanish 2	
12:Latin America	
13:Korea	
64:Legal	

Function	Command
Assign a character set to active character set	ESC (t (n ₁) (n ₂)
number 0 to 3	$(d_1)(d_2)(d_3)$
$n_1 = 3, n_2 = 0$	
$d_1 = 0$:Active character set number 0	
1:Active character set number 1	
2:Active character set number 2	
3:Active character set number 3	
$d_2 = 0$:Italic	
1:PC 437 (USA)	
3:PC 850 (Multilingual)	
7:PC 860 (Portugal)	
8:PC 863 (Canada-French)	
9:PC 865 (Norway)	
$d_3 = 0$	
Print $n_1 + n_2 \times 256$ characters from all-	ESC ($^{\wedge}$ (n_1)(n_2)
character set	(character codes)
$(0 \le n_1 \le 255) (0 \le n_2 \le 127)$	
$(0 \le n_1 + n_2 \times 256 \le 255)$	
$(0 \text{ character codes} \le 254)$	
Clear input buffer	CAN
Delete a character	DEL
Force most significant bit to 1	ESC >
Force most significant bit to 0	ESC =
Cancel control over most significant bit	ESC#
Font Selection and Downloading	
Select font	ESC % (n)
n = 0:Resident character set	
1:Downloaded character set	
Select letter or draft quality	ESC x (n)
n = 0:Draft	
1:Letter	

C-32 User's Manual

Function	Command
Select type style	
Bitmap font:	ESC k (n)
n = 0:Courier	
1:Courier	
2:Courier	
3:Prestige	
4:Courier	
5:OCR-B	
6:OCR-A	
7:Courier	
8:Courier	
9:Courier	
• Scalable font:	
n = 0:Timeless	
1:Nimbus Sans ®	
2:Courier	
3:Timeless	
4:Timeless	
5:Timeless	
6:Timeless	
7:Timeless	
8:Timeless	
9:Timeless	
Set scalable font mode	ESC $X m (n_1)(n_2)$
• m sets character pitch.	
m = 0:Keep previous pitch	
1:Set proportional space mode	
$m \ge 5$:Select character pitch	
(m/360 inch)	
(Reset proportional space mode)	
• n ₁ and n ₂ set point size of font.	
Point size = $(n_1 + n_2 \times 256) \times 0.5$ point	
$(0 \le n_1 \le 255) (0 \le n_2 \le 127)$	
Copy resident character set to download area	ESC : NUL(n)(s)
Create download font	ESC & NUL $(n_1)(n_2)$
	$(d_0)(d_1)(d_2)(data)$

^{*} Indicates extended commands not supported by the original printer.

Function	Command
Bit Image Graphics	
Graphics type m graphics	ESC * (m) (n ₁)(n ₂)
	(data)
Bit image mode definition	ESC ? (s) (n)
Single-density graphics	ESC K $(n_1)(n_2)$ (data)
Double-density graphics	ESC L $(n_1)(n_2)$ (data)
High-speed double-density graphics	ESC Y $(n_1)(n_2)$ (data)
Quadruple-density graphics	ESC $Z(n_1)(n_2)$ (data)
Select raster image graphics	ESC ($G(n_1)(n_2)(d)$
$n_1 = 1, n_2 = 0$	
d= 1: Raster image graphics mode	
Print raster image graphics	ESC . (c)(v) (h) (m)
	$(n_1)(n_2)$ (data)
Cut Sheet Feeder Control	
Feed a sheet from bin 1	ESC EM 1
Feed a sheet from bin 2	ESC EM 2
Feed a sheet from bin 3	ESC EM E
Eject a page from the printer	ESC EM R
Select bin 1 for following pages	//1//
Select bin 2 for following pages	//2//
Select bin 3 for following pages	//E//
Change bins at next page	//C//
Print Option Control	
Friction feed selection	//F//
Rear tractor feed selection	//T//
Front tractor feed selection	// M //
Cut sheet feed selection	//S//
Miscellaneous	
Sound the bell	BEL
Move print head to home position	ESC <
Unidirectional printing on/off	ESC U (n)
(on:n = 1, off:n = 0)	
Initialize printer	ESC @
Enter online setup mode	ESC e ONLINE
	(data)

C-34 User's Manual

INTERFACE INFORMATION

This printer can communicate with a computer through a Centronics parallel interface, a RS-232C serial interface, a USB interface, or a LAN interface. You can specify the interface selection mode so that the printer uses which interface or it can automatically select the interface from which it first receives data.

This appendix provides information you may need for wiring your own interface cables or for programming computer-to-printer communications. Most users do not need the information in this appendix. To simply connect your printer to your computer, follow the instructions in Chapter 2.

This parallel interface can operate in the following two modes:

- Unidirectional (forward channel) mode or conventional mode: This printer supports a conventional Centronics interface.
- Bidirectional (forward/reverse channel) mode or nibble mode: This
 printer supports a bidirectional communication per Nibble mode of
 the IEEE 1284 Standard.

The cable connector at the printer side should be a shielded, Amphenol DDK 57FE-30360 or equivalent.

The connector pin assignments are given in the following tables by modes. In the tables:

- "Input" denotes a signal from the computer to the printer.
- "Output" denotes a signal from the printer to the computer.
- The return lines specified in the second column represent twisted pairs, with one side connected to signal ground.
- The standard signal levels are 0.0 to +0.4 V (low), and +2.4 to +5.0 V (high).

PARALLEL INTERFACE

Compatible Mode

Pin No.	Return Pin No.	Signal Name	Direction	Description
1	19	Data Strobe (DSTB)	Input	This signal is a strobe pulse for reading data (Data 1 to 8). The printer reads data when this signal is low. The pulse width must be 1 µs or more at the receiving terminal.
2-9	20-27	Data 1 to 8	Input	Data 8 (pin 9) is the most significant bit; however, this pin is not used in 7-bit ASCII communications. Logical 1 signals must go high at least 1 µs before the falling edge of the Data Strobe signal and must stay high for at least
10	28	Acknowledge (ACK)	Output	1 μs after the rising edge. This pulse signal indicates that the printer has received data and is ready to accept the next set of data. This signal is also sent when the printer is switched from offline to online.
11	29	Busy	Output	Data cannot be received when this signal is high. This signal is high during data entry, when the printer is offline, when the buffer is full, or when an error occurs.
12	30	Paper Empty (PE)	Output	This signal is high when the printer is out of paper.

D-2 User's Manual

Pin No.	Return Pin No.	Signal Name	Direction	Description
13	ı	Select (SLCT)	Output	This signal is high when the printer is online.
14	-	Auto Feed XT	Input	Not used
15	1	_	_	No connection
16	-	Signal Ground	_	Logic ground level (0 V)
17	ı	Frame Ground	_	Printer chassis ground line. FG and SG are connected.
18	I	+5 V	Output	+5 V source (up to 300 mA)
19- 30	I	Signal Ground	_	Twisted pair return lines
31	ı	Input Prime (INPRM)		If this signal is low for more (INPRM) than 50 μs, the printer is reset to the initial condition and is placed online.
32	-	Fault	Output	This signal is low when the printer is offline, paper is out, or when there is a printer error.
33	-	Signal Ground	_	Logic ground level (0 V)
34	_	_	_	No connection
35		+5 VR	Output	Pulled up to +5 V through a 3.3 kΩ resistor
36	_	SLCT-IN	Input	Not used

Nibble Mode

Pin numbers 2 to 9, 15 to 31, and 33 to 35 are the same as the conventional mode.


Pin No.	Return Pin No.	Signal Name	Direction	Description
1	19	Host Clock	Input	This signal is set high when the host requests the reverse data transfer phase (nibble mode).
10	28	Printer Clock	Reverse data transf phase: This signal goes hi when data being se host is established. Reverse idle phase: This signal is set lo goes high to interru host, indicating tha available.	
11	29	Printer Busy	Output	Reverse data transfer phase: Data bit 3, data bit 7, then forward path (host to printer) busy status
12	30	Ack Data Req	Output	Reverse data transfer phase: Data bit 2, then data bit 6 Reverse idle phase: This signal is set high until the host requests data and, after that, follows the Data Available signal.
13	-	X Flag	Output	Reverse data transfer phase: Data bit 1, then data bit 5

D-4 User's Manual


Pin No.	Return Pin No.	Signal Name	Direction	Description
14	_	Host Busy	Input	Reverse data transfer phase: This signal is set low when the host can receive data, and goes high when the host has received data. Following a reverse data transfer, the interface enters the reverse idle phase when the Host Busy signal goes low and the printer has no data. Reverse idle phase: This signal goes high when the Printer Clock signal goes low so that the interface re-enters the reverse data transfer phase. If it goes high with the 1284 Active signal low, the 1284 idle phase is aborted and the interface returns to the compatibility mode.
32	_	Data Available	Output	Reverse data transfer phase: This signal is set low when the printer is ready to send data to the host. During the data transfer, it is used as data bit 0 (LSB), then data bit 4. Reverse idle phase: This signal is used to indicate that data is available.
36	-	1284 Active	Input	This signal goes high to cause the printer to enter the reverse data transfer phase (nibble mode).

Data Transmission Timing

In unidirectional mode (conventional Centronics interface), this printer guarantees the received data when the Data and Data Strobe signals from the computer have the following timing with respect to the Busy and Acknowledge signals from the printer.

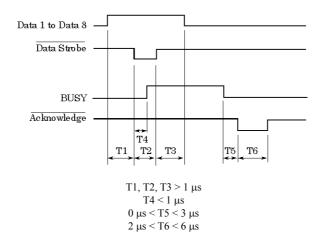

In bidirectional mode (nibblemode), this printer can send data to the computer. Data is sent in units of four bits (nibble) using four output signal lines as data paths. The following outlines one byte of data sent during reverse data transfer phase in nibble mode.

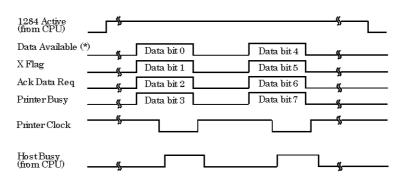

^{*} $\overline{\text{Data Available}}$ is assigned for the cable.

D-6 User's Manual

SERIAL INTERFACE

RS-232C is the standard serial interface for data terminal equipment. The cable connector at the printer side should be a D-subminiature Cannon or Cinch DB-25P male connector or equivalent that conforms to EIA standards.

The table that follows shows the pin assignments commonly used by most computers. In the table:

- "Input" denotes a signal from the computer to the printer.
- "Output" denotes a signal from the printer to the computer.
- The signal level for mark state (logical 1) is -3 V or lower; for space state (logical 0), it is +3 V or higher.

Pin No.	Signal Name	Direction	Description	
1	FG	_	Frame Ground	
2	TD	Output	This pin carries information from the printer to the computer.	
3	RD	Input	Received Data. This pin carries information from the computer to the printer.	
4	RTS	Output	Request To Send. Spaces are sent when the printer is ready to transmit data.	
5	CTS	Input	Clear To Send. Spaces are sent when the computer is ready to receive data.	
6	DSR	Input	Data Set Ready. Spaces are sent when the computer has been powered on and is ready to receive or transmit data.	
7	SG	_	Signal Ground (common return)	
8	CD	Input	Carrier Detect. Spaces are sent when the computer allows the printer to receive data.	
11	RC	Output	Reverse Channel. This signal is used instead of the DTR signal in the RC protocol. Spaces are sent when the printer is ready to receive or transmit data.	
20	DTR	Output	Data Terminal Ready. Spaces are sent when the printer has been powered on and is ready to receive or transmit data.	

Serial Options

The serial options for the computer and the printer must match. Use the printer control panel, the computer operating system, or your software to change options specified as "selectable."

Transmission mode: Asynchronous, full duplex, or half duplex

(selectable)

Speed: 150, 300, 600, 1200, 2400, 4800, 9600, or

19200 baud (selectable)

Data bits: 7 or 8 bits (selectable)

Parity bit: Odd, even, mark, space, or none (selectable)

Start bit: 1 bit

Stop bit: 1 or 2 bits (selectable)

Protocol: XON/XOFF (DC1/DC3), DTR (Data Terminal

Ready), or RC (Reverse Channel) (selectable)

Buffer size: 256, 2K, 8K, 24K, 32K, 96K, or 128K bytes


(selectable)

Cable Wiring

This printer allows two types of serial communication control: DSR-enabled and DSR-disabled. The type of control required is determined by your computer requirements. The type of control also affects the way the interface cable is wired. To determine whether you need DSR-enabled control or DSR-disabled control, use the printer HARDWRE function (see Chapter 5).

DSR-disabled control offers simpler cabling and communication than does DSR-enabled control. DSR-disabled control can be used to interface with an IBM PC and most other personal computers. With DSR-disabled control, the input control signals DSR, CTS, and CD are always considered high, regardless of their actual states. Therefore, no wire connection for these pins is required. The following figure shows the wiring required for connection to an IBM PC.

D-8 User's Manual

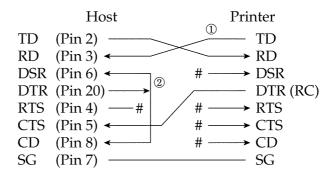


indicates an open wire.

Wire q is unnecessary for the DTR (or RC) protocol. Some computers may not require wire w.

DSR-enabled control enables communication using an RS-232C interface. The CTS and DSR input control signals are enabled; CD is ignored. DSR must be high when the printer receives data. If the printer has data to be transmitted to the computer, the printer transmits the data when both DSR and CTS are high.

When using DSR-enabled control, use a straight-through cable to connect to a DCE (data communications equipment) device. Use a null-modem cable to connect to a DTE (data terminal equipment) device, as shown below.

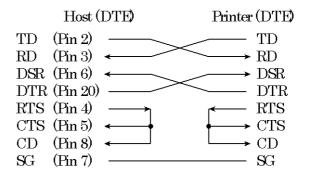

Serial Protocols

A protocol is a set of instructions that control the way data is transmitted between devices such as a computer and printer. The protocol ensures that the computer does not send information to the printer faster than the information can be processed. By telling the computer when the printer can receive data, the protocol prevents the printer s buffer from overflowing.

This printer offers a choice of four different protocols for connection to a variety of computers: XON/XOFF, DTR, and RC. If you computer documentation does not recommend a particular protocol, try DTR. The following table describes the three protocols.

Protocol	Description
XON/XOFF (DC1/DC3)	When the printer is ready to receive data, it sends the XON (DC1) code (hex 11). When fewer than 255 bytes of space remain in the buffer (or when the printer is taken offline), the printer sends the XOFF (DC3) code (hex 13). (When the input buffer is configured for 256 bytes, the buffer limit is reduced from 255 bytes to 63 bytes.) The computer must stop transmitting data within 255 (63) characters of receiving the XOFF code, or information may be lost. If paper runs out, the printer sends an NAK code (hex 15).
DTR	DTR is a hardware protocol; that is, the DTR signal on interface cable pin 20 is used to control the flow of data rather than transmission of a character code. When the printer is ready to receive data, pin 20 is high. When fewer than 255 (63) bytes of space remain in the buffer (or when the printer is taken offline), pin 20 is low. The computer must stop transmitting data within 255 (63) characters of DTR being low, or information may be lost.
RC	The RC protocol is the same as the DTR protocol, except that the Reverse Channel signal (pin 11) is used instead of the Data Terminal Ready signal (pin 20).


D-10 User's Manual

USB INTERFACE

Cable

This printer supports the USB 1.1 Full speed specification. To connect to the host, use USB 2.0-compliant INF cables (5 meters (196 inch) or shorter). (Use the shielded cables.)

Connector pin alignment

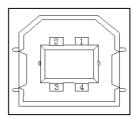

No.	Signal line name	Function
1	vbus	Power supply
2	D-	Data transfer
3	D+	Data transfer
4	GND	Signal ground
Shell	Shield	

- Connector specification Printer side

Cable side

Type B receptacle (female)

Upstream port Type B plug (male)

Specification

- Basic specification

USB interface compliant

Note

It does not guarantee all operations on hosts.

- Power control Self-power device

- Transmission mode Full speed (Maximum 12 Mbps


+0.25%)

LAN INTERFACE

Cable

This printer supports the 10Base-T and 100Base-TX cables.

Connector pin alignment

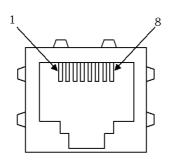

No.	Signal line name	DIR	Function
1	TXO+	NIC-HUB	Transmit data +
2	TXO-	NIC-HUB	Transmit data -
3	RXI+	HUB-NIC	Receive data +
4	-	-	-
5	-	-	-
6	RXI-	HUB-NIC	Receive data -
7	-	-	-
8	-	=	_

D-12 User's Manual

Ε

CHARACTER SETS

CHARACTER SETS 1 AND 2 (DPL24C PLUS AND IBM XL24E EMULATION) Below are character sets 1 and 2 of Code Page 437, available in the DPL24C PLUS command set and the IBM Proprinter XL24E emulation. Characters enclosed in boxes differ for sets 1 and 2. Characters in set 2 also vary with the national character set.

Code Page 437 is for the USA character set.

Code Page 437 Character Set 1

L/H	0	1.	2	3	4	5	6	7	8	9	Ã	В	С	D	E	F
0	NUL	DLE	SP	0	@	P	-	p	NUL	DLE	á	##	L	1	α	₹
1	SOH	DC1	1	1	A	Q	a	q	SOH	DC1	1		_	7	ß	±
2	STX	DC2	11	2	В	R	b	r	STX	DC2	Ó	Ħ	т	Ť	Г	2
3	EIX	DC3	#	3	C	S	¢	5	EIX	DC3	ú	Ţ	}	L	π	2
4	EOT	DC4	\$	4	Ð	T	đ	t		DC4	ñ	4	<u> </u>	Ŀ	Σ	ſ
5	ENQ.	NAK	%	5	E	U	9	u	ENQ	NAK	Ñ	=	+	F	σ	j
6	ACK	SYN	δ	6	F	V	f	V	ACK	SYN	2	1	F	Ī	μ	ŧ
7	BF1	ETB	•	7	G	W	8	W	BEL	EIB	Q	ור ור	₽	Ŧ	τ	恕
8	BS	CAN	(8	H	X	ħ	X	BS	CAN	L	4	Œ	#	•	•
9	HT	EM)	9	I	Y	ĺ	У	HT	EM.	-	╡	1	J	9	•
A	LF	STUB	*	:	J	Z	j	Z	LF	SUB	٦		4	Г	Ω	•
В	VT	ESC	+	;	K	Į.	k	-{	VT	ESC	1/2	j	Ŧ		δ	√
C	FF	FS	,	<	L	1	1	- 1	FF	FS	+	_	Ī	-	00	A
D	joa.	GS	-	-	M	1		}	CR	CS	i	耳	_	Г	ø	2
E	SO	RS		>	N	^	n	~	SO	RS	*	닄	#	1	€	
P	SI	US	1	?	0		0	DEL.	SI	US	*	٦	<u>.1</u>		n	SP

Code Page 437 Character Set 2

L/H	0	1	2	3	4	5	6	7	8	9	A	В	c	Ď	E	F
0	NUL	DLE	SP	0	e	P	-	p	Ç	É	á		Ļ	<u></u>	O.	=
1	SOH	DC1	!	1	A	Q	a	q	ü	æ	í	*	+	Ŧ	ß	±
2	SIX	DC2	ŧŧ	2	В	R	b	r	é	Æ	Ó		т	ή	Γ	2
3	[♥	DC3	#	3	C	S	С	s	ā	δ	ú	T	-	I	π	≤
4	•	DC4	\$	4	Ð	T	đ	t	ä	ö	ñ	4	÷	F	Σ	ſ
5	•	S	Z	5	E	U	e	u	à	ò	Ñ	=	+	F	ø	J
6		SYN	δŧ	6	F	٧	£	v	å	ũ	a	1	F	'n	μ	÷
7	BEL	EIB	٠	7	G	W	g	W	Ç	ù	Q	π̈	ŀ	Į.	τ	3
8	BS	CAN	(8	H	X	ħ	х	ē	ÿ	Ł	ij	L	+	Φ	•
9	KT	EM)	9	1	Y	i	У	ë	Ö	-	4	f	L	θ	•
A	LF	SUB	*	:	J	Z	j	z	è	Ü	٦.		-22	r	Ω	•
В	VT	ESC	+	;	K	ſ	k	-{	ï	¢	1	j	T		δ	√
C	FF	FS	,	<	L	1	1	- 1	î	£	1		ŀ	_	00	n
D	CR	GS	_	₩.	М	1	-)	ì	¥	ī	j.	=	Г	Ø	2
E	SO	RS	٠	>	N	^	n	~	Ä	R	<	료	1	ኀ	€	
F	SI	US	1	?	0	_	0	DEL	A	ſ	*	٦	*		N	SP

ITALIC AND GRAPHICS CHARACTER SETS (ESC/P2 EMULATION) The following shows character sets available in the Epson ESC/P2 emulation. Characters differ in codes 128 to 255 (hex 80 to FF).

Italic Character Set

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	E	F
0	NUL	DLE	SP	0	@	P	~	р	NUL	DLE	SP	0	æ	P	-	p
1	SOH	DC1	1	1	A	Q	a	q	SOH	DC1	!	1	A	Q	a	q
2	STX	DC2	**	2	В	R	b	r	STX	DC2	**	2	В	R	b	r
3	EIX	DC3	#	3	C	S	c	s	EIX	DC3	#	3	С	S	С	s
4	BOT	DC4	\$	4	Ð	T	ď	t	BOT	DC4	\$	4	D	T	d	t
5	ENQ	nak	%	5	E	U	е	u	ENQ	NAK	2	5	E	U	e	u
6	ACK	SYN	δr	6	F	V	£	v	ACK	SYN	å	6	₽	V	f	¥
7	BEL	ETB	1	7	G	W	8	W	BET.	ETB	•	7	G	W	g	W
8	BS	CAN	(8	H	X	h	x	BS	CAN	(8	H	X	h	X
9	HT	EM)	9	I	Y	i	У	HT	EM)	9	I	Y	i	у
A	LF	SUB	*	:	J	Z	j	Z	LF	SUB	*	:	J	Z	j	Z
В	VT	ESC	+	;	K	[k	{	VT	ESC	+	;	K	Ι	k	{
С	FF	FS	•	<	L	\	1	- 1	FF	FS	,	<	L	- 1	1	- /
D	OR.	GS	_	-	M	1		}	CR.	GS	-	æ	M]	<u> </u>	}
E	SO	RS		>	N	^	n	~	SO	RS		>	N	^	n	~
F	SI	US	- /	?	0		0	DEL	SI	US	1	?	0		0	SP

Graphics Character Set 1

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	E	F
0	NUL	DLE	SP	0	@	P	-	р	NUL	ILE	á	:::	L	Ш	OL.	Ξ
1	SOH	DC1	1	1	A	Q	a	q	SOH	DCL	1	**************************************	T	₹	ß	±
2	STX	DC2	†1	2	В	R	b	r	SIX	DC2	ó		Τ.	+	Г	2
3	EIX	DC3	#	3	С	S	c	8	EIX	DC3	ú	1913	-		71	٤
4	EOT	DC4	Ş	4	D	T	đ	t	EOT	DC4	ñ	4	<u>-</u>	╘	Σ	ſ
5	ENQ	ş	%	5	E	U	е	u	ENQ	NAK	Ñ	4	+	f	0	J
6	ACK	SYN	δ.	6	F	V	£	v	ACK	SYN	a	-1	F	6	μ	+
7	BEL	ETB	1	7	G	W	ġ	W	BFL.	EIB	Q	71	┢	ł	τ	≈
8	BS	CAN	(8	H	X	h	x	BS	CAN	Ł	- "	L	+	4	•
9	HT	EM)	9	Ι	Y	i	у	HT	EM	-	4	<u>I</u>	٦	θ	•
A	LF	SUB	*	:	J	Z	j	Ż	LF	SUB	7	-	1	г	Ω	•
В	VT	ESC	+	;	K	[k	{	٧r	ESC	ŧ	j	┰		δ	√
C	FF	FS	,	<	L	\	1	1	FF	FS	±	ᆁ	Ţ	=	D0:	n
D	OR.	GS	-	=	M]	m	}	CR.	GS	1	Ш	#	Г	Ø	2
E	SO	RS		>	N	^	n	~	SO	RS	4	긢	背	ì	E	
F	SI	US	/	?	0	_	0	DEL	SI	US	*	7	<u> </u>	4	N	SIP

E-2 User's Manual

Graphics Character Set 2

L/H	0	1	2	3	4	5	6	7	8	9	A	В	C	Đ	E	F
0	NULE	LE	SP	0	æ	P	~	p	Ç	É	á		L	1	Œ	Ξ
1	SOHI	C1	!	1	A	Q	a	q	ü	æ	1	**	1	Ŧ	ß	±
2	STX I)C2	**	2	В	R	b	ŕ	é	R	ó		Ŧ	+	Г	5
3	EIX I)C3	#	3	С	S	С	8	â	ô	ú	Ť	-	Į.	Ħ	≤
4	BOTE	C4	Ş	4	Ð	T	d	t	ä	Ö	ñ	4	<u>.</u>	Ŀ	Σ	ſ
5	ENQ.	9	2	5	E	U	е	u	à	ò	Ñ	4	+	F	σ	J
6	ACK S	YN	δ÷	6	F	V	f	V	å	ũ	a	-1	F	-	μ	+
7	BEEL B	тв	ŀ	7	G	W	Ŗ	W	ç	ù	Q	1	-	4	τ	≈
8	BS C	'AN	(8	H	X	ħ	х	é	ÿ	L	ᆌ	L	₽	φ	•
9	HT E	M)	9	1	Y	i	у	ë	Ö	_	4	F	j	θ	•
A	LF S	UB	*	:	J	2	i	z	è	Ü	_	1	<u>JL</u>	г	Ω	•
В	VT E	SC	+	;	K	(k	-{	ï	¢	1/2	1	₩		δ	√
С	FF F	S	,	<	L	Α.	1	1	î	£	À	j	Ţ	=	•	n
D	CR G	S	_	=	M]		}	ì	¥	î	N.	=	ľ	ø	2
E.	SO B	S	٠	>	N	~	n	~	Ä	A	*	Ą	#	3	8	
F	SI U	5	1	?	0		6	DFL.	Å	f	*	7	1	4	n	SP
	i									_						

NATIONAL CHARACTER SETS (ALL EMULATIONS)

Below are the 52 national character sets available for all emulations of this printer. These character sets support different characters and symbols specific to different languages. Note that these tables are for Courier 10, a resident font, and that some national character sets do not have some characters and symbols whose use depends on resident fonts. For details, see the table at the end of this appendix.

When the following character sets are used with the Epson ESC/P2 emulation, the printing of FFh code characters is not supported. ECMA94, ISO8859, ISO-LTN, ISO-TUK, CYRILIC, LATIN-9

UK (British English)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	c	D	E	F
0 1 2 3 4 5 6 7 8 9	•	S	2 1 258 6 ()*	0 1 2 3 4 5 6 7 8 9	Q A B C D E F G H I J	P Q R S T U V W X Y Z	o abcdefghij	Parstuvwxyz	o Çüéaaaaşeee	E E R O O O O O O Y O O	A á í ó ú a na o i r				ο β Γ π Σ ο μ τ φ θ Ω	=======================================
B C D E F			+ /	; < = > ?	K L M N]	k l m n	} ~	î î ă Ä	¢ £ ¥ R	1 × ×			<u></u>	8 ⊗ Ø € N	√ n 2

SWEDISH (Swedish)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	£	F
0				0	É	P	é	р	Ç	É	á	111	L	<u> 1</u>	α	Ě
			1	1	A	Q	a	q	ü	æ	í		1	Ŧ	β	±
2			71	2	В	Ŕ	b	ŕ	é	Æ	ó		т		ľ	Σ
1 2 3			#	3	Ċ	S	C	8	â	ð	ú	7	-	I	Ħ	≤
4			ğ	4	D	T	d	t	ä	ŏ	ñ	4		F	Σ	ſ
4 5	ė	S	8	5	Ē	U	e	u	à	ò	Ñ	4	+	F	σ	J
6	•		&	6	F	v	f	v	å	û	<u>a</u>	4	F		μ	‡
7			1	7	G	W	q	W	ç	ù	Q	7	ŧ	1	τ	≂
8			(8	H	Х	ĥ	х	ê	Ÿ	ċ	1	L	#	Φ	۰
9)	9	I	¥	í	y	ë	ö	_		F	١	θ	•
A			*	:	J	Z	İ	ź	è	Ü	-		1	г	Ω	•
В			+	;	K	Ä	k	ä	ï	¢	÷		₹		ő	√
c			,	Ŕ	L	ö	1	Ö	î	£	1 1 4	Щ	Ī	=	200	n
D			_	=	M	Å	m	å	ì	¥	ī	П	<u></u>	Г	Ø	2
Е				>	N	Ü	n	ü	Ä	R.	"	ⅎ	Ï	ጎ	E	•
F			/	?	0	_	О		Å	f	*	٦	<u> </u>	all a	U	

GERMAN (German)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	C	D	Ē	F
0				0	S	P	~	р	ç	É	á	iii	L	11	O.	Ξ
1			Ī	1	Α	Q	a	q	ü	æ	1.	38	1	Ŧ	β	±
2			н	2	В	R	b	r	é	Æ	ó		т	ή	Ľ	2
3	•		#	3	С	S	C	В	â	ô	ú	T	ŀ	I	11	≤
			\$	4	D	\mathbf{T}	d	t	ä	ö	ñ	4	<u>'</u>	E	Σ	ſ
4 5	•	S	ģ	5	Ε	U	е	u	à	ò	Ñ	4	+	F	ø	1
6		_	&	6	F	V	£	v	å	û	2	4	F	II.	μ	+
7			•	7	G	W	g	W	Ç	ù	Q	ï	ŀ	#	τ	**
8			(8	Н	X	ĥ	X	ê	Ÿ	ż	╣,	Ĺ	#	Φ	
9)	9	I	Y	í	Y	ë	ö	_	╡	F	╛	θ	٠
A			*	:	J	Z	j	2	è	Ü	_		_[r	Ω	٠
В			+	;	K	Ä	k	ä	ĭ	¢	1/2	#	Ŧ		δ	√
С				Ŕ	L	Ö	1	ŏ	î	£	1/2]	Ī	=	00	n
D			_	=	М	Ü	m	ű	ì	¥	Ť	Ji.	<u>"</u>	r	ø	2
E				\rightarrow	N	^	n	ß	Ä	R.	«	╛	ţ	1	E	•
F			/	?	0	_	0		Å	f	*	٦	Ŧ	4	N	

ISO8859/ECMA94 (ISO 8859-1/ECMA94)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	Е	F
0				0	0	P	`	р				0	A	Đ	à	б
1			ţ	1	Α	Q	a	q			Ĭ	±	Á	Ñ	á	ñ
1 2 3			п	2	В	R	þ	r			¢	2	Â	Ò	â	ò
3			#	3	C	S	C	8			£	3	Ă	Ó	ã	ó
4			Ş	4	D	T	d	t			Д	-	Ä	Ō	ä	ô
4 5	+	§	Ł	5	E	U	e	u			¥	μ	Å	õ	å	õ
6			δŧ	6	F	V	f	v			ł	1	Æ	Ö	æ	ö
7			3	7	G	W	g	W			§	-	Ç	×	Ç	ŧ
8			(8	H	Х	ħ	x			••		È	Ø	è	Ø
9)	9	I	Y	i	У			0	1	É	Ù	é	ù
Α			*	:	J	\mathbf{z}	j	z			3	Q	Ê	Ú	ê	ú
В			+	;	K	Ĺ	k	į			≪	*	Ë	0	ë	û
C			,	<	L	٨	1	1			_	4	Ì	ΰ	ì	ü
D			_	=	М	1	m	}			_	1/2	Í	Ý	í	ý
Е				>	N	^	\mathbf{n}	~			®	3	Î	Þ	î	Þ
F			1	?	0		0				_	ż	Ϊ	ß	ï	Ÿ

E-4 User's Manual

PAGE437/USA (Code Page 437/USA)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	c	D	E	F
0				0	9	P	_	р	Ç	É	á	:::	L	ж	OL.	Ξ
1	1		1	1	A	Q	а	g	ü	æ	Ĺ	*	4	釬	В	±
1 2 3	1		"	2	В	R	b	r	é	Æ	Ó		т	Í	ľ	2
	₩.		#	3	С	S	C	8	â	ô	ú	Ī	+	L	Ħ	≤
4 5	•		\$	4	Đ	T	d	t	ä	ö	ñ	4	÷	F	Σ	1
5		S	ૠ	5	E	Ü	e	u	à	ò	Ñ	4	+	f	σ	,
6	•		&	6	F	V	f	v	ā	ù	₫	1	ŀ	-	μ	ŧ
7			,	7	G	W	g	W	Ç	ù	Q	Ī	ŀ	Ţ	τ	*
8			(8	H	X	h	X	ě	Ÿ	Š	3	L	#	٠	Ð
9)	9	1	Y	i	y	ë	Ö	_	4	F	J	θ	•
A			×	:	J	Z	j	z	è	Ü	7	ı	<u>I</u>	г	Ω	٠
В			+	;	K	Į	k	-{	ĭ	¢	1	j	Ŧ		δ	√
c			,	<	L	`	1	1	î	£	ł	Ĩ	ŀ	Ξ	20	n
D			_	=	М]	m	j	1	¥	Ì	Щ		r	ø	2
E	i			>	N	^	'n	~	Ä	R	*	ⅎ	1	1	£	-
F			1	3	0	_	0		Å	f	*	٦	1	4	n	

PAGE852/PG852-T (Code Page 852)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	Е	F
0				0	6	P	`	p	Ç	É	á	::: ::::	L	đ	Ó	-
1 1			1	1	A	õ	a	q	ü	Ĺ	1	100	_	Đ	ß	
1 2 3				2	В	R	ь	r	é	í	ó		Т	Ď	Ô	•
			#	3	C	S	С	3	â	ô	ú		-	Ë	Ń	-
4	+		Ş	4	D	Т	d	t	ä	Ö	Ą	+	<u> </u>	ď	ń	
5		S	ક્ર	5	Е	Ü	е	u	ů	Ľ	ą	Å	+	Ň	ň	§
6	•		&	6	F	V	f	v	Ć	ľ	2	Ā	Á	1	Š	÷
6 7			٠	7	G	W	q	W	Ç	Ś	ž	Ĕ	ă	Î	š	
8			(В	H	X	h	х	ł	Ś	Ę	Ş	Ŀ	ě	Ŕ	•
9)	9	Ι	Y	i	Y	ë	Ö	ę	Ŧ	ĪĒ	١	Ú	
A			*	;	J	\mathbf{z}	j	z	Ő	Ü		1	┸	F	ŕ	•
В			+	;	K	ſ	k	{	ő	Ť	ź	j	Ŧ		Ű	ű
C			,	<	L	1	1	ŀ	î	ť	Č	#	ŀ	Ξ	Ý Ý	Ř
D			-	=	M	}	m	}	Ź	Ł	ş	Ż	=	Ţ	Ý	ř
E				>	N	^	n	~	Ä	×	«	Ż	廿	Ó	ţ	
F			1	?	0	_	О		Ċ	Č	»	٦	Ā	=	-	

PAGE850 (Code Page 850(Multilingual))

L/H	0	1	2	3	4	5	6	7	8	9	A	В	C	D	E	F
0				0	9	P	`	p	Ç	É	á	111	Ł.	ð	Ó	-
1			1	1	Α	Q	a	q	ü	æ	í	8	Τ	Ð	ß	±
1 2 3			11	2	В	R	b	r	é	Æ	Ó	M	₩	É	Ô	_
3	•		#	3	C	S	C	8	ā	ð	ú	Wan	┢	Ë	Ò	7
4	•		\$	4	D	T	d	t	ä	ö	ñ	4		È.	ð	Ť
5	•	S	*	5	E	U	e	u	à	ò	Ñ	¥	+	1	Ò	ŝ
6 7	•		δc	6	F	V	f	v	ā	û	a	A	å	İ	μ	+
			,	7	G	W	g	W	ç	ù	Q	A	A	Î	þ	_
8			(8	H	X	ħ	Х	ě	Ÿ	ؽ	٠	ų,	Ĭ	Þ	÷
9)	9	I	Y	i	Y	ë	ö	•	4	æ	٦	ΰ	••
A			×	:	J	Z	j	z	è	Ü	_	ı	Ţ	r	0	
В			+	;	K	1	ķ	{	ï	ø	Ļ	4	TP.		Ù	1
c			,	<	L	Ň	1	Ī	î	£	ł]	Ī		Ý	3
ם			_	=	М	3	m	j	1.	Ø	Ŧ	¢			Ý	2
E				>	N	÷	n	~	Ä	×	*	¥	4	t		
F			1	?	0		0		A	f	*	٦	A		*	

PAGE855 (Code Page 855)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	E	F
0				0	Q	P	•	р	ħ	љ	a		L	п	Я	Ξ
1 1			Į.	1	Α	Q	a	q	Ъ	Ъ	Α	8	Т	Л	P	ы
2			n	2	В	R	b	r	ť	њ	б		7	H	P	Ы
1 2 3			#	3	С	S	C	8	ŕ	Ь	Б	nan 	-	М	Ç	3
4			\$	4	D	Т	đ	t	Ö	ħ	Ц	4		Н	С	3
5		S	8	5	E	U	е	u	Ë	ħ	Ц	×	+	H	T	00
6		-	&	6	F	V	f	v	€	Ŕ.	Д	X	þ	0	T	III
7			T	7	G	W	g	W	€	Ŕ	Д	н	ŀ	0	y	э
8			{	8	Н	X	ĥ	x	3	ÿ	Θ	И	Ĺ	п	У	Э
9)	9	Ι	Y	i	У	S	ÿ	E	4	F	د	x	Щ
A			*	:	J	\mathbf{z}	j	z	į	Ü	Φ	1	Ŧ	٢	X	Щ
В			+	;	K	ſ	k	Į	I	Ų	Φ	j	Ŧ		В	ч
C			,	<	L	N	1	ŀ	ï	10	г	1	Ī	-	В	ч
D			_	=	М	1	m	ţ	ĭ	Ю	Г	Ħ		Π	ъ	ş
E				>	N	^	n	~	1	ъ	≪	Й	背	Я	ь	-
F			/	?	0	_	0		J	Ъ	*	٦	±		N⊵	

PAGE860 (Code Page 860(Portugal))

L/H	0	1	2	3	4	5	6	7	8	9	A	В	C	D	E	F
0				0	6	P	-	р	Ç	É	á		L	щ	CI.	Ξ
1			Ī	1	Α	Q	а	\mathbf{q}	ü	Ά	1		1	Ť	ß	±
1 2 3	ļ		H	2	В	R	b	r	é	È	Ó	讕	Т	Ť	Γ	≥
3			#	3	C	S	C	s	â	Ö	ú	Ϊ	┢	Ł	π	≤
4			\$	4	D	Ť	d	t	ã	õ	ñ	4	<u>'</u>	F	Σ	ſ
4 5		S	8	5	E	U	е	u	à	Ò	Ñ	4	+	F	0	J
6			æ	6	F	V	f	V	Á	Ú	đ	-1	F	ŗ.	μ	÷
7			٠	7	G	W	g	W	Ç	ù	Q	1	£	#	τ	≈
8			(8	H	X	h	X	ê	Ì	ċ]] 1	Ł	1	Φ	٥
9)	9	Ι	Y	i	Y	Ē	Õ	Ò	╣	1	٦	θ	٠
A			*	:	J	\mathbf{z}	j	z	è	Ü	_		<u>_JL_</u>	r	Ω	•
В			+	;	K	Į	k	{	İ	¢	1/2	j	Ť		δ	√
l c	1		,	<	L	\	1	1	Õ	£	1	ᆁ	F	=	œ	n
ם	1		_	=	М]	m	3	ì	Ù	Ť	il.	<u></u>	r	Ø	2
E	ļ			>	N	^	n	~	Ā	Æ	*	⊣	Ť	1	ε	*
F			/	?	0	_	0		Â	Ó	*	٦	<u> </u>	4	n	

PAGE865 (Code Page 865(Nordic))

		•						•								
L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	E	F
L/H 0 1 2 3 4 5 6 7 8 9 A B C	•	\$	2 ! # 5% & * () * +	3 0 1 2 3 4 5 6 7 8 9 : ; <	4 QABCDEFGHIJKL	5 PQRSTUVWXYZI\	6 abcdefghijkl	7 Pqrstuvwxyz { I	Su éa a à a ce e e i	9	A aióúñga o chail				E 0 8 1 7 2 5 4 7 4 6 8 6 8	F = 1 2 2 5 5 7 0
D E F			;	* > ?	M N O	<u>`</u>	m n o	ì	ì Ä Å	Ø R f	ī «	ا ت ا	<u> </u>	5	Ø E N	2

PAGE863 (Code Page 863(Canada-French))

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	Е	F
0				0	@	P	•	р	Ç	É	;	:::	L	ш	Œ	Ξ
1 1			ŧ	1	Α	Q	а	q	ü	È	•	33	T	┰	ß	±
2			"	2	В	R	b	r	é	£	Ó		т	İ	Γ	≥
1 2 3			#	3	C	S	\mathbf{c}	8	â	Ô	ú	T	ŀ	IJ.	Ħ	≤
4	+		Ş	4	D	Т	d	t	Â	Ë	••	4	<u>-</u>	F	Σ	ſ
5	•	S	%	5	Е	U	e	u	à	Ϊ		4	+	f	σ)
6	•		Æ	6	F	v	f	v	1	û	3	4	F	ſ	μ	+
7			•	7	G	W	g	W	Ç	ù		70.	┢	#	τ	≈
8			(8	H	X	h	x	é	Q	Ī	ä	Ĺ	#	Φ	•
9)	9	I	Y	i	У	ë	Ō	_	1	F	1	Ð	•
A			*	I	J	Z	j	Z	è	Ü	٦	1	韭	г	Ω	٠
В			+	;	K	ſ	k	ĺ	ï	¢	1 2	า็	Ŧ		δ	√
С			,	<	L	N	1	1	ĩ	£	1/2	j	ŀ	=	00	п
D			_	=	М	1	m	į		Ü	3	1	<u>#</u>	r	Ø	2
E				>	N	^	n	~	Ā	0	«	4	Î	ጎ	ε	
F			1	?	О	_	o		S	f	*	7	¥	4	U	

PAGE866 (Code Page 866(Cyrillic))

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	B	F
0				0	6	р	,	р	A	P	a	:::	L	jį	p	Ė
1			ļ	1	A	Q	а	q	Б	C	б	200	Ŧ	Ŧ	¢	ĕ
2			**	2	В	R	b	r	В	T	B		т	•	Ŧ	ϵ
1 2 3	*		#	3	С	S	c	8	r	y	Г	T	ŀ	I	y	€
4			Ş	4	D	Т	d	t	Д	Φ	Д	\perp	<u>'</u>	F	Φ	Y
5	+	S	¥	5	E	U	e	u	E	X	0	4	+	f	x	Y
6	•		δι	6	F	v	£	\mathbf{v}	X	Ц	蒸	-1	F	Ė	Ц	ÿ
7			•	7	G	W	g	W	3	Ч	3	π̈́	ł	#	4	Ť
8			(8	H	X	h	x	И	U	Ħ	٦̈́	Ĺ	#	Ш	
9)	9	I	Y	i	Y	И	Щ	Ħ	4	1	3	Ш	•
A			*	:	J	\mathbf{z}	j	Z	K	Ъ	K		丰	г	ъ	•
В			+	;	K	ſ	k	{	Л	Ы	Л	j	┰		ы	√
С			,	<	\mathbf{L}	Λ.	1	ţ	M	Ь	H	1		Ξ	ь	n
D			_	=	М	1	m	ţ	Н	Э	н	Ш	=	Г	Э	Д
Е				>	N	^	n	~-	0	Ю	0	4	ŧ	1	Ю	-
F			1	?	О	_	o		П	Я	П	٦	#		Ħ	
1	l															

E-6 User's Manual

HUNGARY/HUNG-T (Hungarian)

L/H	0		1	2	3	4	5	6	7	8	9	A	В	С	D	E	F
0 1 2 3 4 5 6 7 8 9 A B	•	_	§	2 ! # \$% & " () * + ,	3 0123456789:;<	@ ABCDEFGHIJKL	P Q R S T U V W X Y Z [\	abcdefghijk1	pqrstuvwxyz{;	Çuéaaàa çe e è 11	E & R & & & & & & & & & & & & & & & & &	A áióúñña ő: rīti				α β Γ π Σ σ μ τ φ θ Ω δ ∞	F = + + + + + + + + + + + + + + + + + +
D E F				- ;	> ?	M N O]	m n	1	ÍA	¥R	Ĭ ≪ ≱	_ _ _ _	1	5	Ø E N	
				•	•								<u> </u>				

POLISH/POLSH-T (Polish)

L/H	0	1	2	3	4	5	6	7	8	9	A	₿	C	D	Е	F
0				0	0	p	~	р	Ç	Ę	之	111	L	đ	α	1
			1	1	A	Q	a.	q	ū	ė	Ź		\perp	Ð	ß	
2			**	2	В	R	b	r	é	į	ó		т	Ď	٥	
3	¥		#	3	C	S	¢	8	ā	ō	Ó	1981	-	É	π	÷ .
1 2 3 4 5 6			\$	4	D	T	đ	t	ä	ö	ń	4	<u>+</u>	ď.	Σ	-
5		S	8	5	Е	U	e	u	ů	Ć	Ń	Å	+	Ň	ň	S
6	•		Sc.	6	F	V	£	v	a	ľ	Ż	A	A	1	ğ	ŧ
7			1	7	Ġ	W	g	W	ç	ù	Ž	Ĕ	ă	1	š	
8			(8	H	X	h	х	ě	\$	ż	Ş	ıĿ	ě	Ŕ	_
8 9)	9	I	Y	i	Y	ë	Ö	_	4	Ţ	L	Ú	
A			Ħ	:	J	Z	j	2.	Ő	Ü		1	ᅹ	٣	ŕ	•
B			+	;	K	Ŧ	k	ĺ	ő	Ť	ź	j	710		Ű	ű
C	ŀ		,	<	L	١	1	ł	î	Ł	Č		Ţ	Ξ	ý Ý	Ř
D			-	22	М	1	m	}	Ć	¥	ş)]	Ŧ		ř
E				>	N	^	n	~	Ä	ź	*	Ы	卡	Ů	ţ	
F]		1	?	0	_	0		Ą	Č	*	7	Ħ	-	-	

SLOV/SLOV-T (Slovenian)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	C	D	E	F'
0				0	Ž	P	ž	р	ç	É	á	111	L	ш	Qi,	Ξ
1			1	1	Α	Q	a	q	ŭ	æ	1	88	⊥	Ŧ	β	±
2			*	2	В	R	b	r	é	Æ	Ó		т		Γ	2
1 2 3			#	3	С	S	C	8	ā	ô	ú	T	ŀ	I	π	≤
	•		\$	4	D	Ť	d.	t	ä	ö	ñ	4	<u>_</u>	F	Σ	ſ
4 5	•	S	ક્રે	5	E	U	е	u	à	δ	Ñ	4	+	F	Œ	J
6	•	_	&	6	F	v	£	v	â	û	a	4	F	Ė	μ	+
7	-		٠	7	G	W	q	W	ç	ù	Q	1	١	#	τ	æ
8			(8	H	X	ĥ	x	ê	ÿ	ż	-	L	+	•	•
9	[)	9	Ι	Y	í	У	ë	ö	_	┪	F	J	0	•
A	ĺ		*	:	J	2	j	z	è	Ü	_	1	Ţ	r	Ω	•
В			+	;	K	Š	k	š	ĭ	¢	1	า	7		ő	√
C	l		,	Ċ	L	Đ	1	đ	î.	£	1/2	j	Ţ		00	n
D			-	=	М	¢	m	ć	1	¥	Ť	Ш	#	Г	ø	2
E				>	N	Č	n	Č	Ä	R	*	4	1	ኀ	€	-
F			1	?	0	_	0		A	f	*	٦	₹	4	U	

MAZOWIA/MAZOW-T (Mazowian)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	c	D	E	F
0				0	Q.	P	٠,	p	Ç	Ę	ź	111	Ļ	#	Œ	=
1			1	1	A	Q	а	q	ü	ė	8	88	7	₹	β	±
2			10	2	В	R	b	r	é	ì	ó	Ĥ	т	#	Γ	≥
3			#	3	C	S	C	8	ā	ô	Ó	"I"	ŀ	\mathbb{I}	11	≤
4	•		\$	4	Ð	T	đ	t	ä	ŏ	ń	4	1	┢.	Σ	ſ
1 2 3 4 5	•	S	46	5	E	Ū	e	u	à	Ć	Ň	4	+	f	ø	J
6	•	_	&	6	F	٧	f	v	a	û	ź	4	-	ı	μ	+
7				7	G	W	g	W	Ġ	ù		7	ŀ	#	Ŧ	Rt
8			(8	H	X	ħ	x	ê	Ś	ż	1	Ŀ	#	•	•
9 A)	9	I	Y	i	У	ë	Ö	Ē	4	f	J	θ	•
A			*	:	J	Z	j	z	è	ΰ	-	ı	Ŧ	_	Ω	•
В			+	;	K	ſ	Ř	1	ï	zł	ž	1	Ŧ		ð	₹
c			,	<	L	٨	1	ł	î	Ł	î	Ţ	I	=	00	n
D			_	=	М	1	m	}	ć	¥	ī	Ĭ		r	ø	2
E	İ			>	N	^	n	~	Ä	á	*	4	ŧ۴	ነ	E	
F			1	?	0		0		Ą	f	*	٦	#	4	Λ	

LATIN2/LATN2-T (Latin2)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	E	F
0				0	9	P	`	p	ç	É	á		L	П	Ó	Ξ
1			1	1	Α	Q	а	q	ü	Ĺ	1		1	╤	β	±
2			17	2	В	R	b	r	é	Æ	Ó		т	Ī	Ō	2
3			#	3	C	\mathbf{s}	С	8	â	ô	ú	T	+	Œ	π	≤
4	•		\$	4	D	T	d	t	ä	ö	ñ	4		ď	Σ	ſ
0 1 2 3 4 5 6 7		S	9	5	Е	U	e	u	ů	Ľ	Ñ	Å	+	Ň	ň	1
6	•		Бı	6	F	V	f	v	å	ľ	Ž	-1	F	Í	Š	+
7			r	7	G	W	g	w	Ç	ù	Ž	Ė	1		š	*
8			(8	H	X	ĥ	x	ê	Ÿ	č		ŧ	ŧ	Ŕ	•
9)	9	1	Y	i	Y	ĕ	ö	_	7	Œ	٦	Ó	•
A			*	:	J	Z	j	z	è	Ü	7	- 11	${\rm I}\!$	r	ŕ	-
В			+	;	K	Į.	k	£	ĭ	Ť	¥]	ㅠ	Ì		√
c			,	<	\mathbf{L}	Α.	1	1	î	ť	Š	<u>[</u>	Ţ		ð Ý	Ř
D			_	=	М]	m	ł	1	¥	ī	<u>i</u>	1	ľ	Ý	ř
E	i			>	N	^	n	~	Ä	R.	•	ᆸ	╬	Ъ	E	•
F			/	?	0	÷	o		Å	č	*	٦	Ŧ		N	

TURKY/TURKY-T (Turkish)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	E	F
0				0	ą.	₽	~	р	Ç	É	á		L	я	Œ	=
1			1	1	Α	Q	a	à	ũ	æ	1	88	_	₹	β	±
2			n	2	В	Ŕ	b	r	é	Æ	6		$\overline{}$	+	ŗ	2
2 3	₩		#	3	C	S	C	В	â	ô	ú	1411	F	\mathbb{I}	π	۷
4 [Ş	4	D	\mathbf{T}	ď	t	ä	ö	ñ	4		F	Σ	ſ
5	•	S	¥	5	E	U	e	u	à	ò	Ñ	4	+	F	σ	j
6	•		&	6	F	v	f	ν	å	û	Ğ	1		l er	μ	+
7			1	7	G	W	g	W	Ç	ù	ğ		Ĺ	#	τ	≈
8			(8	H	X	ň	x	ē	t	š	1	L	#	ø	
9			1	9	Ι	Y	i	Y	ë	Ö	_	4	Įř.	_	θ	•
A			*	;	J	Z	j	z	è	Ü	٠,	-	1	г	Ω	
В			+	;	K	[k	{	ĭ	¢	12	ä	īr		δ	√
С			,	<	L	١	1	1	î	£	į.]	Ţ	_	80	n
D			_	=	М]	m	}	1	¥	ī	Ш	<u></u>	ľ	Ø	2
Ė				>	N	^	n	~	Ä	Ş	*	4	Ť	ነ	E	•
F			7	?	0		О		Â	ş	*	٦	*	ŧ	ß	

KAMENIC/KAMEN-T (Kamenicky)

L/B	0	1	2	3	4	5	6	7	8	9	A	В	С	Đ	Е	F
0				0	@	P	~	р	Č	É	á		L.	ä.	Œ	Ξ
1			ļ	1	A	Q	a	ā	ü	ž	í	33	エ	Ŧ	β	ż
2				2	В	Ŕ	ь	r	é	Ž	ó	1	т	į H	Γ	≥
3			#	3	C	S	C	9	ď	ô	ú	Ī	-	I	π	\$
1 3 4 5			\$	4	D	\mathbf{T}	d	ŧ	ä	ö	ň	4		F	Σ	ſ
5	•	S	å	5	E	U	е	u	Ď	Ó	Ñ	4	+	F	0	J
6	•		£.	6	F	v	f	٧	Ŧ	ŭ	Ü	4	ŀ	ı	μ	÷
7			1	7	G	W	q	W	Č	Ú	ô	i	ŀ	#	τ	*
8			(8	Н	X	h	х	ě	Ý	š	,	L	#	ф	•
9			}	9	Ι	Y	i	y	Ē	ô	ř	4	F	j	θ	•
A			*	:	J	\mathbf{z}	j	z	Ĺ	Ü	ŕ	1	<u>.[</u>	г	Ω	-
В			+	;	K	ſ	Ř	{	Í	Š	Ŕ	4	Ŧ		δ	√
С			,	<	L	١	1	;	ľ	Ľ	1	ĵ		=	60	n
D			_	=	M	}	m	}	í	Ý	Š	JI.	≛	ľ	ø	2
E				>	N	~	n	~	Ä	Ē	≪	ⅎ	#	1	Ε	
F			/	?	0	_	o		Á	ť	*	٦	₹	4	n	

CYRILIC (Cyrillic)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	C	D	E	F
0				0	a	₽	٠.	p				A	P	<u>а</u>	D)¢
1 1			Ţ	1	Α	Q	a	q			Ė	Б	C	б	C	뵨
2			Ħ	2	В	Ŕ	b	r			Ъ	В	Т	В	т	h
2 3			#	3	С	S	C	Ħ			ŕ	Г	У	Г	У	ŕ
1 4	+		\$	4	D	T	di	t			€	Д	Φ	Д	Ф	ε
5		S	ģ	5	E	U	е	u			S	E	X	е	x	s
6		-	£.	6	F	V	f	v			Ī	x	Ц	x	ц	ı
7			•	7	G	W	q	W			Ĭ	3	ч	3	ų	ĭ
8			(8	H	Х	ĥ	х			J	И	Ш	и		1
9)	9	I	Y	i	Y			Љ	Й	Щ	Ħ	Ш	ъ
A			*	:	J	Z	j	ž			Ь	K	ъ	ĸ	ъ	њ
В			+	;	K	I	ķ	{			ħ	Л	Ы	л	ы	ħ
C				ί.	L	Ī	1	Ť			Ŕ	М	ь	H	ъ	Ĺ
ם			_	=	М	1	m	ŀ			-	Н	Э	H	9	Š
E				>	N	^	n	÷			莩	ö	10	0	10	Ť
F			7	?	ō		0				Ū	П	Я	П	Я	ū
			•	•		_					*				-1	~

E-8 User's Manual

IBM437 (IBM 437)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	E	F
0				0	9	₽	-	р	A	P	ι		L	-iL	ω	Ξ
1 1			1	1	A	Q	а	q	В	Σ	ĸ	33	1	7	ά	±
2			11	2	В	R	b	r	Г	T	λ	i	т	+	É	2
3			#	3	C	S	C	8	Δ	Ÿ	μ	"I"	ŀ	I	ή	≤
4			\$	4	D	T	d	t	E	Φ	٧	-		١.	Ľ	ſ
5			የ	5	E	Ū	e	u	Z	X	Ę	=	+	F	ί)
6			&	6	F	V	£.	v	H	Ψ	Q	1	æ	'n	Ó	+
7			•	7	G	W	g	W	Θ	Ω	n	ı,	ŀ	+	ύ	24
8			(8	Н	X	h	x	I	a.	ρ	Ť	Ļ	*	Ü	٠
9)	9	I	Y	ì	Y	K	β	σ	4	F	Ţ	ώ	•
A			*	;	J	Z	j	Z.	Λ	γ	ζ	ı	4	۲	Ω	•
В	•		+	;	K	[k	1	М	δ	τ	ä	712		£	√
C	!		,	<	L	١	1	:	N	£	Ψ]	Ţ	_	00	n
D			-	=	М	1	m	}	Ż	ξ	φ	Щ.	****	f	ø	2
E				>	N	^	n	~	0	η	X	4	#	ነ	Ĺ	
F			/	?	0	_	٥		П	9	ψ	٦			Ó	

ELOT928 (ELOT 928)

		,														
L/H	0	1	2	3	4	5	6	7	8	9	Α	В	С	D	E	F
0				0	ą	P	`	р				۰	ί	П	Ó	п
1			Ţ	1	À	Q	a	q			*	±	Α	P	α	ρ
2			**	2	В	R	b	r			7	2	В		β	ς.
3			#	3	С	S	С	8			£	3	Γ	Σ	Ÿ	σ
0 1 2 3 4 5 6 7			\$	4	D	Т	d	t				٠	Δ	Т	δ	τ
5		S	%	5	E	U	e	u				•	E	Y	ε	υ
6	•	~	&	6	F	v	£	v			;	Ά	z	Φ	ξ	φ
7	_		1	7	G	W	g	w			S	•	Н	X	η	x
8			(8	H	Х	ĥ	х			.:	Έ	Θ	Ψ	ė	Ψ
9)	9	Ι	Y	i	У			0	Ή	Ι	Ω	ι	ú
A			*	:	J	\mathbf{z}	j	z				Ί	K	Ï	ĸ	ĭ
В			+	;	K	[k	{			«	>>	Λ	Ÿ	λ	ΰ
С			,	Ŕ	L	X	1	i			٦,	v	М	ά	μ	ó
C D			_	=	М]	m	}			5	1/2	N	έ	v	ύ
E				>	N	~	n	~				Ŷ	Ξ	τή	ξ	ώ
F			1	?	o		0				_	'Ω	ō	ί	ō	
				-												

IBM851 (IBM 851)

L/H	0	1	2	3	4	5	6	7	8	9	Α	В	С	D	E	F
0				0	9	P	`	p	Ç	٠I	ľ	:::	L	Т	ξ	_
1			ţ	1	Α	Q	a	q	ü		ί	*	\perp	Y	'n	±
2				2	В	Ŕ	b	r	é	v	ó	1262	_	Φ	θ	u
2 3	•		#	3	C	S	С	8	â	ô	ύ	1	1	Х	ι	φ
4			\$	4	D	Ť	d	t	ä	Ö	Α	1	_	Ψ	ĸ	x
5		S	ૠ	5	E	Ū	e	ů	à	Y	В	Ŕ	+	Ω	λ	ŝ
6	•	-	٠ ا	6	F	v	f	v	Ά	û	Г	λ	П	a	μ	Ψ
7	_		ï	7	G	W	g	w	ç	ù	Δ	М	P	β	v	•
8			(8	Н	X	h	x	ê	Ώ	E	N	<u>Ľ</u>	Y	Ę	•
9)	9	ī	Y	i	У	ë	ö	Z	4	F	j	ō	••
A			*	•	J	z	j	z	ě	Ü	Н	H	1	_	П	ω
В			+	:	ĸ	ī	k	{	ï	ά	1 2	1			ρ	ΰ
Ĉ				ż	L	i	î	1	î	£	Đ]	Ľ		σ	ó
D			<u>_</u>	_	М	ì	m	}	Ē	έ	I	Ξ	<u>_r</u>	δ	<u> </u>	ώ
E				>	N	7		~	Ä		«	0		_	_	_
t .			,	-			n			ή		υ	ţ	9	τ	_
F			1	?	0	_	О		H	C	>>	٦	2			

PG-DHN (Code Page DHN)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	E	F
0 1 2 3 4 5	•	S	! # \$5 % &	0 1 2 3 4 5 6	Q A B C D E F	P Q R S T U V	`abcdef	p q r s t u v	A C E L N O S	ź ż żł § ŏ ò û	á í ó ú ñ Ñ a				α β τ π Σ σ	± 2 ≤ +
7 8 9 A B C D E F			, ()*+,/	789:;<=>?	G H I J K L M N O	WXYZ[\]^	ghijkl mno	w x y z { ! ! } ~	龙路 电位 电补充 白白	ù Yö U ¢ £ ¥ R. f	Q : C 12 14 1				T Φ ⊕ Ω 6 ∞ Φ ∈ Π	20 • √ n 2

LATIN-P (Latin Polish)

1 1 A Q a q û æ î	L/H	0	1	2	3	4	5	6	7	8	9	Α	В	С	D	Е	F
, , , , , , , , , , , , , , , , , , , ,	0 1 2 3 4 5 6 7 8 9 A B C D E	* * *	_	1"#\$%&'()*	0 1 2 3 4 5 6 7 8 9 : ; < = >	Q A B C D E F G H I J K L M N	P Q R S T U V W X Y Z (\	`abcdefghijklm	Pqrstuvwxyz	Çüéa a à ć Çł ë è ï î ż X	É æ Æ ô ö ò û Ś Ś Ö Ü ¢ £ Ł R	áióúA aag E e 7 ź ‡;			T T	ÓβΓΝήσμτΦθΩδ∞ΦΕ	E ± ≥ ≤ ∫ + ≈ a • · √n 2 ■

LITHUA1 (Lithuanian 1)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	Е	F
0				0	@	P	~	Р	A	P	а	111	L	ą	D	Ξ
1			!	1	A	Q	a	q	Б	С	б		1	č	C	±
2 3			н	2	В	R	b	r	В	T	в		+	ę	т	≥
3	٠		#	3	C	S	C	s	Γ	У	г	Para	ŀ	ė	y	≤
4 5	•		\$	4	D	T	d	t	Д	Φ	Д	4		į	Φ	ſ
5	•	S	%	5	E	U	e	u	E	X	е	Ą	+	š	x	J
6	•		δĸ	6	F	V	f	v	Ж	Ц	ж	Č	Ų	ų	Ц	÷
7			•	7	G	W	g	W	3	Ч	3	Ę	Ū	ü	ч	≈
8			(8	H	Х	h	x	И	Ш	и	Ė	L	ž	Ш	•
9)	9	Ι	Y	i	Y	Й	Щ	й	╣	ſř	٦	щ	•
A			*	:	J	\mathbf{z}	j	\boldsymbol{z}	K	Ъ	ĸ		<u> </u>	Г	ъ	
В			+	;	K	[k	{	Л	Ы	n	ä	TF		ы	√
C			,	<	\mathbf{L}	\	1	-	M	ь	М	J	F	Ξ	ь	n
D			-	=	M	1	m	}	Н	Э	H	1		r	Э	2
E				>	N	^	n	~	0	Ю	o	Š	#	ì	Ю	
F			1	?	0		О		П	Я	Π	٦	z		Я	

ISO-LTN (ISO Latin)

0 0 0 P P P R D P P P P P P P P P P P P P P P		L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	E	F
2		0				0	0	P	٠,	p				۰	Ŕ	_		đ
4 + \$4DTdt	i	1			į	1	A	Q	а	q			Ą	ą	Á	Ń	á	ń
4 + \$4DTdt	l	2			**	2	В	R	b	r			•		Ã	Ñ	â	ň
4 + \$4DTdt	Į	3			#	3	C	S	C	8			Ł	ł	Ă	Ó	ă	Ó
6		4	+		\$	4	Đ	T	đ	t			ğ	-	Ä	Õ	ä	ô
6		5	•	S		5	Е	U	е	u			Ľ	1	Ĺ	Ő	í	ő
8 (8 H X h x ", ČŘČř 9) 9 I Y i Y & Š É Ô É û A *: J Z j Z S Ş E Û E û B +; K [k i Ť t É Ô E û C , < L \ l ! 2 2 Ě Û Ě û D -= M l m } - " i Y i Ý E .> N ^ n ~ Ž ž î Ţ î ţ	١	6			&	6	F	V	£	v			Ś	á	Ć	Ö	Ć	Ö
0		7			7	7	G	W	g	W			S	-	Ç	×	ç	ŧ
9) 9 I Y i Y	ł	8			-(8	H	X	h	x			••		Č	Ř	Č	ř
C	1	9)	9	I	Y	i	Y					É	Û	é	ů
C	1	A			*	:	J	Z	j	z			Ş	ş	Ę	Ú	ę	ú
D -= M l m } - " i ½ i ý E .> N ~ n ~ ž ž î Ţ î ţ	1	В			+	;	K	Ι	k	ŧ			Ť	ŧ		0	ë	ű
E Nn žžitit	1	С			,	<	L	Λ	1	ļ			2	ź	Ĕ	Ü	ē	ü
	١				-	=	M	1	m	}			_	~	1	Ý	í	Ý
	1	E				>	N	^	n	~			ž	ž	t	Ţ	î	ţ
		F	l		1	?	o	_	o				z	Ż	Ď		ď	•

LITHUA2 (Lithuanian 2)

		`														
L/H	0	1	2	3	4	5	6	7	8	9	A	В	C	D	Е	F
0				0	6	P	~	Р	Α	P	а	3	L	_iL	Þ	Ę
1			Ţ	1	Α	Q	a	q	Б	C	б		Τ	₹	C	é
1 2			11	2	В	R	b	r	В	T	В	ii	т	1	т	Ė
3			#	3	C	S	С	s	Γ	У	г	Ï	}	\mathbb{I}	У	ė
4			\$	4	D	T	\mathbf{d}	ι	Д	Φ	Д	4		F	Φ	Į
5		S	2/8	5	E	U	e	u	E	Х	е	=	+	F	x	į
6	•	-	&	6	F	V.	£	v	X	Ц	ж	4	F	ı.	Ц	Š
7			T	7	G	W	g	w	3	ч	3	i	┢	#	ч	š
8			(8	Н	X	ĥ	х	И	Ш	и	4	Ļ	4	ш	Ų
9)	9	I	Y	i	У	Й	Щ	й	╣	ıř	٦	щ	ų
A			*	:	J	\mathbf{z}	j	z	ĸ	Ъ	ĸ	1	1	г	ъ	Ü
В			+	:	K	[k	{	Л	Ы	Л	7	٦Ē		ы	ü
C			,	ί.	\mathbf{L}	\	1	1	М	ь	м]	Ţ	Ā	ъ	Ž
D			_	Ξ	М	1	m	}	Н	Э	н	J.	====	ą	э	ž
Е				>	N	~	n	~	0	Ю	0	4	44	હે	Ю	
F			/	?	0		0		П	Я	п	٦	<u>"</u>	č	я	
				•												

E-10 User's Manual

MACEDON (Macedonian)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	E	F
0				0	@	Р	`	р	Α	њ	č	:::	t.	1L	а	FЬ
1			į	1	Α	Q	а	\mathbf{q}	Б	0	Ć	30	\bot	Ŧ	б	0
2			**	2	В	R	b	r	В	Π	Ð	ü	т	1	В	п
3			#	3	C	\mathbf{s}	C	s	Γ	P	Š	Ĭ	-	I	г	Þ
4	+		\$	4	D	Т	d	t	Д	C	ž	-		F	д	C
5		S	%	5	E	U	e	u	Ъ	T	μ	=	+	F	ħ	T.
6	•		&	6	F	V	£	v	E	ħ	Ω	1	F	ı,	ė	ħ .
7	ĺ		1	7	G	W	g	W	Ж	У	Č		Ĺ	#	ж	У
8	Ì		(8	H	Х	h	X	3	Φ	Y	1	L	#	3	ф
9)	9	Ι	Y	i	Y	И	X	Ć	1	Ī	J	И	х
A]		*	:	J	\mathbf{z}	j	z	J	Ц	đ		<u>.L</u>	г	j	ц
В	l		+	;	K	[k	{	K	Ч	Š	j	īĒ		K	प
C	ļ		,	<	\mathbf{L}	١	1	1	Л	Ų	ž	1	Ţ	_	JI	Ü
D			-	=	M]	m	}	Љ	Ш	0	Ш		Г	љ	ш
Е			•	>	N	^	n	~	М	α	*	::	1	ገ	M	
F			/	?	O	_	О		Н	β	>>	٦	<u>+</u>		H	

PG-MAC

L/H	0	1	2	3	4	5	6	7	8	9	Α	В	С	D	Е	F
0 1 2 3 4 5 6 7 8 9 A B C D E F	* * *	§	!"#\$%&*()*+,/	0 1 2 3 4 5 6 7 8 9 : ; < = > ?	жабцдефгхијклмно	11.16.16.16.16.16.16.16.16.16.16.16.16.1	жабцдефгхијкимно	пьрстувноѕзшѓќч	АБВГДЕ ЖЗИЙК ЛМНОП	В О С Т У Ф Х Ц Ч Ш Ц Б И В В О В В В В В В В В В В В В В В В В	абвгдежзий клмноп		###		и в в в в в в в в в в в в в в в в в в в	Ë ë € € Y Y Ў Ў • • · ✓ n ¤ ■

MIK

r —				_					• • • • • • • • • • • • • • • • • • • •							
L/H	0	1	2	3	4	5	6	7	8	9	A	В	C	D	Ε	F
0				0	@	P	`	р	Α	Р	а	p	L		α	Ξ.
1			1	1	Α	Q	a	q	₽	С	б	С	丄	33	β	±
2			11	2	В	Ŕ	b	r	В	T	В	т	_	#	Γ	_
2			#	3	С	S	C	S	Γ	У	Г	У	-	499	π	≤
4	•		Ş	4	D	Т	d	ŧ.	Д	Φ	Д	ф	_]	Σ	7
5	•	S	%	5	E	U	e	u	E	X	e	x	+	No	đ	
6	•		δŧ	6	F	V	f	v	ж	Ц	ж	ц	4	S	μ	÷
7			1	7	G	W	q	W	3	4	3	ч			τ	20
8			(8	Н	X	h	x	И	w	и	Ш	Ŀ]	Φ	٥
9)	9	Ι	Y	i	у	Й	Щ	й	Щ	F	J	ě	•
A			*	:	J	z	j	ż	K	Ъ	ĸ	ъ	1	-	Ω	
В			+	;	K	[k	{	Л	Ы	Л	ы	76		δ	√
C			,	ζ.	L	\	1	i	М	ь	М	ь	Ļ	=	œ	n
D			_	=	М]	m	}	H	Э	Н	Э	1	ľ	ø	2
E				>	N	$\hat{}$	n	~	0	Ю	0	ю	╬	ነ	É	•
F			1	?	0		0		П	Я	п	я	-	4	ñ	
i				•		-									•	

ELOT 927

L/H	0	1	2	3	4	5	6	7	8	9	Α	В	С	D	Е	F
0				0	@	P	~	П	Α	P	ι	::	L	Т	ω	Ξ
1			ţ	1	Α	Q	Α	₽	В	Σ	K	365	T	₹	ά	±
2			11	2	В	R	В		Γ	Т	λ	h	т	ή	έ	2
3	•		#	3	C	S	Γ	Σ	Δ	Y	μ	T	ŀ	\mathbb{I}	ή	≤
4	•		\$	4	D	T	Δ	\mathbf{T}	E	Φ	v	-	<u>-</u>	F	ï	ſ
5	•	S	%	5	E	U	E	Y	\mathbf{z}	X	Ę	=	4	F	ί	J
6	•		&	6	F	V	\mathbf{z}	Φ	Н	Ψ	0	4	F	'n	Ó	÷
7			T	7	G	W	Η	Х	Θ	Ω	П	ï	ŀ	#	Ú	≈
8			(8	Н	X	Θ	Ψ	1	α	ρ	ä	Ŀ	¥	ΰ	۰
9)	9	1	Y	Ι	Ω	K	β	σ	4	ΙĒ	J	ώ	•
A			*	;	J	\mathbf{z}	ĸ	Ϊ	Λ	Y	ς	1	Т	г	Ω	•
В			+	;	K	Į.	Λ	Ÿ	М	δ	τ	i	ΤĒ		£	$\sqrt{}$
c			,	<	L	1	Μ	>>	N	3	υ	1	ŀ	=	∞	n
D			-	=	Μ)	N	«	Ξ	ζ	φ	41	<u>!</u>	r	Ø	2
E				\rightarrow	N	^	Ξ	•	0	η	χ	ⅎ	Ï	ì	ŕ	•
F			/	?	0	_	0		Π	θ	ψ	٦	<u>¥</u>	#	ń	

ABG

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	Е	F
0				0	(d	₽	`	Гі	Α	Р	ι		L	ш	ω	=
1			!	1	A	Q	Α	р	В	Σ	ĸ	2.1	\perp	_	ά	±
			Ħ	2	В	R	В	Σ	Γ	Т	λ	-10.	т	TE	έ	≥
2			#	3	C	S	Γ	T	Δ	Y	μ	i	F	I	ή	<u> </u>
	•		\$	4	D	T	Δ	Y	E	Ф	v	4		F	ï	ſ
4 5 6	•	S	å	5	Ε	U	Ε	Φ	Z	Х	ξ	=	+	F	ί	J
6	•		δι	6	F	V	\mathbf{z}	X	Н	Ψ	o	4	F		Ó	÷
7			1	7	G	W	Η	Ψ	Θ	Ω	п	Ţ.		#	ύ	≈
8			(8	Н	X	Θ	Ω	Ι	α	ρ	=	Ŀ	#	ΰ	•
9)	9	Ι	Y	Ι	У	K	β	σ	╡	F	٦	Ú	•
A			*	:	J	Z	K	z	Λ	Υ	ζ		\mathbb{I}	г	Ω	•
В			+	;	K	{	Λ	{	Μ	δ	τ		īř		£	√
С			,	ζ	L	λ	Μ	i	N	ε	υ]	Ţ	Ξ	∞	n
D			_	=	М	}	N	j	Ξ	ڕ	φ	ш	=	ſ	Ø	2
E				ž	Ν	- *	Ξ	~	O	η	χ	≓	٦Ė	1	ί	•
F			/	2	О		О		Π	θ	ψ	٦	<u> -i</u>	4	ΰ	

DEC GR

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	Е	F
0				0	@	Р	~	р	A	P		۰	ί		ΰ	
1			1	1	Α	Q	а	q	В	Σ	ï	±	Α	Π	α	П
2			11	2	В	R	b	r	Γ	Т	í	2	В	Р	β	ρ
2 3 4 5	•		#	3	C	S	C	s	Δ	Y	£	3	Γ	Σ	Y	σ
4	•		\$	4	D	\mathbf{T}	d	t	E	Φ			Δ	\mathbf{T}	δ	τ
5	+	S	%	5	E	U	е	u	Z	X	¥	μ	E	Y	ε	υ
6 7	•		&	6	F	V	f	V	H	Ψ			\mathbf{z}	Φ	ځ	φ
			•	7	G	W	g	W	θ	Ω	§		Η	X	ŋ	χ
8			(8	Η	X	h	X	Ι	α	Ħ		Θ	Ψ	θ	Ψ
9			}	9	Ι	Y	i	У	K	β	0		I	Ω	Ļ	ω
A			*	:	J	Z	j	z	Λ	γ	<u>a</u>		K	ά	ĸ	Ç
В			+	;	K	[k	{	М	δ	«	>>	Λ	É	λ	ύ
C			,	<	L	1	1	ł	N	ε		14	М	ή	μ	ώ
D			-	=	М]	m	}	Ξ	ζ		1/2	N	ϊ	ν	
E				>	N	^	n	~	0	η			Ξ		Ę	
F			/	?	О	_	0		Π	θ		ં	О	ó	0	

ABY

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	Е	F
0				0	Ø	Þ	`	П	A	P	ί		L	4	ω	Ξ
1			1	1	Α	Q	Α	q	В	Σ	K		\perp	÷	ά	±
2			17	2	В	R	В	p	L.	Τ	λ		Т	7	É	≥
2			#	3	C	\mathbf{S}	Ψ	Σ	Δ	Y	μ	İ	F	1	ή	≤
4	•		\$	4	D	\mathbf{T}	Δ	\mathbf{T}	E	Φ	V	Ä		⊢	ï	ſ
5	•	S	×	5	E	Ū	Ε	θ	\mathbf{Z}	X	ξ	4	+	F	ί	j
6	•		δĸ	6	F	V	Ф	Ω	Н	Ψ	0	1	F		Ó	÷
7			1	7	G	W	Γ	W	Θ	Ω	ΙT	1	ŧ	#	ΰ	≈
8			(8	Н	Х	Н	Х	1	α	ρ	7	L	+	ΰ	٥
9)	9	Ι	Y	Ι	Y	K	β	σ	٦Ì	F	J	ώ	٠
A			*	:	J	\mathbf{Z}	Ξ	\mathbf{z}	Λ	γ	ς	i	Ţ	ŗ-	Ω	
В			+	;	K	l	K	ĺ	M	δ	τ	ᆌ	Ţ		£	ν
С			,	ų,	L	Λ	Λ	1	N	ε	υ	7	ŀ	Ξ	00	r:
D			-	=	М]	Μ	}	Ξ	ζ	φ	لب	=	Г	Ø	2
E				>	N	^	Ñ	~	Ó	η	χ	Ⅎ	ήř	ì	ί	•
F			1	?	0		0		П	θ	Ψ	7			ΰ	

HBR-OLD

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	E	F
0 1 2 3 4 5 6 7 8 9 A B C D E	• •	S	2 ! " # \$ % & · () * + ,	0 1 2 3 4 5 6 7 8 9 : ; < = >	@ A B C D E F G H I J K L M N	P Q R S T U V W X Y Z [\ l î	מ מלכרי טחזו הדגבא	רקצץפרעסנ	8 Cüéâäàå ÇêëèïîìÄ	9 ÉæÆôöòûûŸÖÜÇ£¥R	A áíóúñÑæo: ¿ [Talai w				E αβΓπΣομτΦθΩδ⊗ΦΕ	± ≥ ≤
F			/	?	0	_	1		Å	f	»	٦	<u>¥</u>		u	

E-12 User's Manual

PAGE 862 (Code Page 862)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	E	F
0 1 2 3 4 5 6 7 8 9 A B	•	\$	2 ! " # \$ % & - () * + .	0 1 2 3 4 5 6 7 8 9 : ; <	@ABCDEFGHIJKL	P Q R S T U V W X Y Z I \	abcdefghijkl	Pqrstuvwxyz*	8 אבריטחזוהדגבא	9 סתשרקצאפרעסנ	A áíóúñÑao¿ C T № 14	B			Ε αβΓηΣομτΦθΩδο	± ≥ ≤ ∫ ÷ ≈ • · √ n
D E F			- ;	= > ?	M N O		m n o	} ~	ם מ ן	¥ R f	* *	_ F	<u> </u>	5	Ø E	2

GREEK 11

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	Е	F
0 1 2 3 4 5 6 7 8 9 A B C D E F	•	§	!"#\$%&!()*+,/	0 1 2 3 4 5 6 7 8 9 ; ; < = > ?	@ABCDEFGHIJKLMNO	P Q R S T U V W X Y Z [АВ Ф С Н I Е К Л М N O	П ТР Е Т Ө О Т Х Ү Z — — — — — — — — — — — — — — — — — —								

HBR-DEC

L/H	0	1	2	3	4	5	6	7	8	9	A	В	C	D	E	F
0 1 2 3 4 5 6 7 8 9 A B C D E	•	S	1"#5%&*()*+,/	0123456789:;<=>?	@ A B C D E F G H I J K L M N O	P Q R S T U V W X Y Z [\] ^	abcdefghijklmno	PqrstuvwxYz{	Çü é â ä à â s è ë e i î î Ä Å	É æ Æ ô ö ò û û Ÿ Ö Ü ¢ £ ¥ R f	áíóúñѪº¿┌┐¹ས¹⁴ⅰ«»				ו מם לכר יטחזות דגבא	ת שרקצץפּףעסנ √י² ■

ISO-TUK

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	E	F
0				0	@	P	`	р				0	A	Ğ	à	ğ
1			1	1	Α	Q	а	q			i	±	Á	Ñ	á	ñ
2			н	2	В	R	b	r			¢	2	Â	Ò	â	ó
1 2 3			#	3	С	S	C	s			£	3	Ã	Ó	ã	ó
4	+		\$	4	D	T	d	t			¤	-	Ä	Ô	ä	ô
4 5	÷	§	%	5	E	Ü	e	u			¥	μ	Å	Õ	å	õ
6	•		δ	6	F	V	f	v			;	¶	Æ	Ö	æ	ö
7			,	7	G	W	g	W			9	٠	Ç	×	ç	÷
6 7 8			(8	H	X	h	х			••		È	Ø	ç	Ø
9)	9	Ι	Y	i	У			0	ĩ	É	Ù	é	ù
A			*	:	J	\mathbf{z}	j	z			<u>a</u>	ō	Ê	Ú	ê	ú
В			+	;	K	[k	{			*	>>	Ë	Û	ë	û
C			,	<	L	Λ	1	1			7	14	Ì	Ü	ì	ü
D			_	=	М]	m	}			-		Í	İ	í	1
E				\rightarrow	Ν	^	n	~			ூ	1234	Î	ş	î	ş
F			/	?	0	_	0				_	Š	Ϊ	ß	ï	Ÿ

RUSCII

L/H	0	1	2	3	4	5	6	7	8	9	A	В	C	D	E	F
0				0	e.	Р	~	р	A	P	а	:::	L	1	p	Ë
1			!	1	Α	Q	a	q	Б	С	б		Τ	Ŧ	C	ë
2			rı	2	В	R	b	r	В	Т	В	iii Mu	т	1 1	Т	Γ
2 3			#	3	C	S	С	s	Г	У	г	enun	ŀ	I	у	Ľ
4	+		\$	4	D	Т	d	t	Д	Φ	д	4		F	Ф	€
4 5		S	ģ	5	E	U	e	u	E	X	е	4	+	F	x	€
6	•		&	6	F	V	f	v	ж	Ц	x	4	-	I T	ц	I
7			r	7	G	W	g	W	3	Ч	3	7	ŀ	#	ч	i
8			(8	Н	X	h	Х	И	Ш	И	Ä	L	¥	Ш	Ï
9 .)	9	Ι	Y	i	у	Й	Щ	й	4	F)	Щ	ï
A			*	:	J	Z	j	z	K	Ъ	K	1	<u>[</u>	r	ъ	•
В			+	;	K	[k	{	Л	Ы	1I	╗	┰	È	ы	√
C			,	<	L	\	1	- }	М	ь	м	7)	Ţ	=	ь	J≱
D			_	==	М]	m	}	H	Э	H	ш	#	ľ	э	Ħ
E				>	N	^	n	~	O	Ю	0	ⅎ	<u>†</u>	ነ	Ю	•
F			1	?	0	_	0		П	Я	п	٦	<u>=</u>	1	я	

LATIN-9

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	Е	F
0				0	@	P	`	р				0	À	Ð	à	ð
1 1			1	1	Α	Q	a	q			î	±	Á	Ñ	á	ñ
2			11	2	В	R	b	r			¢	2	Ā	Ò	â	ò
3	۳		#	3	С	S	С	ន			£	3	Ā	Ó	ã	ó
4	•		\$	4	D	Т	d	t			€	Ž	Ä	٥	ä	ô
5		§	8	5	E	U	e	u			¥	μ	A	Ò	å	ð
6	•	_	&	6	F	V	f	v			Š	\P	Æ	Ö	æ	Ö
7			1	7	G	W	g	W			S	٠	Ç	×	ç	÷
8			(8	Н	X	h	х			š	ž	È	Ø	è	Ø
9)	9	I	Y	i	Y			0	1	É	Ù	é	ù
A			*	:	J	Z	j	z			₫	Q	Ê	Ú	ê	ú
В			+	;	K	[k	{			«	>>	Ë	Û	ë	û
C			,	<	L	\	1	1			\neg	Œ	Ì	Ü	ì	ü
D			_	=	М	ĵ	m	}			-	œ	Í	Ý	í	Ý
E				>	N	^	n	~			•	Ÿ	Î	Þ	î	þ
F			/	?	О	_	0				_	ċ	Ï	ß	ï	Ÿ

NATIONAL CHARACTER SETS (DPL24C PLUS AND IBM XL24E EMULATION) The following character sets differ from those of Code Page 437 (USA), available in the DPL24C PLUS command set and the IBM Proprinter XL24E emulation.

FRENCH (French)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	C	D	E	F
0				0	à	P	_	р	Ç	É	á	H	L	11	CL.	Ξ
1			1	1	Α	Q	а	ģ	ü	æ	1		\bot	Ŧ	β	±
2			tI	2	В	Ř	b	ř	é	Æ	ó	ů.	_	1	Γ	Σ
3			£	3	С	S	C	s	â	ô	ú	11/26	ŀ	I	π	٤
1 2 3 4 5	+		\$	4	D	Т	d	t	ä	ö	ñ	4	1	Ŀ	Σ	r
5		S	કું	5	E	U	е	u	à	ò	Ñ	4	+	f	σ	
6		_	£.	6	F	V	f	v	å	û	3	4	ŧ	-	μ	+
7			•	7	G	W	g	W	Q	ù	Q	-	4	1	τ	*
8			(8	H	X	h	x	ê	Ÿ	Ş	7	<u>[</u>	+	Φ	•
9)	9	Ι	Y	i	¥	ë	õ	_	4	ĪĒ	1	Ð	•
A			*	1	J	Z	j	ž	è	Ü	_	1	1	г	Ω	
В			+	;	K	٥	Ŕ	é	ï	¢	4	-	TF		δ	√
C				ż	L	Q	1	ù	î.	£	1/4	Ĵ	I	=	∞	n
D			_	=	М	Ś	m	è	ì	¥	ī	ш	lì	Г	Ø	2
E !				>	N	~	n	••	Ä	R	•	ⅎ	ţ	ጎ	ε	•
F			1	?	0	_	o		A	f	>>	٦	4	d	U	

ITALIAN (Italian)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	C	D	E	F
0				0	S	P	ù	р	Ç	É	á	:::	Ł	T	α	Ξ
1	1		Ţ	1	Α	Q	a	q	ü	æ	Ĺ	33	1	₹	β	±
2			*11	2	В	R	b	r	é	Æ	ó		т		r	≥
3			£	3	C	S	C	8	å	Ô	ú	7	-	I	Ħ	5
4	+		S	4	D	Т	d	Ł	ä	ö	ñ	4		F	Σ	ſ
1 2 3 4 5	•	S	*	5	E	U	е	u	à	ò	Ñ	=	+	F	Q	J
6			æ	6	F	V	f	v	å	û	a	1	=	_	μ	ŧ
7	ĺ		•	7	G	W	g	w	Ç	ù	Q		ţ	1	T	24
8			(8	H	X	ħ	x	ê	Ÿ	ż	1	Ĺ	#	ø	•
9)	9	Ι	Y	i	Y	ë	ö	_	1	F	J	0	•
A			*	:	J	Z	j	z	è	Ü	-		Ţ	r	Ω	٠
В	1		+	;	K	G	k	à	ĭ	¢	1/2		76		δ	✓
C			,	<	L	Ç	1	Ò	î.	£	1	1	Ī	=	00	n
D			-	=	М	é	m	è	ì	¥	Ì	Ji.		ſ	ø	2
E			•	>	N	^	n	ì	A	Æ	«	ⅎ	Ï	ì	€	
F			/	?	O	_	0		A	f	*	٦	_	4	U	

E-14 User's Manual

SPANISH (Spanish)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	E	F
0				0	5	P	~	р	Ç	É	á	111	Ł	ш	OŁ.	≣
1			1	1	A	Q	a	q	ü	æ	Ĺ	3	1	=	ß	±
2			71	2	В	R	b	ř	é	Æ	Ó		т	#	Γ	≥
3			£	3	С	S	c	8	å	å	ú	IRE	-	I	n	≤
4			Ş	4	D	T	đ	t	ä	ö	ñ	4		L	Σ	ſ
5		S	*	5	E	U	е	u	à	ò	Ñ	4	+	F	0	J
6	•		£.	6	F	V	f	v	å	û	а	4	F	F	μ	+
7			ı	7	G	W	g	W	Ç	ù	Q	-"	ţ	#	τ	*
8			(8	H	X	h	x	ē	Ÿ	ż	1	Ł	#	•	•
9)	9	I	Y	i.	Y	ĕ	ö	_	4	F	J	θ	•
A			*	:	J	\mathbf{z}	j	z	è	Ü	٦	1	Ţ	r	Ω	•
В			+	;	K	ï	k	o	ï	¢	į	j	Ŧ		Ĉ	√
C			r	<	L	Ñ	1	ñ	1	£	1	1	Ī	_	00	n
D			-	=	М	5	m	ç	ì	¥	Ĭ	ш		Г	ø	2
E				>	N	^	n	~	Ä	Æ	*	4	İ	1	E	
F			/	?	О	_	0		A	f	≫	٦	<u>t.</u>		U	

FINNISH (Finnish)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	E	F
0 1 2 3 4 5 6 7 8 9 A B C D E F	* * *	\$! # 賞 8 & ! () * + * - * /	0 1 2 3 4 5 6 7 8 9 : ; < = > ?	\$ABCDEFGHIJKLMNO	P Q R S T U V W X Y Z Ă Ö Ă Ü	é a b c d e f g h i j k l m n o	Pqrstuvwx yzaöaü	Çüé a a a a çê ë è î î î ă A	É E ROSSOLU YSUC E V R. f	AIOUNOBO CETELL **				αβΓπΣσμτ ‡ θΩδ∞φ∈∩	+ 2 5 + 2 0 0 1 1 1 1 1 1 1 1

DANISH1/NORWEGN (Danish1/Norwegian)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	В	F
0				0	É	P	 é	p	C	É	á	111	1.	_		Ξ
1			1	ì	A	Q	a	q	ü	æ	í	33	1	=	B	±
2			"	2	В	B	b	r	é	Æ	ó	***	_	1	r	_
2 3	_		44	3	C	S	C	8	â	ô	ú	噩			T	≤
3	•		#	_	_		-						Γ	F	Σ	ř
4	•	_	Ş	4	D	T	d		ä	ö	ñ	1	-		_	
5	•	S	æ	5	E	U	e	บ	à	ò	Ň	1	†	Γ	ø	,
6	•		&	6	F	V	f	V	å	û	a	1	F	T	μ	+
7			•	7	G	W	g	W	ģ	ù	Õ	ï	Ļ	*	τ	**
8			(В	Н	X	h	х	ê	ÿ	ċ	i	Ŀ	Ŧ	Φ	۰
9)	9	Ι	Y	i	y	ë	Ő	_	4	1	_	θ	•
A			*	:	J	Z	ń	z	è	Ü	7	1	Ŧ	r	Ω	•
В			+	;	K	Æ	k	æ	ï	¢	ž	i	īř	Ė	δ	✓
c				ż	L	Ø	1	ø	î	£	1/4]	F	_	∞	n
Ď			_	=	M	A	m	ā	ì	¥	ī	J	<u></u>	ſ	ø	2
E				>	N	Ü	n	ü	Ä	R	«	╛	Î	1	Ε	
F			7	?	o	_	0		A	f	>>	_	1	d	n	
*				-		_	_			•		- 1			-	

DANISH2 (Danish2)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	E	F
0				0	0	P	-	р	Ç	É	á	÷	L	1	OL.	Ξ
			!	1	Α	Q	a	q	ü	æ	í	204	1	₹	β	±
2	ĺ		"	2	В	R	b	r	é	Æ	Ó		т	İ	Г	2
1 2 3			#	3	C	\mathbf{s}	C	8	â	Ô	ú	Ŧ	ŀ	R.	π	≤
4	+		Ş	4	D	\mathbf{T}	d	t	ä	ö	ñ	\mathbf{H}	<u>'</u>	F	Σ	ſ
4 5		S	%	5	Е	U	e	u	à	à	Ñ	╡	+	F	σ	j
6	•		æ	6	F	V	f	v	å	û	₫	1	F	Ì	μ	ŧ
7			•	7	G	W	g	W	ç	ù	Õ	Ï	ł	+	τ	22
8			(8	H	X	h	x	ê	Ÿ	ō	ή̈́	F	ŧ	ģ	۰
9)	9	I	Y	i	Y	ë	Ö	_	1	<u>I</u>	J	0	•
A			*	:	J	Z,	j	Z	è	ΰ	7	Ì	<u></u>	Г	Ω	•
В	Į		+	;	K	[k	ł	ï	Ø	1		Ŧ		δ	√
c			,	<	L	Α.	1	;	î	£	1		Ī	_	00	n
D			-	=	М	1	m	}	ì	ø	ī	•		E	ø	2
E	Ī			>	N	^	n	~	Ä	R.	≪	ⅎ	廿	1	E	-
F			1	?	0	_	O		Å	f	*	٦	-		A	

NATIONAL CHARACTER SETS (ESC/P2 EMULATION)

The following character sets differ from the graphics character sets available in the Epson ESC/P2 emulation.

DANISH1 (Danish1)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	C	D	Е	F
0				0	ē	P	_	p	Ç	É	á	11:	L	1	O.	Ξ
1			1	1	Α	Q	а	q	ü	æ	í	*	T	Ŧ	β	±
2			17	2	В	R	b	ŗ	é	Æ	ó		т	#	Γ	2
3			#	3	C	S	C	8	â	ô	ú	Ī	-	I	π	≤
4			Ş	4	D	T	d	t	ä	ö	ñ	1	_	F	Σ	- (
2 3 4 5		S	ģ	5	E	U	e	u	à	ó	Ñ	4	+	F	σ	J
6		_	&	6	F	V	f	v	å	ũ	a	Á	F	I I	μ	ŧ
7			•	7	G	W	g	W	Ç	ù	Q	П ~#	ŀ	#	τ	Rs.
8			(8	H	Х	ĥ	x	ē	ÿ	ż	Ť	L	#	Φ	•
9	ĺ)	9	I	Y	i	y	ë	ö	_	4	ΙĖ		θ	•
A			*	:	J	Z	j	z	è	Ü	_	ı	1	r	Ω	•
В			+	;	K	Æ	Ř	æ	ĭ	¢	1 2	i	76	Ė	δ	√
c			,	<	\mathbf{L}	Ø	1	Ø	î	£	1/2	الِ		Ξ	جد	п
D	Ì		_	=	М	A	m	å	1	¥	Ť	Ш	<u>"</u>	ſ	ø	2
E	ì			>	N	^	n	~	Ä	R	*	긞	1	1	€	•
F			1	?	0	_	O		Ä	f	*	٦	<u> 1</u>	4	U	

SPANSH1 (Spanish1)

L/H	0	1	2	3	4	5	6	7	8	9	Α	В	С	D	E	F
0				0	6	P	,	р	ç	É	á	:::	L	ш	O.	<u>=</u>
1			1	1	A	Q	a	q	ü	æ	í	() ()	1	Ŧ	β	±
2			17	2	В	R	b	r	é	Æ	Ó		т	T.	Γ	2
1 2 3			R	3	C	S	C	B	â	Ô	ú	T	-		Ħ	≤
4			S	4	D	Т	d	t.	ä	ö	ň	4		F	Σ	ſ
4 5 6 7 8		S	ş	5	E	U	е	u	à	ò	Ñ	4	+	Γ	q	J
6			6.	6	F	V	£	v	å	û	a	4	F	L.	μ	+
7			٠	7	G	W	g	W	Ç	ù	Q	ų.	ŧ	#	τ	2
8			(8	H	X	ħ	х	ě	¥	ė	쀠	Ł	#	Φ	
9)	9	I	Y	i	У	ë	ö	_	4	ſF	Ţ	Ð	•
A			*	:	J	\mathbf{z}	j	z	è	Ü	-1	ŧ	1	r	Ω	•
В			+	;	K	ţ	k		1	¢	1/2	المجدة ألمجدنا	Ή̈́	Ė	δ	√
C	ĺ		,	<	L	Ñ	1	ñ	î	£	1/4	ŀ	Ī	Ξ	20	n
D			-	=	М	ż	m	1	ì	¥	i		#	r	ø	2
E				>	N	^	n	~	Ä	Æ	•	⊒	<u>†</u>	1	Ε	
F			1	?	0	_	0		Å	f	*	7	4	#	U	

ITALIAN (Italian)

D :	E F
	<u>.</u>
(ou ≡ β±
	Γ ≥ π ≤
	ן מ
ı	σj μŧ
+	τ ≈
	6 °
	Ω .
•	ô√ w n
	øºº €■
4	ก

SPANSH2 (Spanish2)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	c	D	E	F
0				0	á	P	`	р	Ç	Ė	á	111	L	ш.	Ot.	<u></u>
1 1			1	1	A	Q	a	q.	ü	82	í	3	\bot	Ŧ	β	±
2			"	2	В	R	b	ř	é	R	Ó	Ĥ	-	1	Γ	Σ
3			#	3	C	S	С	8	â	Ô	ú	ikin	ŀ	I	17	\$
4			\$	4	D	T	d	t	ä	ö	ñ	4		╘	Σ	1
5		S	8	5	\mathbf{E}	U	e	u	à	Ò	Ñ	4	+	*	ø	j
6			&	6	F	v	£	v	å	û	a	4	-	'n	μ	+
7			1	7	G	W	g	W	Ç	ù	Q	ï	1	1	τ	æ
8			(8	H	Х	ĥ	x	ė	ÿ	ż	3	L	#	4	•
9)	9	Ι	Y	i	У	ë	Ö	~	4	F	j	θ	•
A			*	ı	J	Z	Í	Z	è	Ü	7	ı	I	г	Ω	•
B			+	;	K	1	Ř	í	1	¢	1	j	٩r	È	6	√
C			,	<	L	Ñ	1	ñ	î	£	Ī	J	I	Ξ	po	n
D			_	*	М	ż	m	Ó	ì	¥	Ť	ш	#	r	ø	2
E				>	N	é	n	ú	Ä	R	*	=	#	ን	Ε	
F			/	?	0	_	0		A	f	*	٦	1	4	U	

E-16 User's Manual

JAPAN (Japanese)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	E	F
0				0	6	P	~	р	Ç	É	á	:::	L	1	O.	Ξ
1			1	1	A	Q	a	q	ü	æ	í	200 900	1.	₹	β	±
2			п	2	В	R	b	r	é	Æ	Ó		т	#	Γ	2
3			#	3	C	S	C	s	â	ô	ú	T	ŀ	I	П	S
4			\$	4	D	T	đ	t	ä	Ö	ñ	Ⅎ	<u>-</u>	F	Σ	ſ
5		S	ૠ	5	Е	U	е	u	à	ò	Ñ	4	+	F	ø	J
6			£	6	F	V	£	v	å	û	₫	4	F	Ī	μ	+
7			٠	7	G	W	g	W	Ç	ù	Q	Ä	Ì	#	τ	2
8			(8	H	X	ĥ	x	ê	¥	ż	ä	L	#	Φ	•
9)	9	I	Y	i	У	ë	ö	_	4	F	1	θ	•
A			*	:	J	Z	j	z	è	Ü	_	1	1	г	Ω	
В			+	;	K	E	k	ŧ	ï	¢	1 2	j	ੰ		δ	√
c			,	<	L	¥	1	ł	î	£	ł	J	Ī	Ξ	00	P
D			_	=	M]	m	ł	ì	¥	i	Ш	=	r	ø	2
E				>	Ν	^	n	~	Ä	R	≪	4	Ť	1	€	=
F			/	?	0	_	0		Å	f	*	٦	<u>+</u>	4	U	

LATIN A (Latin American)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	E	F
0 1 2 3 4 5 6 7 8 9 A B C D E		S	1" #\$%&- () * +	0123456789:;<=>	4 ABCDEFGHIJKLMN	PQRSTUVWXYZIO	uabcdef ghijklmn	Paratuvwxy	· Cuéasaa ceeeiila	7 由田本のおらななながのひかをYR	A A A A A A A A A A A A A A A A A A A				CAPT TEOUT POSS SE	= ± 2 5 - + * = • • \ n 2
F			1	?	О	_	O		A	f	*	٦	£		Ω	

NORWEGN (Norwegian)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	Е	F
0				0	É	P	ė	P	Ç	É	á	1	L	ш	a	Ξ
1			1	1	A	Q	a	q	ü	æ	1	33	Τ	₹	β	±
2			EF	2	В	R	b	r	é	R	ó		т	1	Γ	2
1 2 3 4 5 6 7			#	3	C	S	c	8	â	ô	ú		Ļ		11	≤
4			ÿ	4	D	T	đ	t	ä	ö	ñ	4		F	Σ	ſ
5		S	%	5	E	Ū	e	u	à	ò	Ñ	4	+	F	ā	J
6		٥	&	6	F	v	f	v	å	û	ą.	4	F	1	ŭ	+
7			ï	7	Ğ	W	g	w	ç	ù	Q	-N	1	1	τ	*
В			1	8	Н	X	h	×	ê	ÿ	ž	Ţ	L	1	ė	•
9			ì	9	Ι	Y	i		ĕ	ö	_	4	-]	ė	
A			·		Ĵ	ž		Y	è	ΰ	_	1	I	_	ũ	-
				:	_		j	z			7	1	_	I	δ	,
В			+	į	K	Æ	ķ	æ	ĭ	¢	1/2	1	T		-	y n
c			F	ζ.	L	Ø	1	Ø	i	£	1	=1	Ī		00	
D			-	=	M	A	W	å	ì	¥	ī	1	=	£	ø	2
E			•	>	N	Ü	n	ü	Ä	Æ	4	=	廿	1	€	-
F]			1	?	0	_	0		Å	f	≫	٦	<u>.</u>		N	

FRENCH (French)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	c	D	Е	F
0 1 2 3		•	! # \$	0 1 2 3 4	à A B C	P Q R S	` a b c d	P q r s t	Ç ü é â ä	É æ Æ Å	á í ó ú ñ		t I	T I	α β Γ π	± ± ≤
1 2 3 4 5 6 7 8		S	38 & . (5 6 7 8	EFG	U V W	e f g h	u v w	à å ç ê	ò ù ¥	Ñ a o ¿		ţ	- F I I I I I I I I I I	σ γ τ	; ÷ ≈ •
9 A B C) * +	9 : ; <	I J K L	Y Z o	i j k l	y z é ù	ë è ï	Ö Ü Ç E	1		I		θ Ω δ	• √ n
D E F			<u>'</u> -	· - > ?	M N O	\$ ^ -	m n o	è	ì X A	¥ R f	₹ *] =	<u> </u>	5	ø E N	2

DANISH2 (Danish2)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	E	F
0				0	É	P	é	р	ç	É	á	:::	L.	ш	Q.	= :
1			1	1	A	Q	a	ã	ü	æ	1	33	1	=	β	± !
2			11	2	В	Ŕ	b	r	é	Æ	ó		-	T	Γ	≥ :
2			#	3	C	S	C	В	â	ô	ú	ne:	+	L	π	≤ ′
4 5			s	4	Ð	Т	ď	t	ä	ö	ñ	4		Ŀ	Σ	ſ
5		S	9,	5	Е	U	e	u	à	ò	Ñ	╡	+	F	ø	J
6			€.	6	F	V	f.	٧	å	û	a	4	F	ı.	μ	+
7			,	7	G	W	g	w	Ç	ù	Q	7	ŀ	#	τ	æ
8			(8	H	X	ĥ	x	ě	Ÿ	ż	á	L	+	Φ	•
9)	9	I	¥	i	Y	ë	ö	_	4	ſĒ	J	θ	•
A			*	:	J	Z	j	z	è	Ü	٦	1	Ŧ	г	Ω	-
В			+	;	K	Æ	Ř	æ	ï	¢	į	4	ī		δ	√
c			,	<	L	Ø	1	ø	î	£	1 d		ŀ	Ξ	00	n
l a			_	=	М	Á	m	å	ì	¥	ī	<u>¥</u>	<u>"</u>	r	Ø	2
E	1			>	N	Ü	n	u	Ä	R	*	크	#	1	E	-
F			1	?	0	_	0		Å	f	*	٦	ㅗ		N	

KOREA

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	E	F
0				0	9	P	1	p	Ç	É	á	:::	L	Д.	α	=
1 1			ţ	1	Α	Q	а	q	ü	æ	í	300	1	Ŧ	β	±
2			10	2	В	Ŕ	b	ŕ	é	Æ	Ó		~	<u> </u>	Γ	≥
1 2 3			#	3	С	S	С	S	â	ô	ú	298	F	\mathbb{I}	π	≤
			\$	4	D	Т	d	t	ä	ö	ñ	4	_	Ŀ	Σ	ſ
4 5		S	%	5	E	U	e	u	à	ò	Ñ	=	+	F	σ	}
6		_	&	6	F	V	f	v	å	û	₫	4	=	Ī	μ	÷
7			•	7	G	W	g	W	ç	ù	Q	ï	1	+	τ	*
8			(8	Н	X	ĥ	х	ê	ÿ	ż	ä	L	#	Φ	•
9)	9	Ι	Y	i	У	ë	ö	,- -	4	F	J	θ	•
A	İ		*	:	J	Z	j	z	è	Ü	_		1	г	Ω	•
В	ĺ		+	;	K	[Ř	{	ï	¢	1/2	٦ ٦	ŦΕ		δ	✓
С			,	ί	\mathbf{L}	W	1	1	î	£	1/2	ĵ	F	Ξ	00	л
D			_	=	М]	m	}	ì	¥	ī	Ш	_	r	Ø	2
E				>	N	^	n	~	Ä	R.	«	ⅎ	↨	ጎ	€	
F			1	?	0		0		Â	f	»	٦	#	4	ก	

LEGAL

L/H	0	1	2	3	4	5	6	7	8	9	A	В	С	D	Е	F
0				0	S	P	,	р	Ç	É	á		L	11.	α	Ξ
1 '			ļ	1	Α	Q	а	q	ü	æ	Ĺ	88	ㅗ	₹	β	±
2			**	2	В	R	b	r	é	Æ	ó		T	π̈́	Γ	2
1 2 3			#	3	С	S	С	S	â	ô	ú	ï	-	Ł	π	2
			\$	4	D	T	d	t	ä	ö	ñ	+	_	F	Σ	ſ
4 5		S	%	5	E	U	e	u	à	ò	Ñ	Ξ	+	F	σ	j
6		_	&	6	F	V	£	ν	å	û	<u>a</u>	-1	F	ı.	μ	÷
7			1	7	G	W	g	W	ç	ù	Ō	ή	ŀ	#	τ	≈
8			(8	Н	Х	ĥ	х	ê	ÿ	خ	ä	L	∔	Φ	۰
9)	9	1	Y	i	Y	ë	ö	_	╡	Ţ	J	θ	٠
A			*	:	J	Z	j	z	è	Ü	\neg	H	北	Г	Ω	٠
В	ĺ		+	;	K	۰	k	0	ï	¢	1 2	j	Ŧ		δ	√
C			,	<	\mathbf{L}	•	1	Ð	î	£	1/2]	ŀ	Ξ	\$\$	n
D			-	=	Μ	17	m	ŧ	ì	¥	i	Ш	≝	Г	Ø	2
E				>	N	¶	n	TH	Ä	R	«	╛	₫	٦	E	#
F			1	?	0	_	0		Å	f	*	٦	<u>¥</u>	4	U	

E-18 User's Manual

WCP1250 (Windows – 1250)

L/H	0	1	2	3	4	5	6	7	8	9	A	В	C	D	E	F
0 1 2 3 4 5 6 7 8	•	1 §	2 ! # \$% & • (3 0 1 2 3 4 5 6 7 8	4 @ A B C D E F G H	P Q R S T U V W X	6 \ abcdefgh	7 Parstuvwx	8 € , , , , , , , , , , , , , , , , , ,	9	A Ł ¤ A · · S ·	e ± . Ł´µ¶·	C ŔÁÃĂÄĹĊÇČ	Đ Ń Ň Ó Ô Ő Ö × Ř	É Á Â Ă Ä Í Ć Ç Č	đ ń ň ó ô ő ö ÷ ř
A B C D E F			()*+,/	9:;<=>?	J K L M N	Y Z [\	i j k l m n	у г е е е	% Š 〈 S T Z Z	™ š > ś t ż ź	© 53 ≪ T - ® ·Z	a s s r r ż	ÉĘĖÉÍÎĎ	Č Ú Ű Ü Ý Ţß	é ę ë ě í í ď	ů ú ű ů ţ ţ

WCP1251 (Windows – 1251)

L/H	0	1	2	3	4	5	6	7	8	9	Α	В	С	D	E	F
0				0	@	P	,	q	Ъ	ħ		.0	A	P	а	p
1			1	1	Α	Q	a	q	Γ̈́	í	ў	±	Б	С	б	C
2			**	2	В	Ŕ	b	r	,	,	ÿ	Ι	В	Т	в	Т
1 2 3 4 5			#	3	С	S	С	s	ŕ	**	J	i	Γ	у	r	y
4	+		\$	4	D	Т	d	t	π	n	¤	ľ	Д	Φ	д	Ф
5	•	S	%	5	E	U	е	u	•••	•	Γ	μ	Ε	Х	е	x
6	•		&	6	F	V	f	v	Ť	-	ŀ	¶	Ж	Ц	ж	ц
7			•	7	G	W	g	W	‡	-	S	٠	3	Ч	3	ч
8			(8	H	X	h	X	€		Ë	ë	И	Ш	И	ш
9)	9	Ι	Y	i	У	%	TH	©	№	Й	Щ	й	Щ
A			*	:	J	\mathbf{z}	j	Z	Љ	љ	ϵ	ϵ	K	Ъ	ĸ	ь
В			+	;	K	ſ	k	{	<	>	«	≫	Л	Ы	Л	ы
C			,	<	L	1	1	-	Ь	њ	\neg	j	М	ь	M	ъ
D		·	-	=	М]	m	}	Ŕ	ĸ	_	S	H	Э	H	Э
E			•	>	N	^	n	~	Ъ	ħ	•	S	0	Ю	0	Ю
F			/	?	0		0		Ц	Ħ	Ϊ	ï	П	Я	п	Я
1 1	l															

WCP1252 (Windows – 1252)

L/H	0	1	2	3	4	5	6	7	8	9	Α	В	С	D	E	F
0				0	@	p	•	р	€			.0	À	Đ	à	ð
1 1			1	1	Α	Q	a	q		٦	1	±	Á	Ñ	á	ñ
2			tı	2	В	Ŕ	b	r	,	,	¢	2	Â	Ò	â	ò
0 1 2 3	•		#	3	С	S	С	s	f	77	£	3	Ã	Ó	ã	ó
4 5 6 7 8	+		\$	4	D	T	d	t	n	Ħ	¤	_	Ä	ô	ä	ô
5	÷	S	%	5	E	U	е	u	***	٠	¥	μ	Å	Õ	å	õ
6	•		&	6	F	V	f	v	Ť	-	1	\P	Æ	Ö	æ	Ö
7			•	7	G	W	g	W	ţ	-	S	•	Ç	×	ç	÷
			(8	H	X	h	х		~	••	٠.	È	Ø	è	ø
9 A)	9	I	Y	i	У	%	ти	0	ì	É	Ù	é	ù
A			*	:	J	\mathbf{z}	j	z	Š	š	<u>a</u>	ō	Ê	Ú	ê	ú
В			+	;	K	[k	{	<	>	«	>>	Ë	Û	ë	û
С			,	<	L	\	1	1	Œ	œ	7	4	Ì	Ü	ì	ü
C D		•	-	=	М]	m	}			-		Í	Ý	í	Ý
E				>	N	^	n	~	Ž	ž	® —	1 N 1 1 N	Î	Þ	î	þ
F			/	?	0		0			Ÿ	_	خ	Ϊ	ß	ï	ÿ

NATIONAL CHARACTER SETS AND SUPPORTED RESIDENT FONTS (ALL EMULATIONS) In all emulations, this printer supports 52 national character sets for characters and symbols specific to different languages. Some national character sets, however, do not have some characters and symbols and may not be usable, depending on resident fonts. The following tables show which of the resident fonts are supported for each national character set:

Resident	font	Courier 10	Elite 12	Compress	Draft	Bold PS	Pica 10	Courier s	Timeless **	Nimbus	Corresp	OCR-B	OCR-A
National character set	Name in setup menu	10		SS				Courier scalable **	\$ **	Vimbus Sans **	Correspondence		
USA *	USA	V											
United Kingdom	UK	1	$\sqrt{}$	$\sqrt{}$									
German	GERMAN	1	$\sqrt{}$	$\sqrt{}$									
Swedish	SWEDISH	1	$\sqrt{}$	$\sqrt{}$									
ISO 8859-1	ISO8859	V	$\sqrt{}$	$\sqrt{}$									
ECMA94	ECMA94	V	$\sqrt{}$	$\sqrt{}$									
Code Page 437*	PAGE437	1	$\sqrt{}$	$\sqrt{}$									$\sqrt{}$
Code Page 850	PAGE850	1	$\sqrt{}$	$\sqrt{}$									
Code Page 852	PAGE852	1	$\sqrt{}$	$\sqrt{}$									
Code two-pass	PAGE852-T	1	$\sqrt{}$	$\sqrt{}$									
Code Page 855	PAGE855	1	$\sqrt{}$	$\sqrt{}$									
Code Page 860	PAGE860	V		$\sqrt{}$									
Code Page 863	PAGE863	1		$\sqrt{}$						\checkmark			
Code Page 865	PAGE865	1		$\sqrt{}$						\checkmark			
Code Page 866	PAGE866	√	V	$\sqrt{}$					V				

(Continued on the next page)

- * USA is the same as Code Page 437.
- ** Upright, italic, and bold available

√: Supported

E-20 User's Manual

Resident	font	Courier 10	Elite 12	Compress	Draft	Bold PS	Pica 10	Courier s	Timeless **	Nimbus	Corresp	OCR-B	OCR-A
National character set	Name in setup menu	10		SS				Courier scalable **	**	Nimbus Sans **	Correspondence		
Hungarian	HUNGARY	V			V						√		
Hungarian two- pass	HUNG-T	√				\checkmark							
Slovenian	SLOV	√		$\sqrt{}$									
Slovenian two- pass	SLOV-T	√		$\sqrt{}$	\checkmark	\checkmark							
Polish	POLISH	√		$\sqrt{}$									
Polish two-pass	POLISH-T	V	$\sqrt{}$	$\sqrt{}$									
Mazowian	MAZOWIA	V	$\sqrt{}$	$\sqrt{}$									
Mazowian two- pass	MAZOW- T	√			\checkmark	\checkmark							
Latin 2	LATIN2	V	$\sqrt{}$	$\sqrt{}$									
Latin 2 two-pass	LATIN2-T	V		$\sqrt{}$									
Kamenicky	KAMENIC	V											
Kamenicky two- pass	KAMEN-T	√			\checkmark	\checkmark							
Turkish	TURKY	√	$\sqrt{}$	$\sqrt{}$									
Turkish two-pass	TURKY-T	V		$\sqrt{}$									
Cyrillic	CYRILIC	V		$\sqrt{}$									
IBM 437	IBM437	√		$\sqrt{}$									
IBM 851	IBM851	√		$\sqrt{}$						\checkmark			
ELOT 928	ELOT928	√		$\sqrt{}$						\checkmark			
Code Page DHN	PG-DHN	√		$\sqrt{}$									
Latin Polish	LATIN-P	√		$\sqrt{}$									
ISO Latin	ISO-LTN	√											

(Continued on the next page)

** Upright, italic, and bold available \forall : Supported

Resident	font	Courier 10	Elite 12	Compress	Draft	Bold PS	Pica 10	Courier s	Timeless **	Nimbus	Corresp	OCR-B	OCR-A
National character set	Name in setup menu	10		SS				ourier scalable **	S **	limbus Sans **	orrespondence		
Lithuanian 1	LITHUA1	V			V								
Lithuanian 2	LITHUA2	V	$\sqrt{}$	$\sqrt{}$									
MIK	MIK	1	$\sqrt{}$	$\sqrt{}$									
Macedonian	MACEDON	V	$\sqrt{}$	$\sqrt{}$									
ABG	ABG	1	$\sqrt{}$	$\sqrt{}$									
ABY	ABY	V	$\sqrt{}$	$\sqrt{}$									
DEC Greek	DEC GR	V	$\sqrt{}$										
ELOT 927	ELOT 927	V	$\sqrt{}$										
GREEK 11	GREEK 11	V	$\sqrt{}$										
Code Page 862	PG 862	V	$\sqrt{}$										
Hebrew DEC	HBR-DEC	V	$\sqrt{}$										
Hebrew Old	HBR-OLD	V	$\sqrt{}$										
Code Page MAC	PG-MAC	V	$\sqrt{}$										
ISO Turkish	ISO-TUK	V	$\sqrt{}$	$\sqrt{}$									
RUSCII	RUSCII	V	$\sqrt{}$										
ISO8859-15	LATIN-9	V	$\sqrt{}$										
Windows Code Page 1250	WCP1250	1	√		\checkmark								
Windows Code Page 1251	WCP1251	√	$\sqrt{}$		\checkmark	$\sqrt{}$							
Windows Code Page 1252	WCP1252	√	√		\checkmark								

^{**} Upright, italic, and bold available $\sqrt{}$: Supported

E-22 User's Manual



RESIDENT FONTS

This appendix provides print samples of the printer's nineteen resident fonts.

COURIER 10 The 24-wire dot-matrix printer prints

quality characters and symbols using

a variety of sizes and fonts.

PRESTIGE ELITE 12 The 24-wire dot-matrix printer prints

quality characters and symbols using

a variety of sizes and fonts.

DRAFT 12 The 24-wire dot-matrix printer prints

quality characters and symbols using

a variety of sizes and fonts.

COMPRESSED The 24-wire dot-matrix printer prints

quality characters and symbols using

a variety of sizes and fonts.

PICA 10 The 24-wire dot-matrix printer prints

quality characters and symbols using

a variety of sizes and fonts.

CORRESPONDENCE 10 The 24-wire dot-matrix printer prints

quality characters and symbols using

a variety of sizes and fonts.

HIGH-SPEED DRAFT 12 The 24-wire dot-matrix printer prints

quality characters and symbols using

a variety of sizes and fonts.

BOLDFACE PS The 24-wire dot-matrix printer prints

quality characters and symbols using

a variety of sizes and fonts.

OCR-B 10 The 24-wire dot-matrix printer prints

quality characters and symbols using

a variety of sizes and fonts.

OCR-A 10 The 24-wire dot-matrix printer prints

quality characters and symbols using

a variety of sizes and fonts.

COURIER (SCALABLE)

Normal The 24-wire dot-matrix printer prints

quality characters and symbols using

a variety of sizes and fonts.

Bold The 24-wire dot-matrix printer prints quality characters and symbols using

a variety of sizes and fonts.

a variety of sizes and fonts.

Italic The 24-wire dot-matrix printer prints

quality characters and symbols using

a variety of sizes and fonts.

NIMBUS SANS ® (SCALABLE)

Normal The 24-wire dot-matrix printer prints

quality characters and symbols using

a variety of sizes and fonts.

Bold The 24-wire dot-matrix printer prints quality characters and symbols using

a variety of sizes and fonts.

Italic The 24-wire dot-matrix printer prints

quality characters and symbols using

a variety of sizes and fonts.

TIMELESS (SCALABLE)

Normal The 24-wire dot-matrix printer prints

quality characters and symbols using

a variety of sizes and fonts.

Bold The 24-wire dot-matrix printer prints

quality characters and symbols using

a variety of sizes and fonts.

Italic The 24-wire dot-matrix printer prints quality characters and symbols using

a variety of sizes and fonts.

F-2 User's Manual

INDEX

Α	Diagnostic functions
Adjustments	Download
left margin3-10, 3-12, 3-16, 5-18	DRAFT5-15, B-2
left print start position5-35	DRAF15-13, B-2
top-of-form3-22, 5-19, 5-32, 5-33	Е
paper thickness3-8	
AMOUNT5-49	EjectQR-2, 3-14
ATTRIB5-17	Emulation
	Envelope
В	Epson ESC/P24-5, 5-14, 5-62
Bidirectional printing 5-28, 5-56	F
Boldface1-1, 4-5, F-1	P. 1
BUFFERQR-2, 4-1, 5-28, B-1	Feeding paper
BUZZER5-28	form feed
	line feed
C	Font
Cables	Function 5-4
LAN1-3, 2-22, 8-1, A-1	Н
parallel interface2-21, 5-29	
serial interface2-21, 5-12, 5-29, 5-30	HEX-DUMP5-4, 5-54, 7-9
USB2-22, 5-29, D-11	
Centronics2-21, 5-29, D-1	
Character 5-15, 5-16, 5-20, E-1	IBM Proprinter XL24E2-23, 5-14, 5-62
Cleaning6-1	Interface
Continuous forms	Interface2-21, 5-27, D-1
loading 3-16, 3-19	L
placement3-15	
tearing off3-20	Label
unloading3-19	LAN interface2-23, 5-29, D-12
Control panelQR-1, 2-14, 3-2, 4-1, 6-8	LF/FF
Cut sheet feeder	Line feedQR-2, 3-3, 3-22, B-5
installing3-6, 8-1, A-1	Line spacing 5-18, 5-36, B-4
loading3-12	LIST5-4, 5-8
	LOADQR-2, 3-3
D	Loading3-9, 3-12, 3-16
Default	Lubrication 6-1
Demo pattern2-20	

M	S
Maintenance 6-1	Self-test
Margin 5-32	Serial interface2-21, 2-28, D-7
MenuQR-2, 2-26, 4-4, 5-4	Setup mode
Multipart paperB-8	Single sheet
	loading3-9
N	Single sheets
	ejecting3-14
Number of copies	Software
	SpecificationsB-1
0	Supplies
ONLINEQR-2, 3-3, 5-41	TI
Order number	Т
Order number	
Р	TEAR OFFQR-2, 3-3, 3-20
·	Testing printer
Page2-17, 2-27	offline2-16
PAPER OUT 4-6, 5-27, 7-6, 7-8	online2-27
Paper pathQR-2, 3-3, 3-5	Top margin5-19
PowerQR-2, 2-15, 7-6, B-1	
Print areaB-6	U
Print head6-6	Unidirectional printing5-28, B-2
Printer Driver	Unpacking
	USB interface
Q	USB interface2-22, 3-27, D-11
OHALITY 5 15 7 1	V
QUALITY	·
Quick ReferenceQR-1	V-ALMNT function5-56
R	Vertical character displacement
ĸ	
Removing printed pages 4-8	W
Replacing ribbon cartridge 6-3	WIDTH
Resume printingQR-2, 4-6	WIDTH5-24, B-1, B-2
Ribbon cartridge2-8, 6-1, A-1	
Ribbon subcassette	
RS-232C	

IN-2 User's Manual

FUJITSU OFFICES

Please send your comments on this manual or on Fujitsu products to the following addresses:

North American Contact:

FUJITSU CANADA INC.

6975 Creditview Road, Unit 1,

Mississauga,

Ontario L5N 8E9, CANADA Phone: (1-905) 286-9666 Fax: (1-905) 286-5977

European Contact:

FUJITSU EUROPE LTD.

Hayes Park Central, Hayes End Road,

Hayes,

Middlesex UB4 8FE, U.K. Phone:(44-20) 8573-4444 Fax:(44-20) 8573-2643

FUJITSU DEUTSCHLAND GmbH

Frankfurter Ring 211, 80807 München, Germany Phone:(49-89) 32-378-0 Fax:(49-89) 32-378-100

FUJITSU ITALIA S.p.A.

Via Nazario Sauro, 38

20099 Sesto S. Giovanni (MI), Italy

Phone: (39-02) 26294-1, Fax: (39-02) 26294-201

FUJITSU ESPAÑA, S.A.

Camino Cerro de los Gamos, 1-28224 Pozuelo de Alarcón, Madrid, Spain

Phone: (34-91)784-9000, Fax: (34-91)784-9266

Australian Contact:

FUJITSU AUSTRALIA LTD.

Fujitsu House 2 Julius Avenue North Ryde N.S.W. 2113, Australia Phone:(61-2) 9776-4555

Fax:(61-2) 9776-4556

Asian Contact:

FUJITSU HONG KONG LTD.

10F., Lincoln House, 979 King's Road, Taikoo

Place,

Island East, Hong Kong Phone:(852) 2827-5780 Fax:(852) 2827-4724

FUJITSU TAIWAN LTD.

19th FL., No. 39, 1 Sec. Chung Hwa Rd.,

Taipei, Taiwan R.O.C. Phone: (886-2) 2311-2255 Fax: (886-2) 2311-2277

FUJITSU SYSTEMS BUSINESS (THAILAND) LTD.

Exchange Tower, 22nd-23rd Fl, 388 Sukhumvit Road,

Kwaeng Klongtoey, Khet Klongtoey,

Bangkok 10110, Thailand Phone:(66-2)302-1500 Fax:(66-2)302-1555

FUJITSU ASIA PTE. LTD.

20 Science Park Road #03-01, Tele Tech Park II

Singapore 117674 Phone: (65)6512-7555 Fax: (65)6512-7502

FUJITSU PHILIPPINES, INC.

2nd Fl., United Life Bldg., A.Arnaiz,

Legaspi Village, Makati, Metro Manila, Philippines

Phone: (63-2) 812-4001 Fax: (63-2) 817-7576

FUJITSU (MALAYSIA) SDN. BHD.

Level 1 & 2, 3505, Jatan Teknokrat 5,

63000 Cyberjaya, Selangor Darul Ehsan, MALAYSIA

Tel:(60-3)8318-3700 Fax:(60-3)8318-8700

PT FUJITSU INDONESIA

Kyoei Prince Building 10th Floor. Jl. Jend. Sudirman Kav 3 - 4 Jakarta 10220, Indonesia

Phone: (62-21) 570-9330 Fax: (62-21) 573-5150

Manufacturer contact:

FUJITSU ISOTEC LIMITED

Printer Business Division

135, Higashinozaki, Hobara-machi, Date-shi, Fukushima

960-0695, JAPAN Phone: (81-24)574-2236, Fax: (81-24)574-2382

URL http://jp.fujitsu.com/group/fit/en/ Contact Email fit-gsm@cs.jp.fujitsu.com

FUJITSU